



### DN-16068 Motion Trigger Recording Setup Procedure:


1. From Video Viewer software, please go to “Remote Config”.

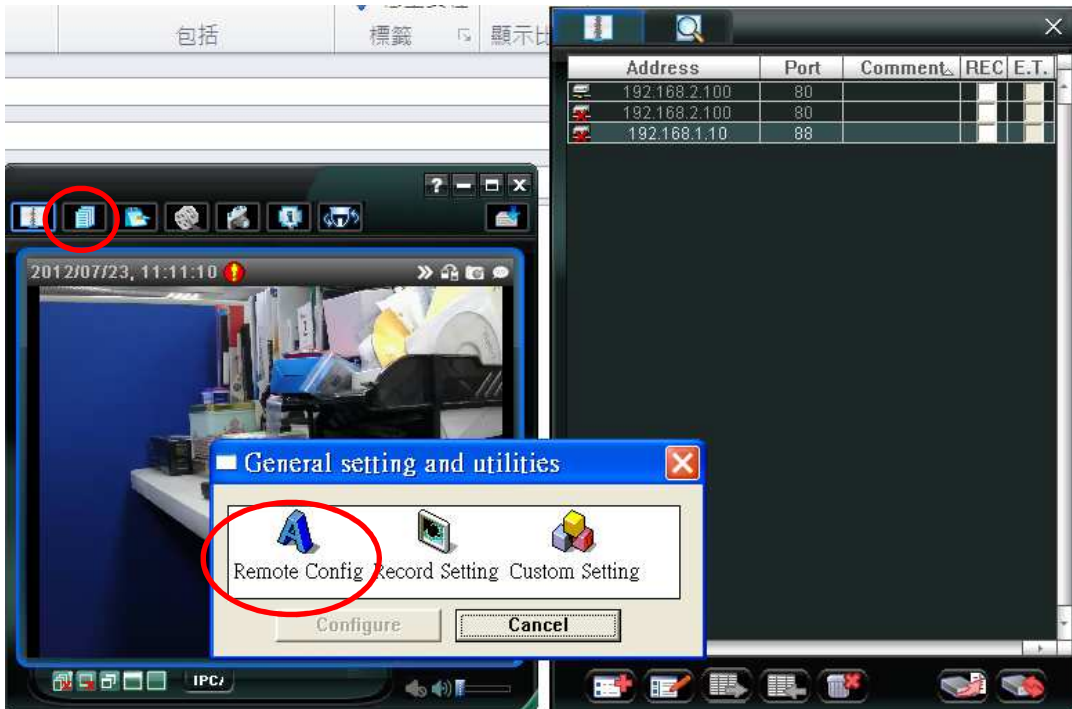


2. At the configuration of the camera, please go to “Trigger” and enable “Motion” & “PIR” to “ON”. The duration time is the video recording time for motion detection recording.

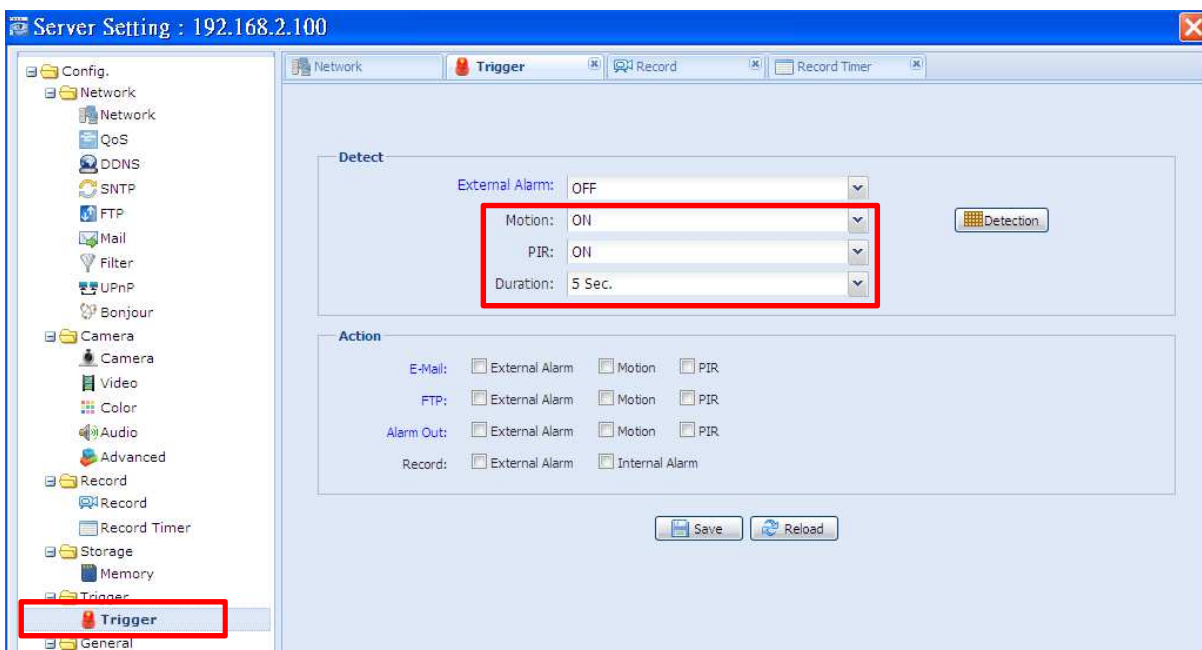


3. Select the region for motion detection zone by pressing "Detection"  
High-light the block to yellow color for non-motion-detection region.

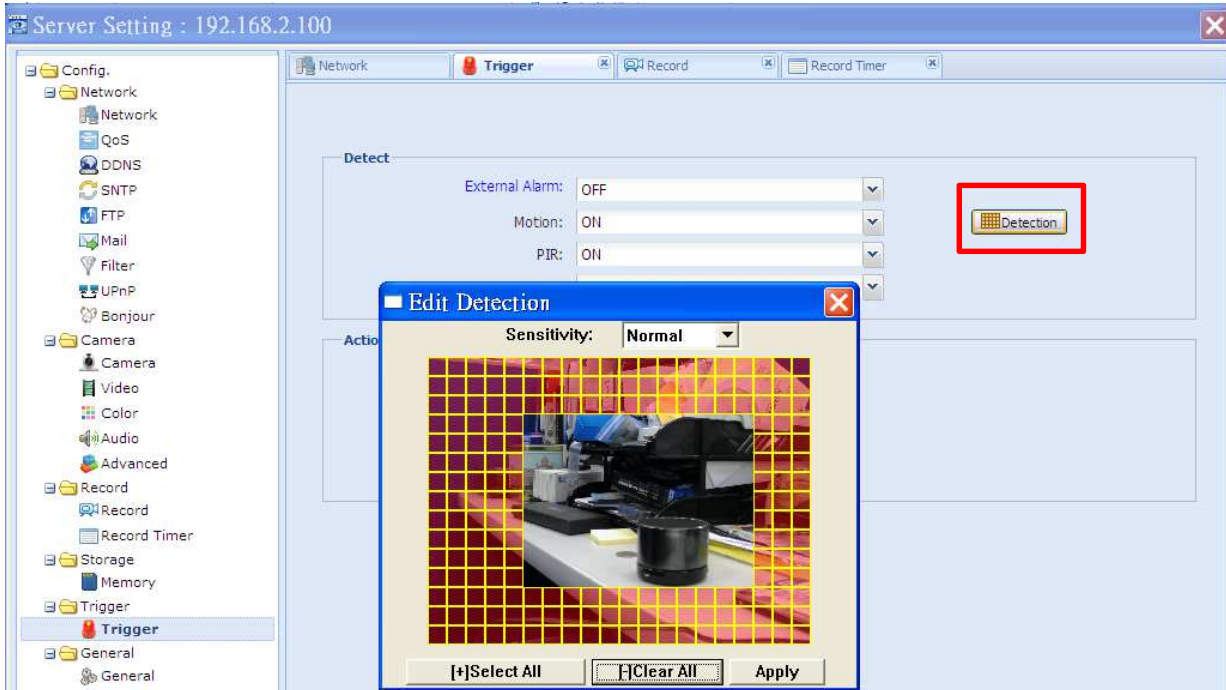

4. From Video Viewer software, go to "Record Setting".

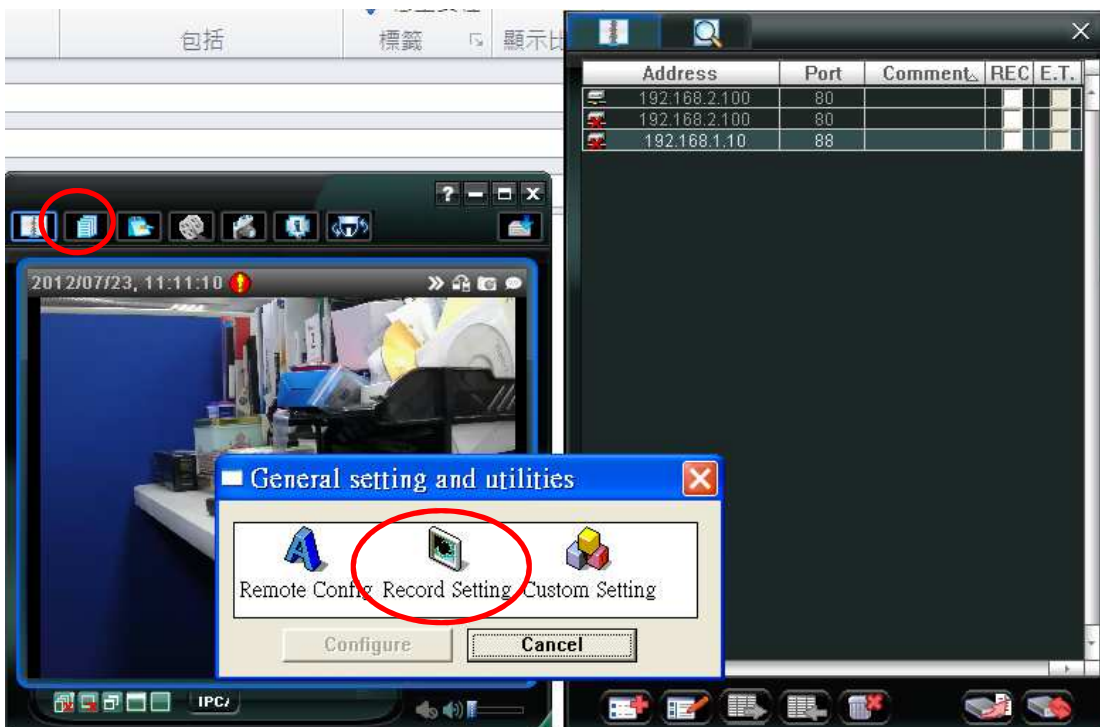

5. Enable "Motion" to record and select the destination of video storage.  
Click on the "+" sign to enable motion detection recording for everyday.

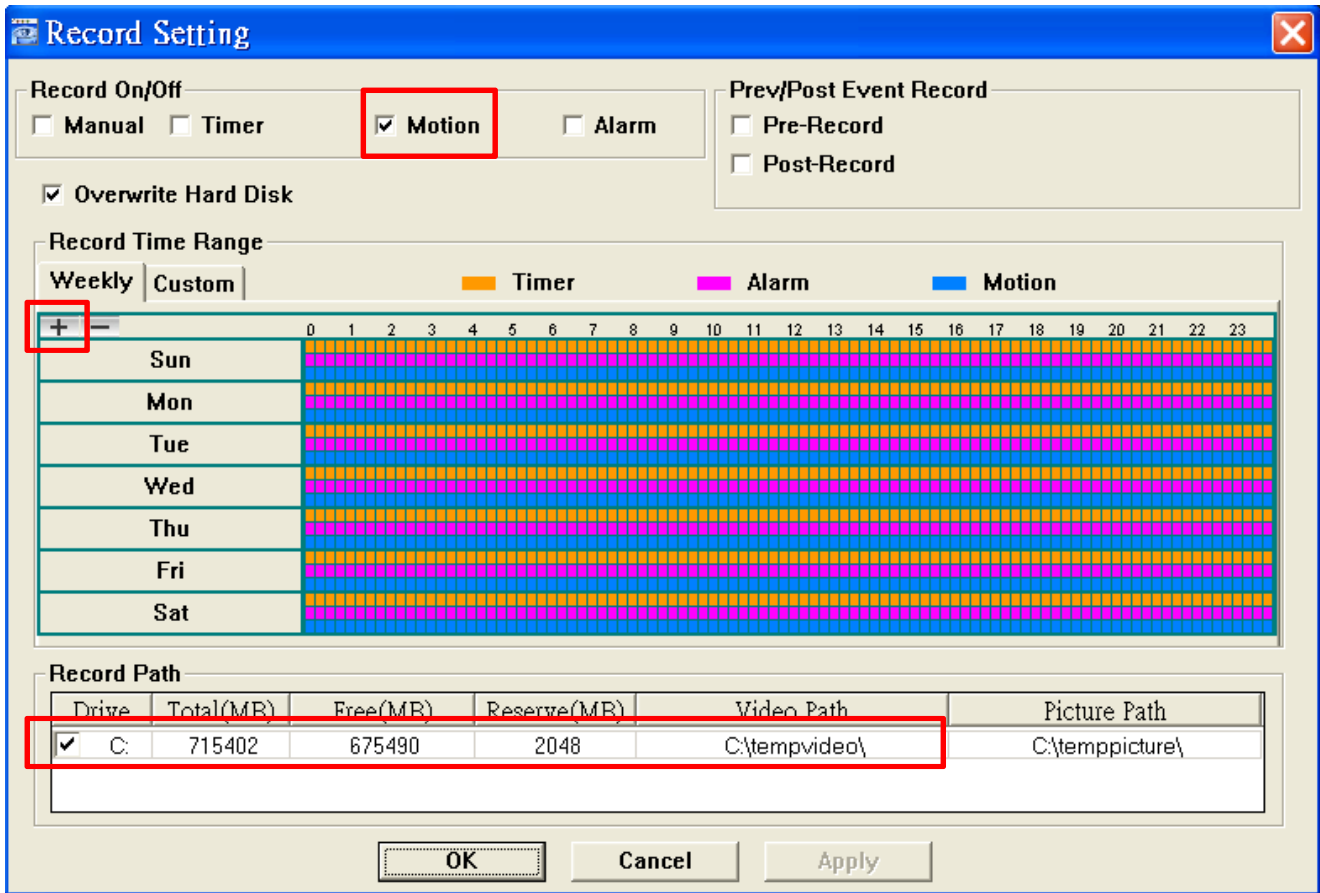

6. Wave the hand in front of the camera to test the motion trigger recording. You will see motion trigger icon and also video recording icon.

