



16/24 Port Desktop & Rack-mountable Gigabit Ethernet Switch



User Manual

DN-80100 • DN-80110

Package Contents

The following items should be found in your package:

- 16/24 Port Desktop & Rack-mountable Gigabit Ethernet Switch
- Power Adapter
- Quick Installation Guide
- Rack-mount Bracket
- Screw

Make sure that the packets contains above items. If any of the above items is missing or damaged, please contact your distributor.

Content

1. INTRODUCTION	1
1.1. PRODUCT OVERVIEW.....	1
1.2. MAIN FEATURES.....	1
1.3. STANDARDS.....	1
1.4. WORKING ENVIRONMENT	2
2. HARDWARE INSTALLATION	2
2.1. BEFORE INSTALLATION	2
2.2. INSTALLATION	2
2.3. CONNECTING THE 16/24 PORT DESKTOP & RACK-MOUNLABLE GIGABIT ETHERNET SWITCH TO YOUR NETWORK.....	3
2.4. LED INDICATORS.....	4
3. TROUBLESHOOTING	5

1. Introduction

Thank you for choosing the 16/24 Port Desktop & Rack-mountable Gigabit Ethernet Switch.

1.1. Product Overview

The 16/24 Port Desktop & Rack-mountable Gigabit Ethernet Switch provides non-blocking, wire speed switching for your 10, 100, and 1000 megabit network clients. Drop this switch in place of your current work group hub or switch, and you can upgrade your high requirement workstations to full Gigabit speeds as necessary, while continuing to service other clients at their current speeds, or build your network from the ground up, with appropriate link speeds for each user's requirements. Either way, it's perfect for graphics projects, multimedia, and other applications that need to move large files across the network quickly. With the 16/24 Port Desktop & Rack-mountable Gigabit Ethernet Switch, you can connect your existing 10/100 Ethernet network to a Gigabit server backbone without any additional equipment. All ports have automatic MDI/MDIX detection, so installation is worry free. Each port independently and automatically negotiates for best speed and whether to run in half or full-duplex mode.

1.2. Main Features

- Compliant with the IEEE802.3 10Base-T Ethernet, IEEE802.3u 100Base-TX, IEEE802.3ab 1000Base-T specifications
- 32/48Gbps switching fabric capacity
- 16/24 port 10/100/1000Mbps TX Auto-Negotiation Ethernet Switch
- Full/Half-Duplex capability on each TX port (only support full duplex in 1000M)
- IEEE802.3x standard flow control for Full-duplex, optional Back Pressure function for Half-duplex operation
- Supports TP interface Auto MDIX function for auto TX/RX swap
- Supports TP interface Auto MDIX function for auto TX/RX swap
- Support BK MAC address table
- LED indicators for simple diagnostics and management
- Plug and Play

1.3. Standards

- IEEE 802.3 10Base-T
- IEEE 802.3u 100Base-TX
- IEEE 802.3ab 1000Base-T
- IEEE 802.3x Flow Control

1.4. Working Environment

Temperature

- 0° to 40° C (operating)
- -20° to 70° C (storage)

Humidity

- 10% to 85% non-condensing (operating)
- 5% to 90% non-condensing (storage)

Power

- 100 - 240VAC, 50 - 60Hz

2. Installation

2.1. Before Installation

The setup of the Switch can be performed using the following steps:

- Install the 16/24 Port Desktop & Rack-mountable Gigabit Ethernet Switch in a fairly cool and dry place.
See working environment for the acceptable operation temperature and humidity ranges
- Install the Switch in a site free from strong electromagnetic source, vibration, dust, and direct sunlight
- Leave at least 10cm of space at the left and right hand side of the Switch for ventilation.
- Visually inspect the AC power jack and make sure that it is fully secured to the power adapter
- Do not stack any device upon the Switch

2.2. Installation

- **Desktop or Shelf Installation**

When installing the Switch on a desktop or shelf, the rubber feet included with the device must be first attached. Attach these cushioning feet on the bottom at each corner of the device. Allow enough ventilation space between the device and the objects around it.

- **Rack Installation**

The Switch can be mounted in an EIA standard size, which can be placed in a wiring closet with other equipment. To install, attach the mounting brackets on the switch's front panel (one on each side) and secure them with the screws provided. Then, use the screws provided with the equipment rack to mount the Switch in the rack.

2.3. Connecting the 16/24 Port Desktop & Rack-mountable Gigabit Ethernet Switch to Your Network

Description	Function
PWR	Connect to Power adapter, please don't use the unknown power adapter, otherwise your device may be damaged.
1X-16X/24X	These ports support network speeds of 10Mbps, 100Mbps or 1000Mbps, and can operate in half and full duplex transfer modes. These ports also support automatic MDI/MDIX crossover detection, which gives the Switch true 'plug and play' capabilities. Just connect any network cable between the Switch and the device, and the Switch will automatically detect the settings of the device and adjust itself accordingly.

2.4. LED Indicators

The LED Indicators will allow you to monitor, diagnose and troubleshoot any potential problem with the switch, connection or attached devices.

LED	Function	
PWR	On	Power on
	Off	Power off
LINK/ACT	On	Corresponding port data transmitting
	Flash	Corresponding port connection normal
	Off	Corresponding port connection abnormal
1000M	On	Corresponding port works at 1000Mbps
	Off	Corresponding port works at 10/100Mbps

3. Troubleshooting

1. The Power LED is not lit

- Check if the AC power cord is well connected. Try to unplug and plug back in the power cord to the switch or try another power outlet.

2. The Link LED is not lit

- Make sure the network configuration of connecting device is correct, and network card and drivers are installed correctly.
- Check the cable connections.
- Make sure the cable distance between the switch and other IEEE 802.3 compatible network device does not exceed 100 meters.

3. Performance is bad

- Check the status of Ethernet switching. If Ethernet switching is set to full-duplex on one device but a partner is set to halfduplex, then performance will be poor.
- Make sure the cable between the switch and other IEEE 802.3 compatible network device is Category 5 UTP or better.

4. Same devices can't talk to other devices on the network

- Check status of the Link LEDs to make sure devices are linked
- Make sure that the devices' network configurations are correct.
- Reset the switch if needed.