



**GIGABIT ETHERNET LAYER 2 SWITCH,
24 PORT, 2 x RJ45/SFP COMBO +
2 x SFP UPLINK PORTS**



Quick Installation Guide

DN-80221-3

Package Contents

Check the following contents of your package:

- Network Switch x 1
 - User's Manual x 1
 - Power Cord x 1
 - Accessories (Rack Mount Accessory Kit x2, Rubber Feet x4, Screwx8)
- If any part is lost and damaged, please contact your local agent immediately.

Product description

Thank you for purchasing this managed Switch.


It is composed of excellent design and in general the development of switches.

It provides rich of two layer management function, has excellent of performance and friendly of management interface, can full meet user of need, including system configuration, and port configuration, and MAC bound, and MAC filter, and VLAN configuration, and SNMP configuration, and ACL configuration, and QOS configuration, and IP basic configuration, and AAA configuration, and MSTP configuration, and IGMP SNOOPING configuration, and GVRP configuration, and EAPS configuration, and RMON configuration, and cluster management, and ERPS configuration, and log management.

Appearance description

1 Front panel

The front panel:

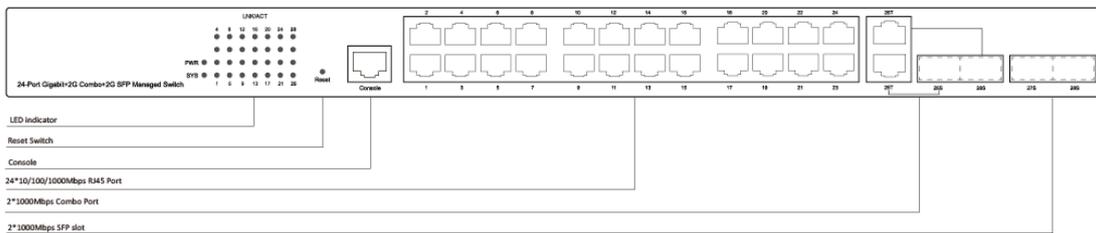

LED indicator light

LED	Color	Description
PWR	Green	Off: switch does not power on On: the switch is powered on
System	Green	Blinking: the system works Off: the system is starting or has no power
LNK/ACT	Green Orange	Off: not connected to the network equipment Orange light: connected to 10/100Mbps devices Green light: connected to 1000Mbps devices Blinking: connected devices are in data transmission

2 Back panel

Back panel: AC power connector, AC input range 100-240V, 50/60HZ, a grounding screw holes.



Power socket

Connect the female connector of the power cord here, and the male connector to the AC (Alternating Current) power outlet. Please make sure the voltage of the power supply meets the requirement of the input voltage.

Grounding column

The switch already comes with lightning protection mechanism. You can also ground the switch through the PE (Protecting Earth) cable of AC cord or with Ground Cable.

Installation of equipment

Announcements

To prevent equipment damage and personal injury caused by improper use, please observe the following precautions:

Before cleaning switch should switch power supply plug pulled out. Do not use wet cloth to wipe the switch; do not use liquid to clean the switch;

Do not switch on the water or wet places, and prevent water or moisture from entering the switch chassis;

Do not place the switch box in unstable or table, in case of fall, will cause serious damage to the switch;

Should maintain good indoor ventilation and keep the ventilation holes of the switch open;


Switch to the proper voltage to work properly, make sure the switch working voltage matches the voltage indicated;

To reduce the risk of electric shocks, switches, do not open the enclosure, even in neutral situations or don't turn on the switch chassis.

1 Desktop installation


Placed the bottom of the switch on large enough and stable desktop;


Tear off pad surface of the paste that comes with random paper; paste the pad to switch the Groove at the bottom of the housing to prevent external vibrations; reset the switch on the Workbench cautiously.

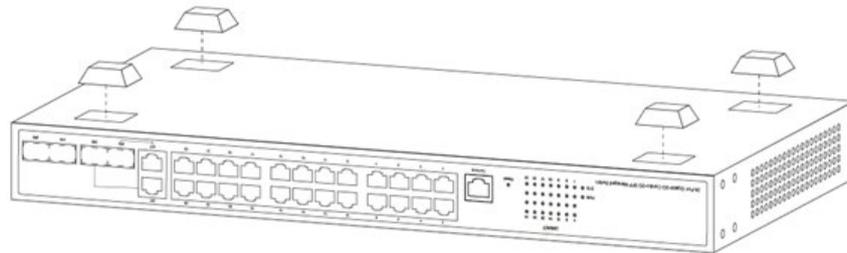

2 Rack Installation

Check EIA-19inch machine Cabinet of grounding and stability, first, with screws will installation hanging ear fixed in switch front Panel sides will switch placed in machine Cabinet of a bracket, along machine Cabinet guide slot Mobile switch to right location, then, with screws will installation hanging ear fixed in machine Cabinet ends of fixed guide slot, ensure switch stable to installation in machine Cabinet slot bit of bracket. Equipment mounting brackets are not used for load-bearing; it only plays the regular role. When installing the equipment cabinet, box bottom bracket (fixed on the Cabinet) to support the device.

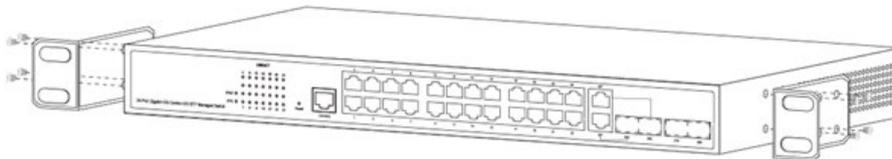

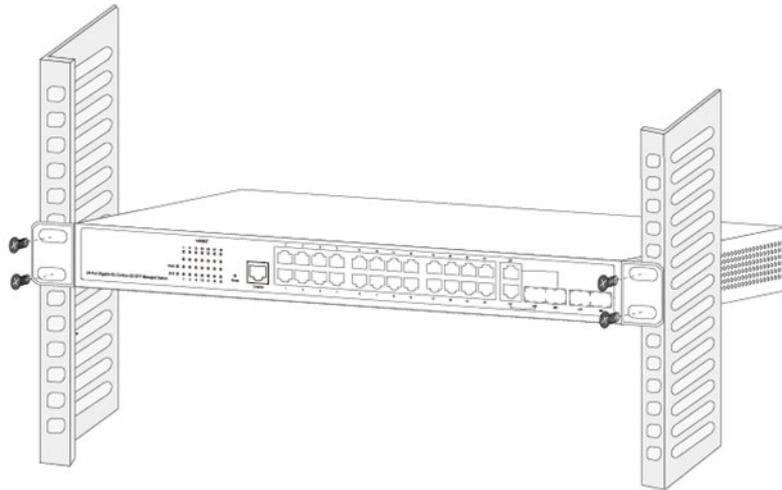


3 Turn on switch

Please connect the AC power cord into the rear of the switch and to an electrical outlet (preferably one that is grounded). When the switch is power on, the LED indicators flash momentarily for one second which represents a resetting of the system. The Power LED indicator turns on green.


Note: Please confirm the voltage is correct before power on; otherwise the switch will be damaged. (The power input is: 100V-240Vac, 50/60Hz.)

4 Console Port Interface

The switch has a monitor port (Console port). Rate 1200bps-115200bps, standard RJ45 plug. Use a dedicated monitoring cable to lead the port to the PC serial port connection, as follows:

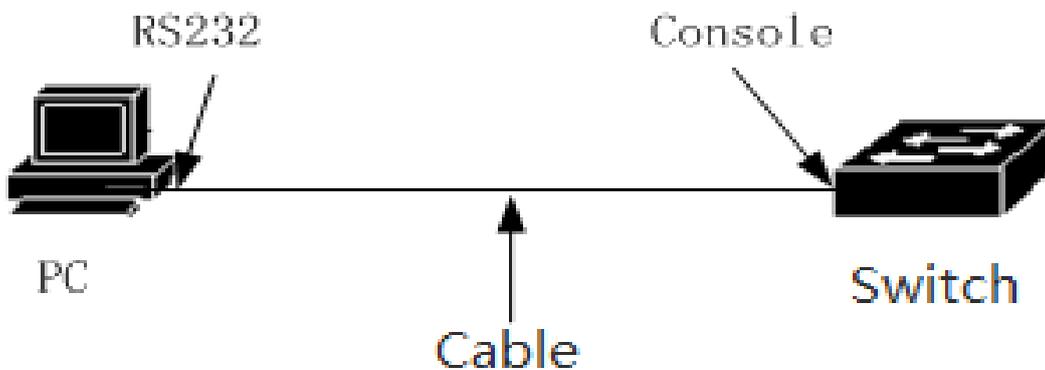

The RJ45 connector used by the Console port is shown in the figure below, and the RJ45 plug corresponds to the RJ45 socket, from left to right numbered from 1 to 8.

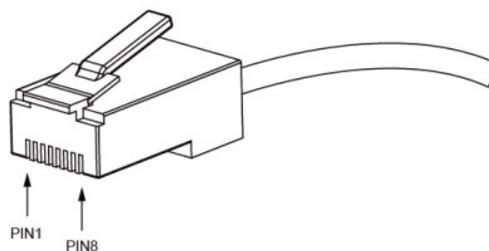


This cable is used to connect the console port of the switch to the external monitoring terminal. One end of the RJ45 eight-pin plug, the other end is a 25-hole plug (DB25) and 9-hole plug (DB9), RJ45 head into the switch's console port socket, DB25 and DB9 can be used according to the requirements of the terminal serial port, the cable internal connection schematic as follows:

RJ45	<===>	DB9
[RTS 1	~	8 CTS]
[DTR 2	~	6 DSR]
[TXD 3	~	2 RXD]
[GND 4	~	5 GND]
[GND 5	~	5 GND]
[RXD 6	~	3 TXD]
[DSR 7	~	4 DTR]
[CTS 8	~	7 RTS]

Login Web-based Management

1. Connect the Ethernet cable to any of the ports on the front panel of the switch and to the Ethernet port on the PC.

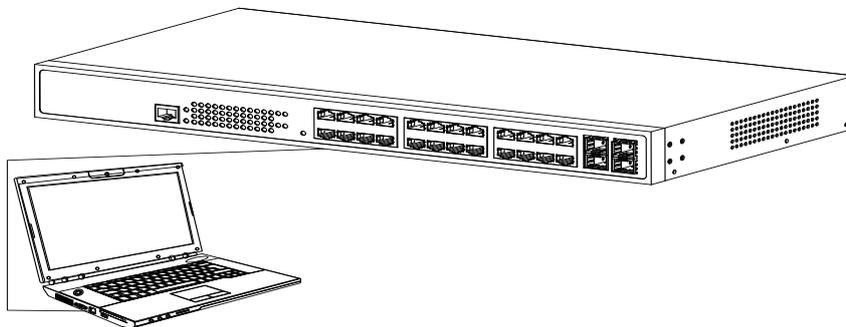

- 2 This switch provides web login management. The default login information is as follows:

Type	Default parameter
IP address	192.168.2.1
Username	admin
Password	admin

3. Open the web browser and enter 192.168.2.1 (the factory-default IP address) in the address bar. Then press <Enter>. (Please make sure the browser version is up to date)



To log in to the switch, the IP address of your PC should be set in the same subnet as that of the switch. The IP address is 192.168.2.x ("x" is any number from 2 to 254). Subnet Mask is 255.255.255.0

When the following logon dialog box appears, enter the password then click OK. By default, the username is **admin** and the password is **admin**.

Username:
 Password:
 Language:

After a successful login, the main page will appear as follows, and you can click the menu on the left side to configure the corresponding functions.

Save Logout Reboot Refresh

System Status System Basic Information

System Information

IP Configuration

Port Configuration

Link Aggregation

VLAN Configuration

MAC Address Table

Spanning Tree

ACL

QoS

Security

PoE Configuration

SNMP

System Tool

System Basic Information

Information Name	Information Value	Edit
System Hostname	Switch	Edit
System Location		Edit
System Contact		Edit
MAC Address	00-E0-4C-23-08-07	
Serial Number	G1GB0U5007211	
IP Address	192.168.5.15	
Subnet Mask	255.255.255.0	
Gateway	0.0.0.0	
Device Type	switch	
Hardware Version	1.00	
Software Version	V103SP7D190920	
Firmware Compile Date	Fri_Sep_20_17:16:17_2019	
System Running Time	1 hour 30 minutes 57 seconds	

Note:

For more details about how to configure the switch, see the User Guide on the resource CD.

Specification

Model	DN-80221-3
Standard	IEEE 802.3、IEEE 802.3u、IEEE 802.3ab、IEEE 802.3z、IEEE 802.3x、IEEE 802.1X、IEEE 802.1q、IEEE 802.1p、IEEE 802.1d、IEEE 802.1w、IEEE 802.3ad
Interface	24*10/100/1000Mbps RJ45 Port 2*10/100/1000Mbps Combo ports 2* 100/1000Mbps SFP Slots 1 Console Port
Network media	10BASE-T: UTP category 3,4,5 cable (≤100m) 100BASE-TX: UTP category 5, 5e cable (≤100m) 1000BASE-T: UTP category 5e, 5 cable (≤100m) 100BASE-FX:MMF,SMF 1000BASE-X: MMF, SMF
MAC Address Table	8K, Auto-learning, Auto-aging
jumbo frame	9216Bytes
Transfer Mode	Store-and-forward
Packet Forward Speed	41.66Mpps
Switching Capacity	56Gbps
Dimensions(L*W*H)	440*208*44mm
Input Power Supply	100~240V AC, 50/60Hz
Operating Temperature	0°C ~ 40 °C
Storage Temperature	-40 °C ~ 70 °C
Operating Humidity	10% ~ 90% non-condensing
Storage Humidity	5% ~ 90% non-condensing
Surge Protection	Common mode ±6KV Differential mode ±4KV;
MTBF	>50000 hour
Electrostatic standard	Contact 6KV, Air 8KV

This is a Class A product. In home environment, this product may cause radio interference. In this case, the user may be required to take appropriate measures.

Hereby Assmann Electronic GmbH, declares that the Declaration of Conformity is part of the shipping content. If the Declaration of Conformity is missing, you can request it by post under the below mentioned manufacturer address.

www.assmann.com
Assmann Electronic GmbH
Auf dem Schüffel 3
58513 Lüdenscheid
Germany

