

ednet.

Aura LED Bluetooth[®] Speaker



User Manual
33049

Dear Customer,

Thank you for purchasing ednet speakers. To ensure smooth operation, please read this user manual carefully before starting to use it.



1. Keys:



- 1) Press the M button to switch the mode of Bluetooth®/ Aux-in



- 2) Previous song while playing music, select the previous song under FM mode, and also for volume control



- 3) Standby, Play and Pause button

 


- 4) Next song while playing music, search next channel under FM mode, and also for volume control



- 5) Light control, press to change the color of light, press and hold to change the brightness, press twice to turn off the light

2. Connections, Ports:

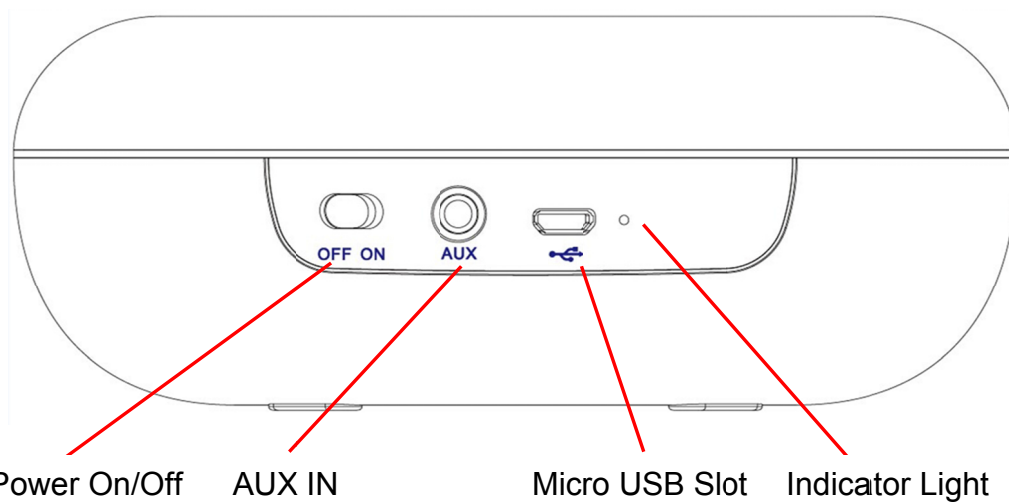

3. Features:

Bluetooth® Music and Mobile Hands-free Function

Bluetooth® 4.0 stereo music streaming/playing, supports hands-free function

Multi-colored LED Light

Four main colors of light for your choice, more colors can be chosen by the App

AUX IN

Works as external speaker by connecting to the audio source of computer, mobile, PSP/MP3/MP4...etc.

App Control

App can be used to control music playing, LED light (colors), alarm, radio and all available settings

FM Radio and Alarm Function

For the usage of the FM radio, it is required to insert the Aux-in cable which works as antenna. Set wake-up alarm via the App on your mobile device

Brightness Sensitivity

Turn on this function via the App. The brightness of light will automatically change according to the ambience

Vibration Sensitivity



Touching the speaker gently can stop the alarm when it rings

Voice Guide

Voice guide will inform you about the chosen mode or settings

4. Instructions:



1) Power On/Off, Standby

Switch the  button from OFF to ON, it will be powered on. And the lights will light up in green, red, blue, white one after another. While using the device, press and hold on the  button and it will set the speaker into "Standby mode" and press and hold again the Power switch on the speaker. If you have not been using it for a long time, please switch the Power button to OFF.




2) Bluetooth® Mode

Press the M button to enter into the Bluetooth® mode, then please turn on the Bluetooth® function on your mobile device. The indicator light will flash quickly while searching for your Bluetooth® device and the Bluetooth® pairing name "Aura" will be shown. Please connect to it. The speaker will inform you with "Device Paired" via the voice guide and then the blue light will turn off when connected.


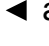

3) Light Control

The basic color of light is white and press  button to change the color. Press and hold  button to adjust the brightness. APP can be used to control the colors and brightness of the light; likewise, you can also choose other colors.

4) Hands-free Communication

Under the Bluetooth® mode, press  button to answer the call, and press and hold  button to hang up or reject the call. Double press  button to re-dial the last telephone number.

5) AUX IN Mode

Use the 3.5 mm audio cable (included) to connect the speaker to an audio source (PC/Notebook, MP3/MP4 player, etc.). Press the M button to enter "AUX IN" mode (the speaker will tell you "Aux-in Mode" via the voice guide). The speaker will play the music from the audio source acting as an external speaker. Press  button to play and pause the music, and press and hold  and  button to decrease or increase the volume.

6) FM Radio

Please insert the Aux-in cable included to work as the antenna, and press M button to enter FM mode (Speaker will sound out "FM Mode"). Press and hold M button to search and save the frequency channels automatically. There will be a warning tone when searching is completed. Press ◀ and ▶ button to select the channel. Press ▶|| Button to play or mute.

7) Charging

Please use the USB cable included to connect the speaker to the computer or a 5 V/1000 mA adaptor to charge the battery. When charging, the LED indicator is orange, and when charging is completed, the LED indicator will turn blue.

Please note:

- (1) If the battery has low capacity, the indicator light will flash quickly, please charge immediately.
- (2) We recommend charging the speaker by adaptors with 5 V/1 A.

App Download

If you have an Apple® iOS device, then you will find our "ednet.audio" App in the Apple App Store®.

 
 
For smartphones and tablets running on Google Android OS you can find our "ednet.audio" App in the Google™ Play Store.

In the search field of the respective App Stores® enter "ednet" or "ednet.audio".

Apple App Store®



Google™ Play

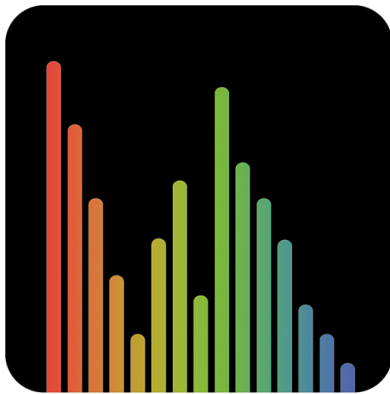

In the Search results the "ednet.audio" App will be marked with this symbol. Then install the App on your mobile device.

 
APP manual:




When you connect the **ednet** LED Bluetooth[®] Speaker Aura with your mobile device via Bluetooth[®], the App will work as below:

Settings:


- 1) How to connect your device and play the music via Bluetooth[®]:

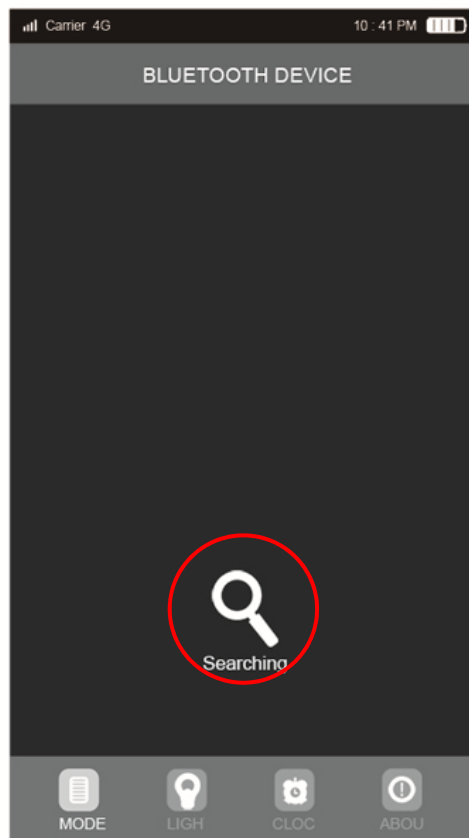

 Open “**ednet.audio**” App; click “Searching” on the page of “BLUETOOTH[®] DEVICE”. In the list, choose the model name “Aura”.

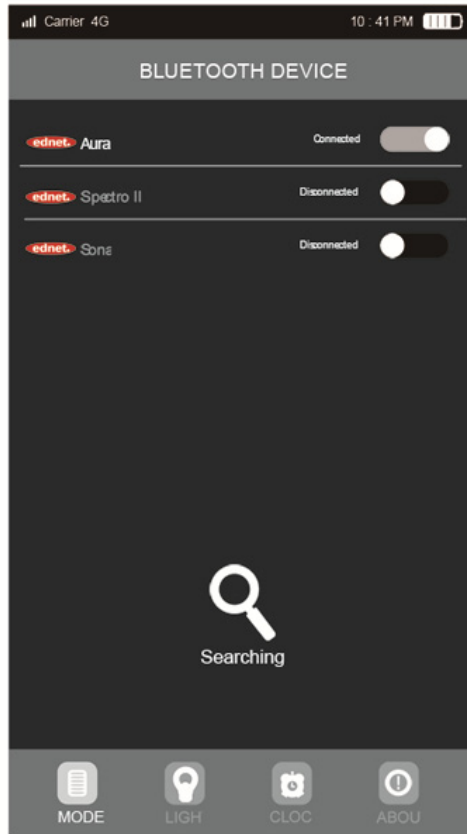

 After successful connection, enter the Bluetooth® playing mode, there will be a list of songs in the MP3 format. So click on one of the songs to play, or click the button “Previous”/”Next” to choose another song.

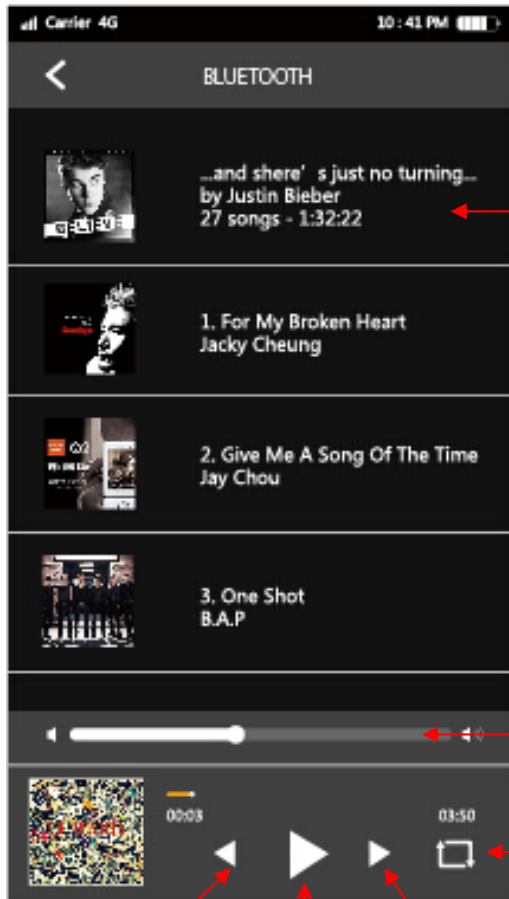

Click the song to play

Volume scrollbar, move it to adjust the volume


Music Playing Mode: random, order, single cycle

Previous


Play/Pause

Next


- 2) How to use the FM Mode:
Enter the page of MODE ► Choose FM Mode

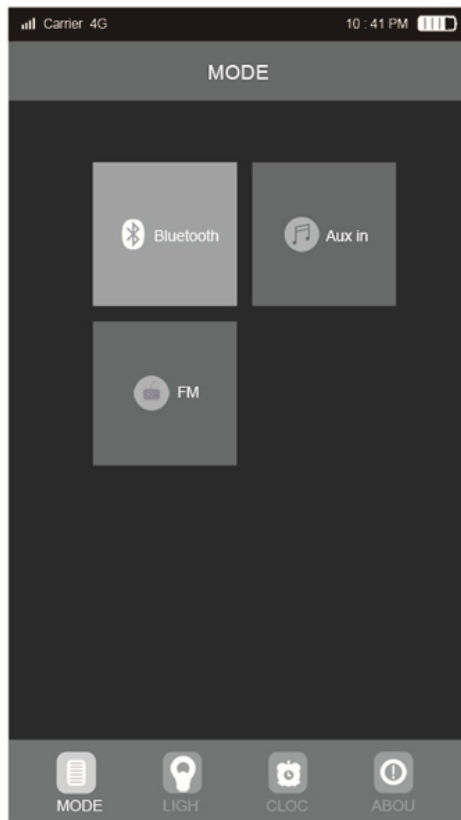

 
If there is no AUX IN cable inserted, it will remind you to insert the AUX IN cable as antenna. Please insert the cable and click “OK”

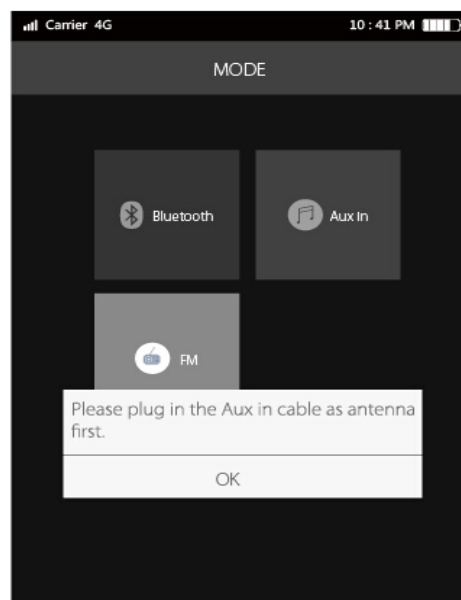


You can click “Searching” for auto searching or “TUNE-”/“TUNE+” for manual searching

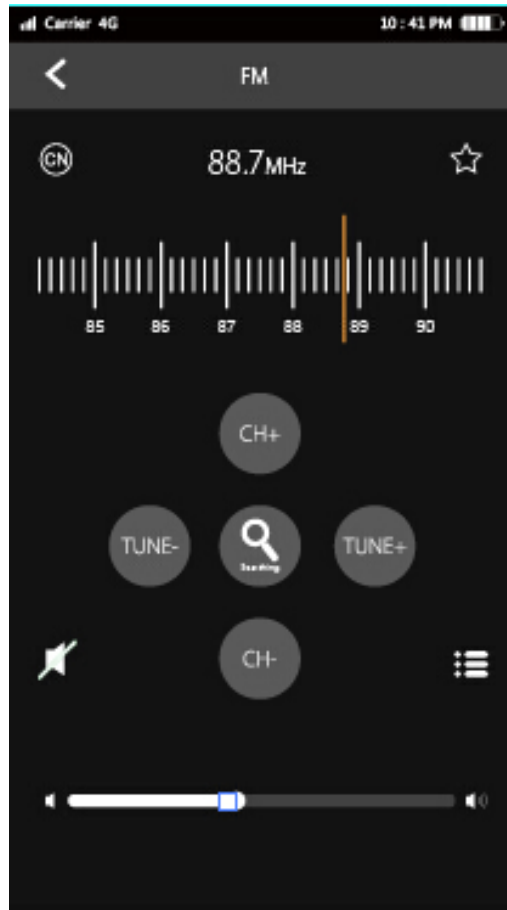


If you've finished auto searching, then you can click "CH+/" "CH-" to switch the radio channel.

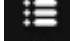
Click "☆" to save the channel which is currently playing, and click  to check the list of radio channels you've saved.

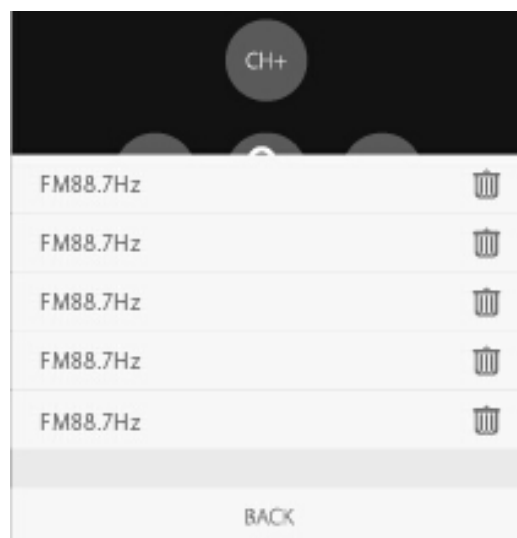

 3) How to control the colorful light:

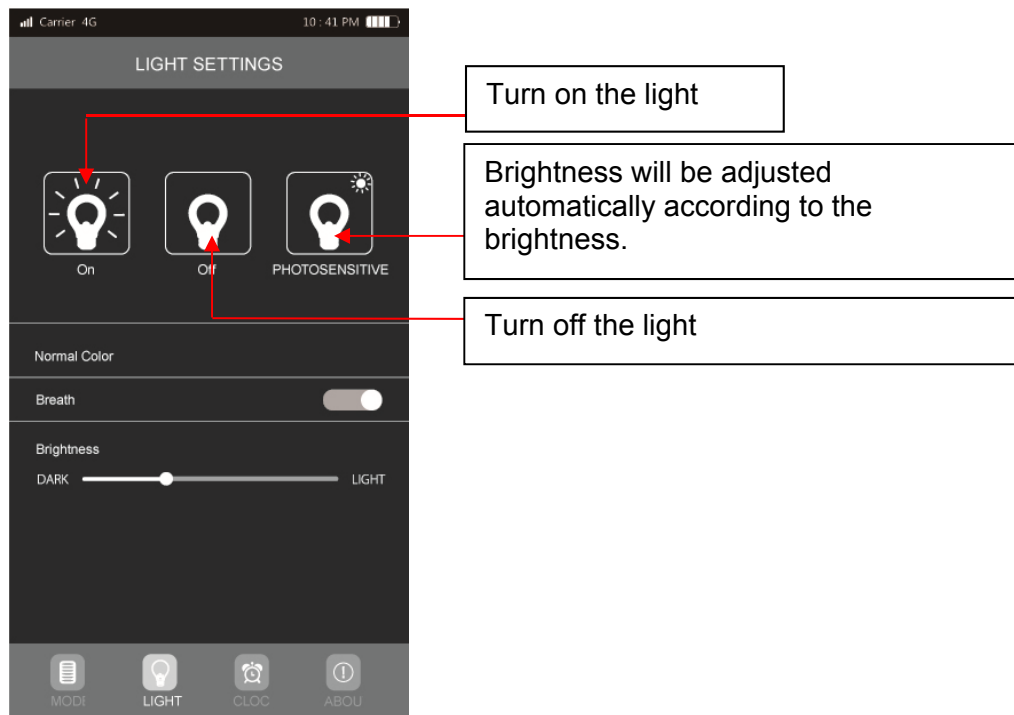


Turn on “Breath” button, Aura will start “breathing” being displayed by the LED light. Move “Brightness” scrollbar to adjust the brightness of LED light in general. Click “Normal Color” to enter the page of the color settings.

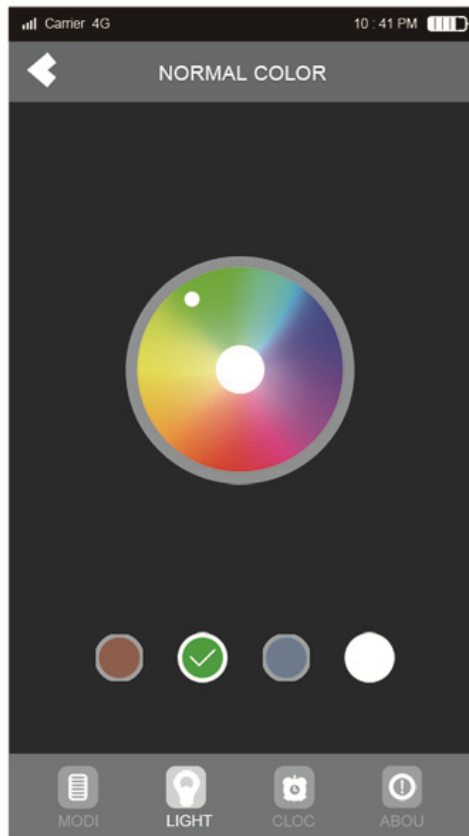


On the page of Normal Color, you can choose any color on the color display via your finger. The light will turn to any color according to the location of your finger. Or click below on one of the four color buttons to choose one of the main colors: red, green, blue, white.

 4) How to set alarm (Auto Light Control, Auto Music Playing, Alarm):

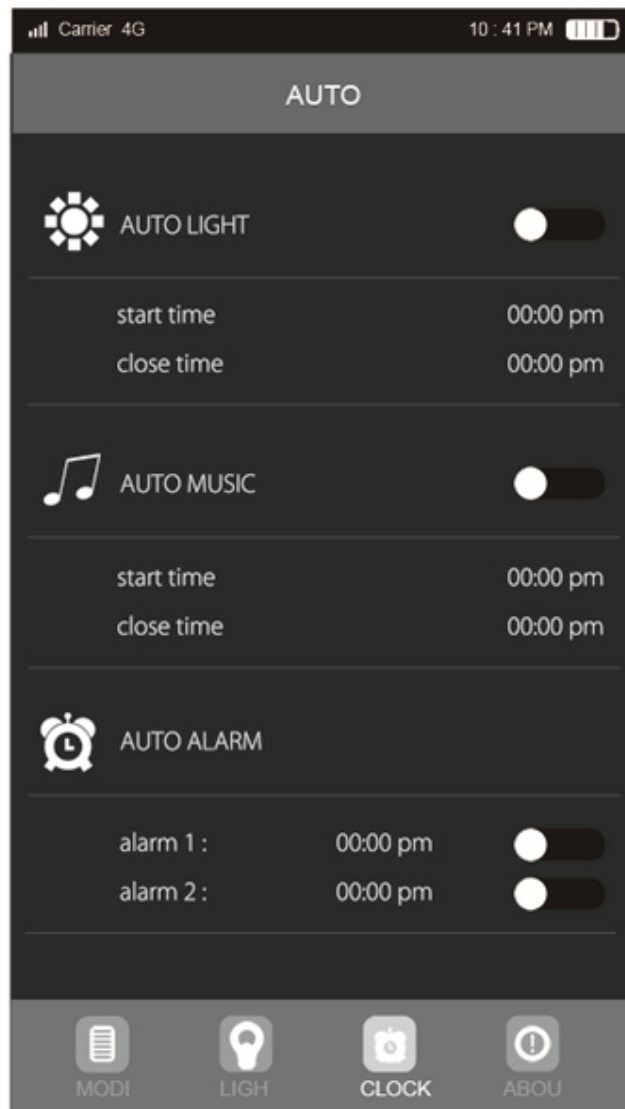


There are three auto modes: Auto Light, Auto Music Playing and Pause, Auto Alarm

Click “start time” below “AUTO LIGHT” to set the time and then click “Confirm”. The time will be set. And you can cancel the time in the same way

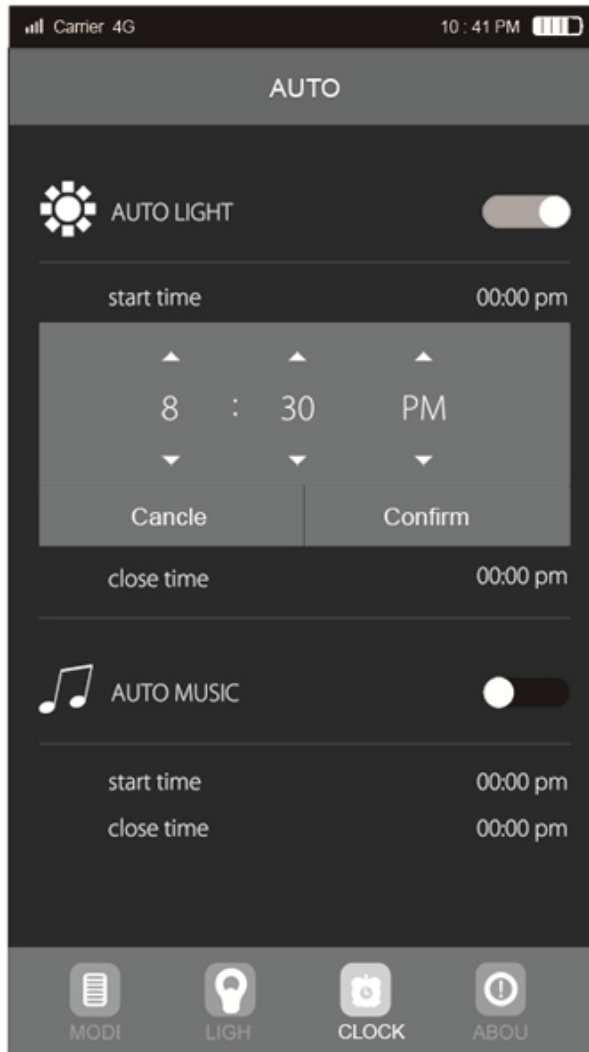

 Then turn on the “AUTO LIGHT” button
Applying the same as “AUTO LIGHT” setting to set up “AUTO MUSIC”
Playing. There are two alarms settings:

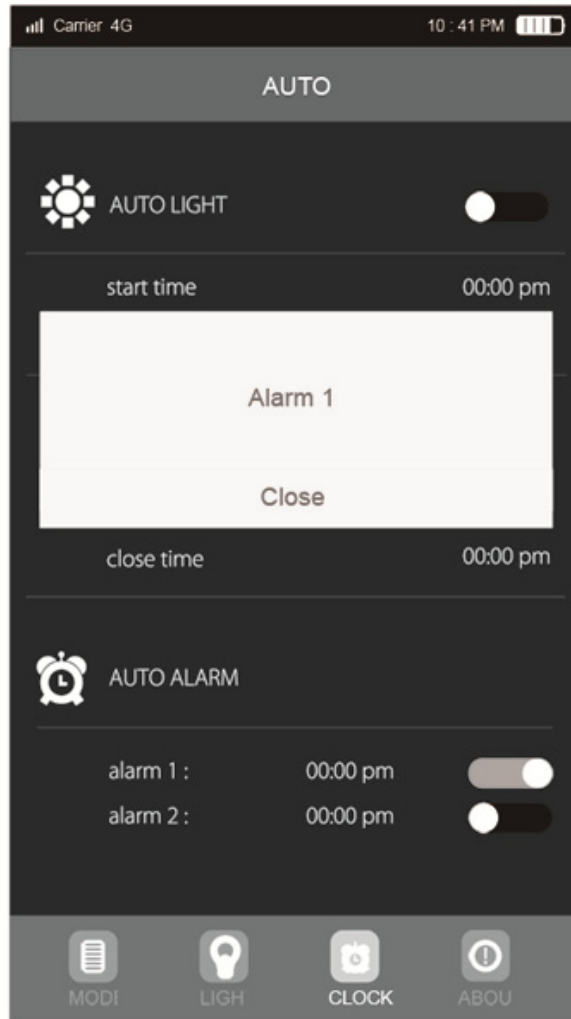

You can click “Close” button to close the alarm when it is ringing, or clap the top of speaker to enter the snooze mode.

Basic Information

1) Technology Data

Voltage	5 V	Aux in Jack	3.5 mm
Output	2*3.5 W	Net Weight	354 g
Impedance	3 Ω	Dimension	Φ134*H53 mm

2) Troubleshooting

2.1) What should I do if the speaker cannot pair with the Bluetooth® mobile device and play the music accordingly?

Please make sure you've selected the "Bluetooth® Mode" via the M button. And check the specification/ the manual of the Bluetooth® device (your mobile or computer), and check if the device can support the A2DP stereo audio transmission. If yes, please turn on the A2DP stereo mode.

2.2) What should I do if the FM radio cannot work?

The speaker needs to insert the 3.5 mm Aux-in cable as FM antenna. Only if you insert the aux in cable, the speaker can search FM channels under the FM mode.

Important Safety Instructions

- If you have not been using the speaker for a long time, please charge the battery once in a month in order to prevent damaging the lithium battery.
- Do not use the speaker in very cold, hot, dusty or humid environments.
- Please avoid dropping the speaker or hitting it with a hard object, it may cause damages to the internal battery or other hardware.
- When the battery capacity is low, the indicator light will flash and the voice guide will inform you about the low battery. Please charge the battery in time.
- Keep the speaker away from any source of heat/fire.

Hereby ASSMANN Electronic GmbH, declares that this device is in compliance with the requirements of Directive 2014/53/EU and the Directive 2011/65/EU for RoHS compliance. The complete declaration of conformity can be requested by post under the below mentioned manufacturer address.

Warning:

This device is a class B product. This equipment may cause some radio interference in living environment. In this case, the user can be requested to undertake appropriate measures to prevent interference.

www.assmann.com
Assmann Electronic GmbH
Auf dem Schüffel 3
58513 Lüdenscheid
Germany

