

DA USB A SERIALE

CONVERTITORE



Guida all'installazione rapida

(DA-70146-BA)

Benvenuti all'utilizzo del nostro prodotto

Passo 1: Inserire il CD-ROM di questo prodotto nel lettore CD

Passo 2: Collegare il dispositivo su di una porta USB libera del vostro PC, e trovare l'applicativo di installazione del nuovo hardware, facendo riferimento alla seguente tabella:



Passo 3: Selezionare "No, not this time (No, non questa volta)", cliccare sul pulsante "Next (Avanti)" per continuare.



Passo 4: Selezionare "Install from a list or specific location(Advanced) (Installa da un percorso specifico (avanzato)) ",cliccare "Next (Avanti)" per continuare.

Found New Hardware Wizard
Please choose your search and installation options.
 Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM)
Include this location in the search:
i\ Browse
O Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back Next > Cancel

Passo 5: Selezionare "Search removable media (floppy, CD-ROD...) (Cercare nei dispositivi mobili (floppy, CD-ROM...))", cliccare sul pulsante "Next (Avanti)" per continuare.

Found New Hardware Wizard	
Please wait while the wizard searche	s
usb serial converter	
	Kext > Cancel

Passo 6: Ricerca automatica per il driver corrispondente nel CD.

Found New Hardware Wizard
Please select the best match for your hardware from the list below.
USB Serial Converter
Description Version Manufacturer Location
USB Serial Converter 2.2.4.0 FTDI i:\usb 2.0 to rs232 converter\w
WUSB Serial Converter 2.2.4.0 FTDI i:\usb 2.0 to rs232 cable\win2C
This driver is digitally signed. <u>Tell me why driver signing is important</u> < Back Next > Cancel

Passo 7: Troverete due tipi di applicativi per l'installazione dell'hardware uno è per USB 2.0 con convertitore RS232, un altro è per USB 2.0 con cavo RS232. Vi preghiamo di scegliere il driver corrispondente al vostro prodotto, cliccare su "Next (Avanti)" per continuare.

Found New H	Hardware Wizard
Please wa	it while the wizard installs the software
¢	USB Serial Converter
	E ftd2xx.dll T o C:\WINDOWS\syswow64
	< Back Next > Cancel

Passo 8: L'applicativo ha iniziato l'installazione ed a copiare il file sul vostro sistema



Passo 9: Cliccare su "Finish (Termina)" per chiudere l'applicativo.



Passo 10: Trovare una nuova porta di comunicazione.

Found New Hardware Wize	ard
	Welcome to the Found New Hardware Wizard Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Online privacy information Can Windows connect to Windows Update to search for software? Yes, this time only Yes, now and every time I connect a device No, not this time
	< Back Next > Cancel

Passo 11: Selezionare "No, not this time (No, non questa volta)", cliccare sul pulsante "Next (Avanti)" per continuare.

Found New Hardware Wizard
Image: Constraint of the symptotic of the symptot of the symptotic of the symptot of the sympt
< Back Next > Cancel

Passo 12: Selezionare "Install from a list or specific location (Advanced) (Installa da un percorso specifico (avanzato))", cliccare "Next (Avanti)" per continuare.

Found New Hardware Wizard
Please choose your search and installation options.
 Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM)
Include this location in the search:
i:\ Browse
O Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back Next > Cancel

Passo 13: Selezionare "Search removable media (Floppy, CD-ROM...) (Cercare nei dispositivi mobili (floppy, CD-ROM...))", cliccare sul pulsante "Next (Avanti)" per continuare.

Found New Hardware Wizard	
Please wait while the wizard sear	ches
USB Serial Port	
	< Back Next > Cancel

Passo 14: Ricerca automatica per il driver corrispondente nel CD.

Found	New Hardware	Wizard			
Ple	ase select the bes	t match for	your hardwa	are from the list be	low.
	JUSB Serial	Port			
	Description	Version M	anufacturer	Location	
	USB Serial Port	2.2.4.0 F	TDI	i:\usb 2.0 to rs232 co	onverter\win200
	🕼 USB Serial Port	2.2.4.0 F	TDI	i:\usb 2.0 to rs232 ca	able\win2000_xp
	<				>
	This driver is dig	itally signed. <u>er signing is in</u>	nportant		
				Back Next	Cancel

Passo 15: Scegliere un tipo di driver per il vostro prodotto, cliccare "Next (Avanti)" per continuare.

Found New Hardware Wizard	
Please wait while the wizard installs the software	
USB Serial Port	
FTLang.dll To C:\WINDOWS\system32	
< Back	Next > Cancel

Passo 16: L'applicativo ha iniziato l'installazione ed a copiare il file sul vostro sistema.



Passo 17: Installazione completata, cliccare su "Finish (Termina)" per chiudere l'applicativo.



Passo 18: Il vostro nuovo hardware è installato e pronto per l'uso.

My Docume	ints	
My Comp	Open	
	Explore	
	Search	and the second se
	Manage	
Mu Nah	Map Network Drive	
Place	Disconnect Network Drive	
	Create Shortcut	
	Delete	
Recycle –	Rename	
	Properties	

Passo 19: Se volete visualizzarlo, cliccare con il tasto destro su "computer", poi cliccare su "Properties (Proprietà)".

Syster	m Restore	Automat	ic Updates 👘	Remote
General	Compu	iter Name	Hardware	Advanced
Device	Manager			
×	The Device Ma on your compu properties of ar	anager lists all ti iter. Use the De ny device.	he hardware device vice Manager to ch	s installed ange the
		(Device Ma	nager
Drivers				
	Driving Signing compatible with how Windows) lets you make h Windows, Wir connects to Wi	sure that installed d ndows Update lets y ndows Update for c	rivers are vou set up Irivers.
	Driver S	digning	Windows U	pdate
Hardwa	re Profiles			
	Hardware profi	les provide a w	av for you to set up	and store
Ð	different hardw	are configuratio	ins.	

Passo 20: Selezionare "Device Manager (gestione periferiche) " sull'interfaccia delle "System Properties (Proprietà di Sistema)", cliccarci su, e potrete vedere i dispositivi hardware installi sul vostro computer, e fate riferimento alla tabella seguente:



Passo 21: Installazione completata.

Note:

Dopo l'installazione, se potete vedere "USB Serial Converter (Convertitore USB Seriale)" da "Device Manager (Gestione Periferiche)", ma non potete vedere "USB Serial Port (COM3) (Porta seriale USB (COM3))", Vi preghiamo di continuare ai passi successivi.



+	Human Interface Devic	es
Ð 🗃	IDE ATA/ATAPI control	ers
÷ 🍉	Keyboards	
÷ 🖒	Mice and other pointing	devices
Ð 🖓	Other devices	
o y	Ports (COM & LPT)	
-	🍠 Communications Po	rt (COM1)
-	Communications Po	rt (COM2)
	Printer Port (LPT1)	
E 🌨	Processors	
÷ 0	Sound, video and game	e controllers
÷	System devices	
0.4	Universal Serial Bus con	trollers
	🖨 Standard Universal	PCI to USB Host Controller
1	🖨 Standard Universal	PCI to USB Host Controller
1	🖨 Standard Universal	PCI to USB Host Controller
1	🚔 Standard Universal	PCI to USB Host Controller
1	🚔 USB Root Hub	
1	🚔 USB Root Hub	
1	🚔 USB Root Hub	
1	😪 USB Root Hub	
- 14	🚔 USB Serial Converte	er
		Update Driver
		Disable
		Uninstall
		Scan for hardware changes
		Properties

Passo A: Tasto destro del mouse su "USB Serial Converter (Convertitore seriale USB)", poi cliccate su "Properties (Proprietà)".

SB Seri	al Convert	er Properties	?
General	Advanced	Power Management Driver	
Con Use	USB Serial figuration — these setting Load VCP	Converter is to override normal device configuration	
		ΠK Cancel	Help

Passo B: Selezionare "Load VCP (Carica VCP)" nelle proprietà "Advanced (Avanzate)", cliccare "OK".

Passo C: Rimuovere il USB a RS232 sul vostro computer. Collegare il dispositivo su di una porta USB già utilizzata sul vostro PC, ora è ok, fate riferimento alla seguente tabella:



Congratulazioni, installazione avvenuta con successo.

Rimuovere il driver

1, Aprire i driver di questo prodotto, vi preghiamo di fare riferimento alla tabella qui sotto:



2, Fate doppio click su "FTClen.exe", apparirà la seguente interfaccia

		-
🧗 FTDI Clean Utility V1.0		_ ×
	FTDI Chip	
VID (Hex) FTDI	•	Clean Sustem
PID (Hex)		Exit
Status: Ready		

3, cliccare su "Clean System", apparirà la seguente interfaccia :



4 · Disconnettere il dispositivo USB 2.0 a RS232 da pc, cliccare "ok ", apparirà la seguente interfaccia, poi cliccate "Yes (Si)"

	TI	NY FTDI Clean Utility V1.0	_ ×
Confirm		×	
?	You are about to Do you want to	o uninstall all FTDI drivers for VID 0x0403 and all PIDs. continue?	
		<u>Yes</u> <u>N</u> o	
		FTDI •	Clean System
		PID (Hex)	Exit
		Windows XP Status: Ready	

5, vi preghiamo di cliccare su "No" per disinstallare il driver

	🐠 FTDI Clean Utility V1.0	-	×
Confirm	× TDI		
2 Do	you want to cancel driver uninstallation?		
~	hip		
	Yes No		
	FTDI		ř
	PID (Hex)	Liean System	
	Windows XP	-	
	Status: Ready		

6, Quando la disinstallazione è completa vi preghiamo di cliccare su "Exit (Esci)" per terminare l'applicativo di disinstallazione.

🗊 FTDI Clean Utility V1.0	-	×
FTDI Chip		
VID (Hex)		
	Liean System	
	Exit	
Windows XP		
Status: System clean completed		