

CONVERSOR

USB PARA SERIAL



Guia de Instalação Rápida

(DA-70146-BA)

Seja Bem vindo a Utilizar o nosso produto

Passo 1: Insira a CD Driver deste produto no CD-ROM

Passo 2: Conecte o dispositivo a uma porta USB livre no PC, e encontre o assistente do novo hardware, por favor consulte o quadro a seguir:



Passo 3: Selecione "No, not this time (Não, não desta vez)", clique em "Next (Avançar)" para continuar.



Passo 4: Selecione "Install from a list or specific location(Advanced) (Instalar de uma lista ou local específico (Avançado)) ", clique em "Next (Avançar)" para continuar.

Found New Hardware Wizard
Please choose your search and installation options.
 Search for the best driver in these locations. Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed. Search removable media (floppy, CD-ROM) Include this location in the search: Include this location in the search: Don't search. I will choose the driver to install. Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back Next > Cancel

Passo 5: Selecione "Search removable media (floppy, CD-ROD...) (Pesquisar media removível (disquete, CD-ROD ...))", clique em "Next (Avançar)" para continuar.

Found New Hardware Wizard			
Please wait while the wizard searches			
usb serial converter			
	< Back Next > Cancel		

Passo 6: Busca automática para o driver correspondente no CD.

Found New Hardware Wizard			
Please select the best match for your hardware from the list below.			
USB Serial Converter			
Description Version Manufacturer Location			
USB Serial Converter 2.2.4.0 FTDI i:\usb 2.0 to rs232 converter\w			
WUSB Serial Converter 2.2.4.0 FTDI i:\usb 2.0 to rs232 cable\win2C			
This driver is digitally signed. <u>Tell me why driver signing is important</u>			
< Back Next > Cancel			

Passo 7: Vai encontrar dois tipos de assistente de hardware, um é para o USB 2.0 DO Conversor RS232, um outro está para o USB 2.0 DO cabo RS232. Por favor, escolha a driver correspondente de acordo com o produto, clique em "Next (Avançar)" para continuar.

Found New Har	dware Wizard
Please wait w	while the wizard installs the software
¥ ^{ال}	SB Serial Converter
	Itd2xx.dll To C:\WINDOWS\syswow64
	< Back Next > Cancel

Passo 8: O assistente começou a instalação e a copiar ficheiros para o seu sistema



Passo 9: Clique em "Finish (Terminar)" para fechar o assistente.



Passo 10: Encontrar um nova porta COM.

Found New Hardware Wizard			
	Welcome to the Found New Hardware Wizard		
	Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Online privacy information		
LAN"	Can Windows connect to Windows Update to search for software?		
	 Yes, this time only Yes, now and every time I connect a device No, not this time 		
	Click Next to continue.		
	< Back Next > Cancel		

Passo 11: Selecione "No, not this time (Não, não desta vez)", clique em "Next (Avançar)" para continuar



Passo 12: Selecione " Install from a list or specific location (Advanced) (Instalar de uma lista ou de local específico (Avançado))", clique em "Next (Avançar)" para continuar.

Found New Hardware Wizard
Please choose your search and installation options.
 Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM)
Include this location in the search:
i:\ Browse
O Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back Next > Cancel

Passo 13: Selecione "Search removable media (Floppy, CD-ROM...) (Pesquisar media removível (Disquete, CD-ROM ...))", clique em "Next (Avançar)" para continuar.

Found New Hardware Wizard	
Please wait while the wizard searches	
USB Serial Port	
	< Back Next > Cancel

Passo 14: Busca automática para o driver correspondente no CD.

Found New Hardware Wizard				
Please select the best match for your hardware from the list below.				
JUSB Serial F	Port			
Description	Version Manufacturer	Location		
USB Serial Port	2.2.4.0 FTDI	i:\usb 2.0 to rs232 converter\win200		
🖙 USB Serial Port	2.2.4.0 FTDI	i:\usb 2.0 to rs232 cable\win2000_xr		
<	Ш	>		
This driver is digitally signed. <u>Tell me why driver signing is important</u>				
		< Back Next > Canc	el	

Passo 15: Escolha um tipo de driver para o seu produto, clique em "Next (Avançar)" para continuar.

Found New Hardware Wizard	
Please wait while the wizard installs the	e software
USB Serial Port	
FTLang.dll To C:\WINDOWS\system32	
	< Back Next > Cancel

Passo 16: O assistente começou a instalação e a copiar ficheiros para o seu sistema.



Passo 17: Instalação concluída, clique em "Finish (Concluir)" para fechar o assistente.



Passo 18: O seu novo hardware está instalado e pronto para ser utilizado.

My Docume	ents	
My Comp	Open Explore Search Manage	
My Netu Place	Map Network Drive Disconnect Network Drive	
Recycle	Create Shortcut Delete Rename	
	Properties	

Passo 19: Se quiser vê-lo, clique no lado direito do rato em "my computer (Meu Computador)", e depois clique em "Properties (Propriedades)".

General Computer Name Hardware Advance Device Manager The Device Manager lists all the hardware devices installed on your computer. Use the Device Manager to change the properties of any device. Device Manager Drivers Device Manager Device Manager Drivers Driving Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Windows update Image: Hardware profiles provide a way for you to set up and store different hardware configurations. Hardware Profiles	Syster	n Restore	Automat	ic Updates	Remote
Device Manager Image: Image: <t< td=""><td>General</td><td>Compu</td><td>ter Name</td><td>Hardware</td><td>Advanced</td></t<>	General	Compu	ter Name	Hardware	Advanced
Device Manager Image: The Device Manager lists all the hardware devices installed on your computer. Use the Device Manager to change the properties of any device. Device Manager Drivers Driving Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Image: Hardware profiles provide a way for you to set up and store different hardware configurations. Hardware Profiles					
The Device Manager lists all the hardware devices installed on your computer. Use the Device Manager to change the properties of any device. Device Manager Drivers Driving Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Windows Profiles Hardware Profiles Hardware Profiles Hardware Profiles	Device	Manager	1200 1203	. 81 19 19.85	10 102 10
Subject compared over the borne interlegence of any device. Drivers Driving Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Image: Windows of the original store different hardware configurations. Hardware Profiles Image: Hardware Profiles	S	The Device Ma	anager lists all ti ter. Lise the De	he hardware device vice Manager to cl	es installed hange the
Drivers Driving Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Image: Wardware profiles provide a way for you to set up and store different hardware configurations. Hardware Profiles	~	properties of an	ny device.		
Drivers Driving Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Image: Window of the profiles Image: Window of the profiles Image: Hardware Profiles			(Device M	anager
Drivers Driving Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Image: Window of the profiles Image: Window of the profiles Image: Hardware Profiles			1		
Driving Signing lets you make sure that installed drivers are compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Windows reprofiles provide a way for you to set up and store different hardware configurations. Hardware Profiles Hardware Profiles	Drivers -				
 compatible with Windows. Windows Update lets you set up how Windows connects to Windows Update for drivers. Driver Signing Windows Update Hardware Profiles Hardware profiles provide a way for you to set up and store different hardware configurations. Hardware Profiles 	and 1	Driving Signing	lets vou make	oure that installed o	trivore aro
Driver Signing Windows Update Hardware Profiles Hardware profiles provide a way for you to set up and store different hardware configurations. Hardware Profiles		the contraction of the rest of the	Toto you mano	sure that installed t	
Hardware Profiles Hardware profiles provide a way for you to set up and store different hardware configurations. Hardware Profiles		compatible with how Windows	Windows. Wir connects to Wi	ndows Update lets indows Update for	you set up drivers.
Hardware Profiles Hardware profiles provide a way for you to set up and store different hardware configurations. Hardware Profiles		compatible with how Windows	Windows. Wir connects to Wi	ndows Update lets indows Update for Windows U	you set up drivers. Jpdate
Hardware profiles provide a way for you to set up and store different hardware configurations.		compatible with how Windows	igning	ndows Update lets indows Update for Windows L	you set up drivers. Jpdate
different hardware configurations. Hardware Profiles	Lay Hardwa	compatible with how Windows Driver S	igning	indows Update lets indows Update for Windows U	you set up drivers. Jpdate
Hardware Profiles	Hardwar	compatible with how Windows Driver S re Profiles Hardware profil	igning	ay for you to set up	Jpdate
Hardware Profiles	Hardwar	compatible with how Windows Driver S re Profiles Hardware profil different hardw	igning es provide a ware configuration	ay for you to set up	Jpdate
	Hardwai	compatible with how Windows Driver S re Profiles Hardware profil different hardwa	igning les provide a ware configuration	ay for you to set up	Jpdate
	Hardwar	compatible with how Windows Driver S re Profiles Hardware profil different hardw	igning es provide a ware configuratio	ay for you to set up	Jpdate and store
	Hardwai	compatible with how Windows Driver S re Profiles Hardware profil different hardware	igning les provide a ware configuration	ay for you to set up	Jpdate

Passo 20: Selecione "Device Manager (Gestor do Dispositivo)" no "Hardware" da interface " System Properties (Propriedades do Sistema)", clique nele, poderá então ver os dispositivos de hardware instalados no seu computador, consulte o diagrama a seguir:



Passo 21: Instalação concluída.

Notas:

Após a instalação, se conseguir ver "USB Serial Converter (Conversor Serial do USB)" a partir do "Device Manager (Gestor de Dispositivos)", mas não consegue ver "USB Serial Port (COM3) (Porta Serial USB (COM3))", por favor, prossiga os próximos passos.



 IDE ATA/ATAPI controllers Keyboards Mice and other pointing devices Other devices Ports (COM & LPT) Communications Port (COM1) Communications Port (COM2) 	
Keyboards Mice and other pointing devices Other devices Yorts (COM & LPT) Communications Port (COM1) Communications Port (COM2)	
Mice and other pointing devices Other devices Second State Ports (COM & LPT) Second State Communications Port (COM1) Second State Communications Port (COM2)	
Other devices Section 2 Ports (COM & LPT) Section 2 Communications Port (COM1) Section 2 Communications Port (COM2)	
 Ports (COM & LPT) Communications Port (COM1) Communications Port (COM2) 	
Communications Port (COM1)	
- Z Communications Port (COM2)	
🦳 🍠 Printer Port (LPT1)	
🕀 📾 Processors	
🕀 🧐 Sound, video and game controllers	
🖅 😼 System devices	
🖻 🚔 Universal Serial Bus controllers	
🛛 🚓 Standard Universal PCI to USB Host Controller	
🛭 🕰 Standard Universal PCI to USB Host Controller	
🛛 🕰 Standard Universal PCI to USB Host Controller	
🛛 🕰 Standard Universal PCI to USB Host Controller	
🛛 🕰 USB Root Hub	
😽 🕰 USB Serial Converter	_
Update Driver	
Disable	
Uninstall	
Scan for hardware changes	
Properties	

Etapa A: Clique no lado direito do rato em "USB Serial Conventer (Conversor Serial USB)", depois clique em "Properties (Propriedades)".

JSB Ser	ial Convert	er Properties	? 🔀
General	Advanced	Power Management Driver	
	USB Serial	Converter is to override normal device configurati	on
		OK Cancel	Heb

Passo B: Selecione "Load VCP (Carregar VCP)" em "Advanced (Avançado)", clique em "OK".

Passo C: Afaste o USB para RS232 no seu computador. Conecte novamente o dispositivo a uma porta USB do seu PC, agora está ok, por favor consulte o diagrama a seguir:



Parabéns, a instalação foi bem sucedida.

Remover Driver

1. Abra os drivers deste produto, consulte o esquema abaixo:



2. Clique 2 x em "FTClen.exe", e aparece a seguinte interface

f FTDI Clean Utility V1.0	_ ×
FTI Chi)
VID (Hex) FTDI	Clean System
PID (Hex)	Exit
Status: Ready	

3. clique em "Clean System (Limpar Sistema)", e aparece a seguinte interface:



4, Desconecte o USB 2.0 para RS232 do dispositivo do PC, clique em "ok" , aparece a imagem em baixo, clique em "Yes (Sim)"

FTI	- ×
Confirm	×
You are about to uninstall all FTDI drivers for VID 0x0403 and all Do you want to continue?	PIDs.
<u>∐⊻es</u> <u>N</u> o	
FTDI -	Clean System
PID (Hex)	Exit
Windows XP	
Status: Ready	

5. Por favor, clique em " No (Não)" para desinstalar a driver

	n FTDI Clean Utility V1.0	-	×
Confirm	× TDI		
9 Do	you want to cancel driver uninstallation?		
\checkmark	hio		
	FTDI 🔹		ľ
	PID (Hex)		
		Exit	
	Windows XP		
	Status: Ready		

6. Quando desinstalação estiver concluída, clique em "Exit (Sair)" para finalizar a desinstalação da aplicação.

🕸 FTDI Clean Utility V1.0	_ ×
FTDI Chip	
VID (Hex)	Clean System
PID (Hex)	Exit
Windows XP Status: System clean completed	