CONVERTISSEUR USB - SERIE



Guide d'installation rapide Windows 2000/XP DA-70158

- Étape 1 : Insérez le CD du pilote de ce produit dans le lecteur CD
- Étape 2 : branchez le dispositif dans un port USB de votre PC, et utilisez l'assistant nouveau matériel trouvé, reportez-vous à la figure suivante :

HER MANY REPORTS	
🤃 Found New Hardware 🗵	
USB <-> Serial cable	
3	🥑 4:51 PM

Étape 3 : Sélectionnez "No, not this time", cliquez sur "Next" pour continuer.

Found New Hardware Wiz	ard
	Welcome to the Found New Hardware Wizard Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Read our privacy policy Can Windows connect to Windows Update to search for software? Yes, this time only Yes, now and every time I connect a device No, not this time Click Next to continue.
	< Back Next > Cancel

Étape 4 : Sélectionnez Select "Install from a list or specific location (Advanced)", cliquez sur "Suivant" pour continuer.

Found New Hardware Wizard	
Image: Note of the im	
< Back Next > Cancel	

Étape 5 : Sélectionnez "Include this location in the search", cliquez sur "Browse" et sélectionnez le pilote correspondant au Systèmes d'exploitation sur le CD. Cliquez sur "Next" pour continuer.

Found New Hardware Wizard				
Please choose your search and installation options.				
 Search for the best driver in these locations. 				
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.				
Search removable media (floppy, CD-ROM)				
Include this location in the search:				
E:\USB 2.0 TO 2x RS232\win2000_xp_x86_x64 V Browse				
O Don't search. I will choose the driver to install.				
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.				
< Back Next > Cancel				

Étape 6 : Recherche automatique du pilote correspondant sur le CD.

Found New Hardware Wizard
Please wait while the wizard searches
usb serial converter
< Back Next > Cancel

Étape 7 : L'assistant lance l'installation et copie les fichiers sur votre système.



Étape 8 : Cliquez sur "Finish" pour terminer l'installation.



Étape 9 : Trouvez le nouveau port com.



Étape 10 : Sélectionnez "No, not this time", cliquez sur "Next" pour continuer.



Étape 11 : Sélectionnez "Install from a list or specific location (Advanced)", cliquez sur "next" pour continuer.

Found New Hardware Wiz	ard
	This wizard helps you install software for: USB Serial Port If your hardware came with an installation CD or floppy disk, insert it now.
	What do you want the wizard to do?
	 Install the software automatically (Recommended) Install from a list or specific location (Advanced)
	Click Next to continue.
	< Back Next > Cancel

Étape 12 : Sélectionnez "Include this location in the search", cliquez sur "Browse" et sélectionnez le pilote correspondant au Systèmes d'exploitation sur le CD. Cliquez sur "Next" pour continuer.

Found New Hardware Wizard
Please choose your search and installation options.
 Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM)
Include this location in the search:
E:\USB 2.0 TO 2x RS232\win2000_xp_x86_x64 🛛 Browse
O Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back Next > Cancel

Étape 13 : L'assistant lance l'installation et copie les fichiers sur votre système.

Found New Hardware Wizard			
Please wait while the wizard installs the	software		
USB Serial Port			
ftcserco.dll To C:\WINDDWS\system32	7	D	
(****************			
	< Back	Next >	Cancel

Étape 14 : Cliquez sur "Finish" pour terminer l'installation et fermer l'assistant.



Étape 15 : Votre nouveau matériel est installé et prêt à être utilisé.



Étape 16: Si vous voulez le voir, cliquez avec le bouton droit sur "my computer", puis cliquez sur "Properties".

1			
ly Docume	ents		
T			
	0.000	All Property lies	
ny comp	Suplara		
	Explore		
-	Search	A DESCRIPTION OF TAXABLE	
0	Manage		
Mar Black	Map Network Drive		
Place	Disconnect Network Drive		
	Create Shortcut		
0	Delete		
-	Rename		
Recycle -	Properties		

Étape 17 : Sélectionnez "Device Manager" dans l'onglet "Hardware" de l'écran "System Properties", cliquez dessus, vous pouvez voir les dispositifs installés sur votre ordinateur, reportez-vous à la figure suivante :

System R	estore	Automatic I	Updates	Rem	note
General	Computer Name		Hardware	Adva	anced
Device Mar	aner				
	he Device Manage	r lists all the	hardware devir	es installer	4
See or	n your computer. U	se the Devic	e Manager to (change the	
pr	operties of any dev	/ice.			-
			Device M	lanager	
2.5		-			/
Drivers					
D D	riving Signing lets y	iou make su dows Windi	re that installed	drivers are	
D cc ho	riving Signing lets ; impatible with Win iw Windows conn	vou make su dows. Winde ects to Wind	re that installed ows Update lets ows Update for	drivers are s you set up r drivers.	5
	riving Signing lets ; ompatible with Win ow Windows conn Driver Signin	vou make su dows. Windo ects to Wind	re that installed ows Update let: ows Update for Windows	drivers are s you set up r drivers.	,
	riving Signing lets ; ompatible with Win ow Windows conn Driver Signin	vou make su dows. Windo ects to Wind	re that installed ows Update let: ows Update fo Windows	drivers are s you set up r drivers. Update	,
Hardware P	riving Signing lets ; ompatible with Win ow Windows conn Driver Signin rofiles	you make su dows. Windo acts to Wind	re that installed ows Update lets ows Update for Windows	drivers are s you set up r drivers. Update	,
Hardware P	riving Signing lets ; mpatible with Win ow Windows conn Driver Signin rofiles ardware profiles pr	oou make su dows. Winde ects to Wind	re that installed ows Update lets ows Update for Windows for you to set u	drivers are s you set up r drivers. Update p and store	,
Hardware P	riving Signing lets ; ompatible with Win ow Windows conn Driver Signin rofiles ardware profiles pro flerent hardware co	vou make su dows. Wind ects to Wind g	re that installed ows Update let: Windows Vindows for you to set u	drivers are s you set up r drivers. Update p and store	,
Hardware P	riving Signing lets ; compatible with Win ow Windows conn Driver Signin Driver Signin rofiles ardware profiles pr fferent hardware co	vou make su dows. Wind ects to Wind ovide a way onfigurations	re that installed ws Update let: lows Update for Windows for you to set u	drivers are s you set up r drivers. Update p and store	
Hardware P	riving Signing lets ; ompatible with Win ow Windows conn Driver Signin Driver Signin rofiles ardware profiles pr fferent hardware ci	vou make su dows. Wind ects to Wind g	re that installed ows Update let ows Update for Windows for you to set u Hardware	drivers are s you set up r drivers. Update p and store	
Hardware P	riving Signing lets ; ompatible with Win ow Windows conn Driver Signin Tofiles ardware profiles pr fferent hardware co	vou make su dows. Wind ects to Wind p	re that installed ows Update let ows Update for Windows for you to set u Hardware	drivers are syou set up drivers. Update p and store Profiles	



Étape 18 : Installation terminée.

Remarque :

Une fois l'installation terminée, continuez avec les étapes suivantes si dans "Device Manager", vous pouvez voir "USB Serial Converter" mais pas "USB Serial Port (COM3/COM4)".



Étape A : Cliquez avec le bouton droit sur "USB Serial Converter A/ USB Serial Converter B", puis cliquez sur "Properties".



Étape B : Sélectionnez "Load VCP" dans l'onglet "Advanced", puis cliquez sur "OK".

USB Serial Converter A Properties	? 🗙	USB Serial Converter B Properties	? 🔀
General Advanced Driver Details		General Advanced Driver Details	
USB Serial Converter A		USB Serial Converter B	
- Configuration		Configuration	
ose mese sewings to overlide huma device behavidu.		use mese senings to overlide normal device behaviou.	
Coad VCP		✓ Load VCP	
OK Cancel H	elp	OK Cancel	Help

Étape C : Retirez le convertisseur USB 2.0 des 2 ports RS232 de votre ordinateur. Rebranchez le dispositif dans un port USB de votre PC, ça doit marcher, reportez-vous à la figure suivante :



Félicitations, l'installation est réussie.

Désinstaller le pilote :

 Aller à la "Add or Remove program" de l'écran "Control panel" et localisez "Windows Driver Package--- FTDI CDM Driver Package (03/13/2008 2.04.06) Windows Driver Package--- FTDI CDM Driver Package (03/13/2008 2.04.06)".

 Alcor PeLink Easy Transfer Driver FLEXid8 Driver FLEXid8 Driver FLEXid8 Driver Flexid8 Drivers Flexid8 Drivers Flexid8 Drivers Flexid8 Driver Flexid8 Driver Flexid8 Driver Flexid8 Driver OrCAD 9.0 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.05) Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.05) 	1
 Easy Transfer Driver FLEXid& Driver FLEXid& Drivers Flexid& Drivers Flexid& Drivers Flexido Transfer Products Flexido Transfer Products Flexido Transfer Products Flexido Transfer Drives Flexido Transfer Driver Sentinel System Driver Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) 	🚺 Alcor FeLink
 FLEXid& Driver Macrovision FLEXid Drivers Mentor Graphics Licensing Mentor Graphics Products MGC Visual Studio T Runtine Microsoft YinUsb 1.0 MSN Messenger 6.1 OrCAD 9.0 Realtek AC '97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) 	Easy Transfer Driver
 Macrovision FLEXid Drivers Mentor Graphics Licensing Mentor Graphics Products MGC Visual Studio T Runtime Microsoft VinUsb 1.0 MSN Messenger 6.1 OrCAD 9.0 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) 	15 FLEXide Driver
 # Hentor Graphics Licensing # Hentor Graphics Products # HGC Visual Studio T Runtime # Hierosoft WinUsb 1.0 # MSN Messenger 6.1 OrCAD 9.0 # Realtek AC'97 Audio # Realtek Kigh Definition Audio Driver # Sentinel System Driver * Yindows Driver Package - FIDI CDN Driver Package (D3/13/2008 2.04.06) * Yindows Driver Package - FIDI CDN Driver Package (D3/13/2008 2.04.06) 	15 Macrovision FLEXid Drivers
<pre>/* Henter Graphics Products /* MGC Visual Studio 7 Euntine /* Microsoft VinUsb 1.0 /* MSN Messenger 6.1 /* OrCAD 9.0 /* Realtek AC'97 Audio /* Realtek Kigh Definition Audio Driver /* Sentinel System Driver /* Vindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) /* Vindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06)</pre>	🔂 Mentor Graphics Licensing
# MGC Visual Studio 7 Runtime # Microsoft VinUsb 1.0 # MSN Messenger 6.1 OrCAD 9.0 Realtek AC '97 Audio # Realtek High Definition Audio Driver # Sentinel System Driver * Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) * Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06)	🔐 Mentar Graphics Products
# Hierosoft WinUsb 1.0 MSN Messenger 6.1 OrCAD 9.0 Realtek AC'97 Audio Realtek AC'97 Audio Sentinel System Driver Sentinel System Driver Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06)	ở MGC Visual Studio 7 Runtine
 MSN Messenger 6.1 OrCAD 9.0 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) 	🔂 Microsoft WinUsb 1.0
 OrCAD 9.0 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) 	🐝 MSN Nessenger 6.1
 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) 	🛐 Or CAD 9.0
🙀 Realtek High Definition Audio Driver ở Sentinel System Driver 🕿 Yindows Driver Package - FIDI CDN Driver Package (DS/13/2008 2.04.05) 🜊 Yindows Driver Package - FIDI CDN Driver Package (D3/13/2008 2.04.05)	🙀 Realtek AC'97 Audio
∰ Sentinel System Driver ≋ Vindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) ≋ Vindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06)	🙀 Realtek High Definition Audio Driver
★ Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) ★ Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06)	🔂 Sentinel System Driver
💐 Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06)	💐 Vindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06)
	🕿 Yindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.05)

- 2. Il suffit de le sélectionner et de cliquer sur "Remove " pour supprimer le pilote.
- 3. Ouvrez les pilotes de ce produit, reportez-vous à la figure suivante :



4. Double cliquez sur "FTClen.exe" ; l'interface suivante apparaît :

🧗 FTDI Clean Utility V1.0		- ×
	FTDI Chip	
VID (Hex) FTDI		[]
PID (Hex)		Exit
Status: Ready		

5. Cliquez sur "Clean System" ; l'interface suivante apparaît :

White Fill	🕼 FTDI Clean Utility VI.0	-	×
Information	isconnect all FTDI devices from the PC		
v	nip.		
	FTDI •		
	PID (Hex)		
	^{Windows≫} Status: Ready		

6. Déconnectez le convertisseur USB 2.0 des 2 ports RS232 de l'ordinateur, cliquez sur "ok", l'interface suivante apparaît, cliquez sur "Yes".

	FTE	FTDI Clean Utility V1.0	-	×
Confirm	You are about to	v uninstall all FTDI drivers for VID 0x0403 and all PIDs.		
~	Do you want to	Yes No		
•				
		PID (Hex)	Clean System	
			Exit	
		Windows XP Status: Ready		

7. Cliquez sur "No" pour désinstaller le pilote.

nfirn 9 D	o you want to cancel driver uninstallation?	DI
Ŷ	h	iρ
	FTDI •	
	PID (Hex)	

8. Lorsque la désinstallation est terminée, cliquez sur "Exit" pour quitter le programme de désinstallation.



Indication : En cas de mauvaise installation et d'une utilisation non conforme dans les habitations, l'appareil peut provoquer des perturbations chez les appareils radios et autres appareils électroniques. Il s'agit d'une utilisation conforme lorsque l'appareil est utilisé, dans la mesure du possible, avec des câbles de connexion blindés (pour les produits de réseau informatique, utiliser, en outre, des câbles blindés de catégorie 5 ou plus). L'appareil a été testé et se trouve dans les limites pour les accessoires informatiques de classe B conformément aux exigences de l'EN 55022. Mise en garde : Ce produit est conforme à la classe de contrôle B - il peut provoquer des perturbations de fonctionnement dans les habitations ; dans ce cas, l'opérateur peut exiger d'appliquer des mesures appropriées et de s'y tenir. Déclaration de conformité : L'appareil satisfait les exigences de compatibilité CEM conformément à l'EN 55022 de classe B pour les équipements de traitement de l'information (ITE) et l'EN 55024. Les appareils disposant d'une alimentation en courant externe ou intégrée sont toujours conforme aux exigences de l'EN 61000-3-2 et EN 61000-3-3. De cette façon, les exigences fondamentales de sécurité de la directives EMC 2004/108/EC sont satisfaites. La conformité CE a été démontrée. Les déclarations correspondantes sont disponibles auprès du fabricant.

www.assmann.com ASSMANN Electronic GmbH Auf dem Schüffel 3 58513 Lüdenscheid Allemagne