

Printer Compatibility List

Update:2026.07.08

Printer Manufacture	Printer Model	Print Server Model			
		DN-13006-1	DN-13003-1 DN-13003-2	DN-13014-3	DN-13001-1
		2U1P	1U	1U	1P
HP	Business InkJet 1000	OK	OK	OK	
HP	Color Laserjet 150a	OK	OK	OK	
HP	Color Laserjet 1500L	OK	OK	OK	
HP	Color Laserjet 1600	OK	OK	OK	
HP	Color Laserjet 2500	OK	OK	OK	OK
HP	Color LaserJet 2550	OK	OK	OK	OK
HP	Color LaserJet 2550L/LN	OK	OK	OK	
HP	Color LaserJet 2600	OK	OK	OK	
HP	Color LaserJet 2605	OK	OK	OK	OK
HP	Color LaserJet 2700n	OK	OK	OK	
HP	Color LaserJet 2840	OK	OK	OK	
HP	Color LaserJet 3700	OK	OK	OK	OK
HP	Color LaserJet 4000	OK			OK
HP	Color LaserJet 4100	OK			OK
HP	Color LaserJet 4500	OK			OK
HP	Color Laserjet 4650	OK	OK	OK	OK
HP	Color LaserJet 8550	OK			OK
HP	Color Laserjet CP1215	OK	OK	OK	
HP	Color Laserjet CP1525nw	OK	OK	OK	
HP	Color Laserjet CM1312 MFP	OK	OK	OK	
HP	Color Laserjet CM1015 MFP	OK	OK	OK	
HP	Color Laserjet MFP M281fdw	OK	OK	OK	
HP	Designjet 100	OK	OK	OK	OK
HP	Designjet 600	OK			OK
HP	Designjet 650C	OK			OK
HP	Designjet 700	OK			OK
HP	Designjet 750C+	OK			OK
HP	Deskjet 1010	OK	OK	OK	
HP	Deskjet 1110	OK	OK	OK	
HP	DeskJet 1120C	OK			OK
HP	Deskjet 1125C	OK	OK	OK	OK
HP	Deskjet 1180C	OK	OK	OK	OK
HP	DeskJet 1280	OK	OK	OK	OK
HP	Deskjet 1510	OK	OK	OK	
HP	Deskjet 2000 J210	OK	OK	OK	
HP	Deskjet 2020hc	OK	OK	OK	
HP	Deskjet 2050	OK	OK	OK	
HP	Deskjet 2130	OK	OK	OK	
HP	Deskjet 2510	OK	OK	OK	
HP	Deskjet 2511	OK	OK	OK	
HP	Deskjet 2512	OK	OK	OK	
HP	Deskjet 2515	OK	OK	OK	
HP	Deskjet 2516	OK	OK	OK	
HP	Deskjet IA 2520hc	OK	OK	OK	
HP	Deskjet 2540	OK	OK	OK	
HP	Deskjet 2621	OK	OK	OK	
HP	Deskjet 3000	OK	OK	OK	
HP	Deskjet 3070A	OK	OK	OK	
HP	Deskjet 3050	OK	OK	OK	
HP	Deskjet 3325	OK	OK	OK	
HP	DeskJet 3420	OK	OK	OK	
HP	Deskjet 3520	OK	OK	OK	
HP	Deskjet 3535	OK	OK	OK	
HP	Deskjet 3630	OK	OK	OK	
HP	Deskjet 3631	OK	OK	OK	
HP	Deskjet 3632	OK	OK	OK	
HP	Deskjet 3633	OK	OK	OK	
HP	Deskjet 3634	OK	OK	OK	
HP	Deskjet 3635	OK	OK	OK	
HP	Deskjet 3636	OK	OK	OK	
HP	Deskjet 3637	OK	OK	OK	
HP	Deskjet 3638	OK	OK	OK	
HP	Deskjet 3650	OK	OK	OK	
HP	Deskjet 3743	OK	OK	OK	
HP	Deskjet 3748	OK	OK	OK	
HP	Deskjet 3820	OK	OK	OK	OK
HP	DeskJet 3920	OK	OK	OK	
HP	DeskJet 3940	OK	OK	OK	
HP	DeskJet 400/420	OK			OK
HP	Deskjet 450C	OK	OK	OK	OK
HP	Deskjet 5440	OK	OK	OK	

HP	DeskJet 5500	OK			OK
HP	Deskjet 5550	OK	OK	OK	OK
HP	Deskjet 5560	OK	OK	OK	
HP	Deskjet 5652	OK	OK	OK	OK
HP	Deskjet 670C	OK			OK
HP	Deskjet 680C	OK			OK
HP	Deskjet 720C	OK			OK
HP	Deskjet 810C	OK	OK	OK	OK
HP	Deskjet 830C	OK	OK	OK	OK
HP	Deskjet 845C	OK	OK	OK	
HP	DeskJet 9300	OK	OK	OK	OK
HP	Deskjet 948c	OK	OK	OK	OK
HP	Deskjet 9600	OK	OK	OK	OK
HP	Deskjet 9650	OK	OK	OK	OK
HP	Deskjet 970c XI	OK	OK	OK	OK
HP	Deskjet 9800	OK	OK	OK	OK
HP	Deskjet D1560	OK	OK	OK	
HP	Deskjet D2560	OK	OK	OK	
HP	Deskjet D5560	OK	OK	OK	
HP	DeskJet F370	OK	OK	OK	
HP	DeskJet F380	OK	OK	OK	
HP	DeskJet F4185	OK	OK	OK	
HP	DeskJet F4280	OK	OK	OK	
HP	Deskjet F4480	OK	OK	OK	
HP	Deskjet IA 2529	OK	OK	OK	
HP	Deskjet IA 3635	OK	OK	OK	
HP	Deskjet IA 3636	OK	OK	OK	
HP	Deskjet IA 3638	OK	OK	OK	
HP	Deskjet IA Ultra 4729	OK	OK	OK	
HP	Ink Tenk 110	OK	OK	OK	
HP	Ink Tenk 115	OK	OK	OK	
HP	Laserjet Pro M401n	OK	OK	OK	
HP	Laserjet M1005 MFP	OK	OK	OK	
HP	LaserJet 1022	OK	OK	OK	
HP	LaserJet 1022N	OK	OK	OK	
HP	Laserjet 1100	OK			OK
HP	LaserJet 1160	OK	OK	OK	OK
HP	LaserJet 1200	OK	OK	OK	OK
HP	LaserJet 1220	OK	OK	OK	OK
HP	Laserjet 1300	OK	OK	OK	OK
HP	Laserjet 1320	OK	OK	OK	OK
HP	Laserjet M1522n MFP	OK	OK	OK	
HP	LaserJet 2100	OK			OK
HP	Laserjet 2200d	OK	OK	OK	OK
HP	Laserjet 2300	OK	OK	OK	OK
HP	LaserJet 2410	OK	OK	OK	OK
HP	LaserJet 2420	OK	OK	OK	OK
HP	LaserJet 2550	OK	OK	OK	OK
HP	LaserJet 3015	OK	OK	OK	OK
HP	LaserJet 3050	OK	OK	OK	
HP	LaserJet 3055	OK	OK	OK	
HP	Laserjet 3200	OK	OK	OK	OK
HP	Laserjet 3330	OK	OK	OK	OK
HP	LaserJet 3330mfp	OK	OK	OK	OK
HP	LaserJet 3380	OK	OK	OK	
HP	Laserjet 4000	OK			OK
HP	LaserJet 4050	OK			OK
HP	Laserjet 4100 /4100n	OK			OK
HP	LaserJet 4250	OK	OK	OK	OK
HP	Laserjet 4300n	OK			OK
HP	Laserjet 4300tn/dtn	OK			OK
HP	Laserjet Color 4500	OK			OK
HP	Laserjet 4650	OK	OK	OK	OK
HP	Laserjet 5100fn/tn	OK			OK
HP	Laserjet 5100le/se	OK			OK
HP	Laserjet 6P / 6L	OK			OK
HP	Laserjet 700 M712dn		OK	OK	
HP	Laserjet 8100	OK			OK
HP	Laserjet M1005	OK	OK	OK	
HP	Laserjet M1005 MFP	OK	OK	OK	
HP	Laserjet M111W	OK	OK	OK	
HP	Laserjet M141W	OK	OK	OK	
HP	Laserjet M1120 MFP	OK	OK	OK	
HP	LaserJet M1319F MFP	OK	OK	OK	
HP	Laserjet MFP 139FNW	OK	OK	OK	
HP	Laserjet MFP M72630	OK	OK	OK	
HP	Laserjet MFP M42625dn	OK	OK	OK	

HP	LaserJet P2015	OK	OK	OK	
HP	LaserJet P2035	OK	OK	OK	OK
HP	Laserjet Pro 3003dw	OK	OK	OK	
HP	Laserjet Pro 4003dn	OK	OK	OK	
HP	Laserjet Pro M127fn	OK	OK	OK	
HP	Laserjet Pro M130a	OK	OK	OK	
HP	Laserjet Pro M15W	OK	OK	OK	
HP	Laserjet Pro M1536dnf	OK	OK	OK	
HP	Laserjet Pro M26a	OK	OK	OK	
HP	Laserjet Pro M26nw	OK	OK	OK	
HP	Laserjet Pro M28	OK	OK	OK	
HP	Laserjet Pro M425dn MFP	OK	OK	OK	
HP	Laserjet Pro M428f	OK	OK	OK	
HP	Laserjet Pro M521dn	OK	OK	OK	
HP	Laserjet Pro MFP 3103fdw	OK	OK	OK	
HP	Laserjet Pro MFP 4103fdw	OK	OK	OK	
HP	Laserjet Pro MFP M236sdw	OK	OK	OK	
HP	Laserjet Enterprise M406dn	OK	OK	OK	
HP	Laserjet Enterprise M507dn	OK	OK	OK	
HP	Laserjet Enterprise M611dn	OK	OK	OK	
HP	Laserjet Enterprise MFP M430f	OK	OK	OK	
HP	Officejet J3608	OK	OK	OK	
HP	Officejet 2620	OK	OK	OK	
HP	OfficeJet 4255	OK	OK	OK	
HP	Officejet 4500	OK	OK	OK	
HP	Officejet 4610	OK	OK	OK	
HP	Officejet 4620	OK	OK	OK	
HP	Officejet 4630	OK	OK	OK	
HP	OfficeJet 5610	OK	OK	OK	
HP	Officejet J5780	OK	OK	OK	
HP	OfficeJet 6210	OK	OK	OK	
HP	OfficeJet 6310	OK	OK	OK	
HP	Officejet 6000	OK	OK	OK	
HP	Officejet 6100 eP	OK	OK	OK	
HP	Officejet 6500	OK	OK	OK	
HP	Officejet 6600	OK	OK	OK	
HP	Officejet 6700	OK	OK	OK	
HP	Officejet 7000	OK	OK	OK	
HP	Officejet 7500A	OK	OK	OK	
HP	OfficeJet 7210	OK	OK	OK	
HP	OfficeJet J4580	OK	OK	OK	
HP	Officejet J4660	OK	OK	OK	
HP	Officejet J6480	OK	OK	OK	
HP	Officejet K7100	OK	OK	OK	
HP	OfficeJet K850	OK	OK	OK	OK
HP	OfficeJet Pro K5300	OK	OK	OK	
HP	OfficeJet Pro K550	OK	OK	OK	
HP	OfficeJet Pro K8600	OK	OK	OK	
HP	Officejet Pro L7380	OK	OK	OK	
HP	Officejet Pro L7590	OK	OK	OK	
HP	Officejet Pro 6230	OK	OK	OK	
HP	Officejet Pro 6500A Plus	OK	OK	OK	
HP	Officejet Pro 6830	OK	OK	OK	
HP	Officejet Pro 7000	OK	OK	OK	
HP	Officejet Pro 8000	OK	OK	OK	
HP	Officejet Pro 8100	OK	OK	OK	
HP	Officejet Pro 8500A Plus	OK	OK	OK	
HP	Officejet Pro 8500W	OK	OK	OK	
HP	Officejet Pro 8600	OK	OK	OK	
HP	Officejet Pro 8600 Plus	OK	OK	OK	
HP	Officejet Pro 8610	OK	OK	OK	
HP	Officejet Pro 8620	OK	OK	OK	
HP	Photosmart 2610	OK	OK	OK	
HP	Photosmart 3110	OK	OK	OK	
HP	Photosmart 5510	OK	OK	OK	
HP	Photosmart 5520	OK	OK	OK	
HP	Photosmart 6510	OK	OK	OK	
HP	Photosmart 6520	OK	OK	OK	
HP	Photosmart 7150	OK	OK	OK	
HP	Photosmart 7200	OK	OK	OK	
HP	Photosmart 7510	OK	OK	OK	
HP	Photosmart 7550	OK	OK	OK	
HP	Photosmart 7660	OK	OK	OK	
HP	Photosmart 7830	OK	OK	OK	
HP	Photosmart 7900	OK	OK	OK	
HP	Photosmart 8200	OK	OK	OK	
HP	Photosmart Plus B209a	OK	OK	OK	

must disable bi-directional support

HP	Photosmart Plus B210a	OK	OK	OK	
HP	Photosmart Plus C310a	OK	OK	OK	
HP	Photosmart A520	OK	OK	OK	
HP	Photosmart B109a	OK	OK	OK	
HP	Photosmart B110a AIO	OK	OK	OK	
HP	Photosmart C309a	OK	OK	OK	
HP	Photosmart C410a	OK	OK	OK	
HP	Photosmart C3180	OK	OK	OK	
HP	Photosmart C4180	OK	OK	OK	
HP	Photosmart C4280	OK	OK	OK	
HP	Photosmart C4385	OK	OK	OK	
HP	Photosmart C4480	OK	OK	OK	
HP	Photosmart C4580	OK	OK	OK	
HP	Photosmart C5180	OK	OK	OK	
HP	Photosmart C5280	OK	OK	OK	
HP	Photosmart C5380	OK	OK	OK	
HP	Photosmart C6180	OK	OK	OK	
HP	Photosmart C6280	OK	OK	OK	
HP	Photosmart C6380	OK	OK	OK	
HP	Photosmart C7180	OK	OK	OK	
HP	Photosmart C7280	OK	OK	OK	
HP	Photosmart C8180	OK	OK	OK	
HP	Photosmart D5160	OK	OK	OK	
HP	Photosmart D5360	OK	OK	OK	
HP	Photosmart D5460	OK	OK	OK	
HP	Photosmart D7160	OK	OK	OK	
HP	Photosmart D7260	OK	OK	OK	
HP	Photosmart D7360	OK	OK	OK	
HP	Photosmart Premium C309g	OK	OK	OK	
HP	Photosmart Premium C310g	OK	OK	OK	
HP	PSC 1210	OK			
HP	PSC 1315	OK	OK	OK	
HP	PSC 1350	OK	OK	OK	
HP	PSC 1410	OK	OK	OK	
HP	PSC 1610	OK	OK	OK	
HP	PSC 2210	OK	OK	OK	
HP	PSC 2310	OK	OK	OK	
HP	Smart Tank 215	OK	OK	OK	
HP	Smart Tank 500	OK	OK	OK	
HP	Smart Tank 510	OK	OK	OK	
HP	Smart Tank 515	OK	OK	OK	
HP	Smart Tank 580	OK	OK	OK	
HP	Smart Tank 610	OK	OK	OK	
HP	Smart Tank 725	OK	OK	OK	
HP	Smart Tank 755	OK	OK	OK	
HP	Smart Tank 795	OK	OK	OK	
EPSON	Aculaser C500	OK	OK	OK	
EPSON	Aculaser C1100SE	OK	OK	OK	OK
EPSON	Aculaser C1600	OK	OK	OK	
EPSON	Aculaser C1700	OK	OK	OK	
EPSON	Aculaser C1750N	OK	OK	OK	
EPSON	Aculaser C1750W	OK	OK	OK	
EPSON	Aculaser C1900	OK	OK	OK	OK
EPSON	Aculaser C2900	OK	OK	OK	
EPSON	Aculaser C300DN	OK	OK	OK	
EPSON	Aculaser C3800	OK	OK	OK	
EPSON	Aculaser C3900N	OK	OK	OK	
EPSON	Aculaser C9100	OK	OK	OK	
EPSON	Aculaser CX16NF	OK	OK	OK	
EPSON	Aculaser CX17NF	OK	OK	OK	
EPSON	Aculaser M1400	OK	OK	OK	
EPSON	Aculaser M2010DN	OK	OK	OK	
EPSON	Aculaser M2010D	OK	OK	OK	OK
EPSON	Aculaser M2310D	OK	OK	OK	OK
EPSON	Aculaser M2310DN	OK	OK	OK	
EPSON	Aculaser M2410D	OK	OK	OK	OK
EPSON	Aculaser M2410DN	OK	OK	OK	
EPSON	Aculaser MX14	OK	OK	OK	
EPSON	Aculaser MX14NF	OK	OK	OK	
EPSON	AL-M200DN	OK	OK	OK	
EPSON	AL-M220DN	OK	OK	OK	
EPSON	AL-M310DN	OK	OK	OK	
EPSON	AL-M4000	OK	OK	OK	
EPSON	AL-M7000	OK	OK	OK	
EPSON	AL-M8000	OK	OK	OK	OK
EPSON	AL-M8200DN	OK	OK	OK	
EPSON	AL-MX200DWF	OK	OK	OK	

EPSON	B-508DN	OK	OK	OK	
EPSON	B-518DN	OK	OK	OK	
EPSON	C750	OK	OK	OK	OK
EPSON	CC-500L	OK	OK	OK	
EPSON	CL-760	OK	OK	OK	
EPSON	E-300L	OK	OK	OK	
EPSON	E-520	OK	OK	OK	
EPSON	E-720	OK	OK	OK	
EPSON	EC-01	OK	OK	OK	
EPSON	EPL 5700	OK			OK
EPSON	EPL 5700	OK			OK
EPSON	EPL 5800	OK	OK	OK	OK
EPSON	EPL 5800	OK	OK	OK	OK
EPSON	EPL 5900	OK	OK	OK	OK
EPSON	EPL 6100	OK	OK	OK	OK
EPSON	EPL 6200	OK	OK	OK	OK
EPSON	EPL N2120	OK			OK
EPSON	K100	OK	OK	OK	
EPSON	L110	OK	OK	OK	
EPSON	L120	OK	OK	OK	
EPSON	L121	OK	OK	OK	
EPSON	L200	OK	OK	OK	
EPSON	L210	OK	OK	OK	
EPSON	L220	OK	OK	OK	
EPSON	L300	OK	OK	OK	
EPSON	L310	OK	OK	OK	
EPSON	L350	OK	OK	OK	
EPSON	L355	OK	OK	OK	
EPSON	L360	OK	OK	OK	
EPSON	L365	OK	OK	OK	
EPSON	L380	OK	OK	OK	
EPSON	L385	OK	OK	OK	
EPSON	L455	OK	OK	OK	
EPSON	L485	OK	OK	OK	
EPSON	L550	OK	OK	OK	
EPSON	L555	OK	OK	OK	
EPSON	L565	OK	OK	OK	
EPSON	L605	OK	OK	OK	
EPSON	L565	OK	OK	OK	
EPSON	L655	OK	OK	OK	
EPSON	L800	OK	OK	OK	
EPSON	L805	OK	OK	OK	
EPSON	L1110	OK	OK	OK	
EPSON	L1210	OK	OK	OK	
EPSON	L1300	OK	OK	OK	
EPSON	L1455	OK	OK	OK	
EPSON	L1800	OK	OK	OK	
EPSON	L3110	OK	OK	OK	
EPSON	L3116	OK	OK	OK	
EPSON	L3150	OK	OK	OK	
EPSON	L3156	OK	OK	OK	
EPSON	L3210	OK	OK	OK	
EPSON	L3216	OK	OK	OK	
EPSON	L3250	OK	OK	OK	
EPSON	L3256	OK	OK	OK	
EPSON	L3260	OK	OK	OK	
EPSON	L3550	OK	OK	OK	
EPSON	L3556	OK	OK	OK	
EPSON	L3560	OK	OK	OK	
EPSON	L4150	OK	OK	OK	
EPSON	L4160	OK	OK	OK	
EPSON	L4260	OK	OK	OK	
EPSON	L5190	OK	OK	OK	
EPSON	L5196	OK	OK	OK	
EPSON	L5290	OK	OK	OK	
EPSON	L5590	OK	OK	OK	
EPSON	L6170	OK	OK	OK	
EPSON	L6190	OK	OK	OK	
EPSON	L6290	OK	OK	OK	
EPSON	L6490	OK	OK	OK	
EPSON	L6580	OK	OK	OK	
EPSON	L14150	OK	OK	OK	
EPSON	L15160	OK	OK	OK	
EPSON	L18050	OK	OK	OK	
EPSON	LP2500	OK	OK	OK	
EPSON	LP-7700	OK	OK	OK	
EPSON	LP-8700	OK	OK	OK	

EPSON	LP-8800C	OK	OK	OK	
EPSON	LP8900	OK	OK	OK	
EPSON	LP-9500C	OK	OK	OK	
EPSON	LQ 100	OK			OK
EPSON	LQ 1000C	OK			OK
EPSON	LQ 1170+	OK			OK
EPSON	LQ 1170C	OK			OK
EPSON	LQ 1170C+	OK			OK
EPSON	LQ 2070C	OK			OK
EPSON	LQ 2080C	OK			OK
EPSON	LQ 2090	OK			OK
EPSON	LQ 2090C	OK	OK	OK	OK
EPSON	LQ-2090CII	OK	OK	OK	OK
EPSON	LQ-2090CIIIN	OK	OK	OK	OK
EPSON	LQ 2170C	OK			OK
EPSON	LQ 2180C	OK			OK
EPSON	LQ 2190C	OK	OK	OK	OK
EPSON	LQ 2550	OK			OK
EPSON	LQ 300	OK			OK
EPSON	LQ 300+	OK			OK
EPSON	LQ 300+II	OK	OK	OK	OK
EPSON	LQ-310	OK	OK	OK	OK
EPSON	LQ 3500C	OK			OK
EPSON	LQ 570C	OK			OK
EPSON	LQ-635C	OK	OK	OK	OK
EPSON	LQ 670	OK			OK
EPSON	LQ 680	OK			OK
EPSON	LQ 680C	OK			OK
EPSON	LQ-690C	OK	OK	OK	OK
EPSON	LQ-690CII	OK	OK	OK	OK
EPSON	M105	OK	OK	OK	
EPSON	M200	OK	OK	OK	
EPSON	M205	OK	OK	OK	
EPSON	M1120	OK	OK	OK	
EPSON	M1170	OK	OK	OK	
EPSON	M2110	OK	OK	OK	
EPSON	M2120	OK	OK	OK	
EPSON	M2140	OK	OK	OK	
EPSON	M2170	OK	OK	OK	
EPSON	M3170	OK	OK	OK	
EPSON	M15140	OK	OK	OK	
EPSON	ME 320	OK	OK	OK	
EPSON	ME 340	OK	OK	OK	
EPSON	ME Office 82WD	OK	OK	OK	
EPSON	ME Office 900WD	OK	OK	OK	
EPSON	ME Office 940FW	OK	OK	OK	
EPSON	ME Office 960FWD	OK	OK	OK	
EPSON	MC-2000	OK	OK	OK	
EPSON	PictureMate PM250	OK	OK	OK	
EPSON	PLQ-20C	OK	OK	OK	
EPSON	PLQ-20CM	OK	OK	OK	
EPSON	PM-860PT	OK	OK	OK	
EPSON	PM-890C	OK	OK	OK	
EPSON	PM-920C	OK	OK	OK	
EPSON	PM-930C	OK	OK	OK	
EPSON	PM-950C	OK	OK	OK	
EPSON	PM-970C	OK	OK	OK	
EPSON	PM-980C	OK	OK	OK	
EPSON	PM-A550	OK	OK	OK	
EPSON	PM-A620	OK	OK	OK	
EPSON	PM-A650	OK	OK	OK	
EPSON	PM-A720	OK	OK	OK	
EPSON	PM-A820	OK	OK	OK	
EPSON	PM-A840	OK	OK	OK	
EPSON	PM-A850	OK	OK	OK	
EPSON	PM-A890	OK	OK	OK	
EPSON	PM-A900	OK	OK	OK	
EPSON	PM-A920	OK	OK	OK	
EPSON	PM-A940	OK	OK	OK	
EPSON	PM-A950	OK	OK	OK	
EPSON	PM-A970	OK	OK	OK	
EPSON	PM-2200C	OK	OK	OK	
EPSON	PM-3500C	OK	OK	OK	
EPSON	PM-3700C	OK	OK	OK	
EPSON	PM-4000PX	OK	OK	OK	
EPSON	PM-D800	OK	OK	OK	
EPSON	PM-D870	OK	OK	OK	

EPSON	PM-D1000	OK	OK	OK	
EPSON	PM-FA700	OK	OK	OK	
EPSON	PM-G800	OK	OK	OK	
EPSON	PM-G820	OK	OK	OK	
EPSON	PM-G850	OK	OK	OK	
EPSON	PM-G860	OK	OK	OK	
EPSON	PM-G4500	OK	OK	OK	
EPSON	PM-T960	OK	OK	OK	
EPSON	PM-T990	OK	OK	OK	
EPSON	PX-5000	OK	OK	OK	
EPSON	PX-A640	OK	OK	OK	
EPSON	PX-A740	OK	OK	OK	
EPSON	PX-G5300	OK	OK	OK	
EPSON	PX-G5100	OK	OK	OK	
EPSON	PX-G930	OK	OK	OK	
EPSON	PX-G5000	OK	OK	OK	
EPSON	PX-V780	OK	OK	OK	
EPSON	RX 510	OK	OK	OK	
EPSON	RX 530	OK	OK	OK	
EPSON	RX 590	OK	OK	OK	
EPSON	RX 630	OK	OK	OK	
EPSON	RX 690	OK	OK	OK	
EPSON	Stylus C20	OK	OK	OK	
EPSON	Stylus C40	OK	OK	OK	
EPSON	Stylus C41UX/SX	OK	OK	OK	
EPSON	Stylus C43UX	OK	OK	OK	
EPSON	Stylus C45	OK	OK	OK	
EPSON	Stylus C59	OK	OK	OK	
EPSON	Stylus C60	OK	OK	OK	OK
EPSON	Stylus C63	OK	OK	OK	OK
EPSON	Stylus C67	OK	OK	OK	OK
EPSON	Stylus C79	OK	OK	OK	
EPSON	Stylus C83	OK			OK
EPSON	Stylus C90	OK	OK	OK	
EPSON	Stylus Color 1160	OK	OK	OK	
EPSON	Stylus Color 1500	OK	OK	OK	
EPSON	Stylus Color 1520	OK	OK	OK	
EPSON	Stylus Color 400	OK			OK
EPSON	Stylus Color 600	OK			OK
EPSON	Stylus Color 670	OK	OK	OK	OK
EPSON	Stylus Color 800	OK	OK	OK	OK
EPSON	Stylus Color 810	OK	OK	OK	OK
EPSON	Stylus Color 850	OK	OK	OK	OK
EPSON	Stylus Color 900	OK	OK	OK	
EPSON	Stylus CX-1500	OK	OK	OK	
EPSON	Stylus CX-2900	OK	OK	OK	
EPSON	Stylus CX-3500	OK	OK	OK	
EPSON	Stylus CX-3700	OK	OK	OK	
EPSON	Stylus CX-3900	OK	OK	OK	
EPSON	Stylus CX-4100	OK	OK	OK	
EPSON	Stylus CX-4700	OK	OK	OK	
EPSON	Stylus CX-4900	OK	OK	OK	
EPSON	Stylus CX-5300	OK	OK	OK	
EPSON	Stylus CX-5500	OK	OK	OK	
EPSON	Stylus CX-5505	OK	OK	OK	
EPSON	Stylus CX-5900	OK	OK	OK	
EPSON	Stylus CX-6900F	OK	OK	OK	
EPSON	Stylus CX-7300	OK	OK	OK	
EPSON	Stylus CX-7800	OK	OK	OK	
EPSON	Stylus CX-8300	OK	OK	OK	
EPSON	Stylus CX-9300F	OK	OK	OK	
EPSON	Stylus Office T30	OK	OK	OK	
EPSON	Stylus Office T40W	OK	OK	OK	
EPSON	Stylus Office TX300F	OK	OK	OK	
EPSON	Stylus Office TX320F	OK	OK	OK	
EPSON	Stylus Office TX510FN	OK	OK	OK	
EPSON	Stylus Office TX600FW	OK	OK	OK	
EPSON	Stylus Office TX610FW	OK	OK	OK	
EPSON	Stylus Office T1100	OK	OK	OK	
EPSON	Stylus Photo 915	OK	OK	OK	
EPSON	Stylus Photo 1270	OK	OK	OK	OK
EPSON	Stylus Photo 1290	OK	OK	OK	
EPSON	Stylus Photo 1390	OK	OK	OK	
EPSON	Stylus Photo 2100	OK	OK	OK	
EPSON	Stylus Photo 710	OK	OK	OK	
EPSON	Stylus Photo 720	OK	OK	OK	
EPSON	Stylus Photo 790	OK	OK	OK	

EPSON	Stylus Photo 810	OK	OK	OK	OK
EPSON	Stylus Photo 830U	OK	OK	OK	
EPSON	Stylus Photo 900	OK	OK	OK	OK
EPSON	Stylus Photo 915	OK	OK	OK	
EPSON	Stylus Photo EX2	OK	OK	OK	OK
EPSON	Stylus Photo EX3	OK	OK	OK	OK
EPSON	Stylus Photo R1800	OK	OK	OK	OK
EPSON	Stylus Photo R210	OK	OK	OK	
EPSON	Stylus Photo R230	OK	OK	OK	
EPSON	Stylus Photo R250	OK	OK	OK	
EPSON	Stylus Photo R270	OK	OK	OK	
EPSON	Stylus Photo R310	OK	OK	OK	
EPSON	Stylus Photo R350	OK	OK	OK	
EPSON	Stylus Photo R2400	OK	OK	OK	
EPSON	Stylus Photo R800	OK	OK	OK	
EPSON	Stylus Photo RX430	OK	OK	OK	
EPSON	Stylus Photo RX 510	OK	OK	OK	
EPSON	Stylus Photo RX 530	OK	OK	OK	
EPSON	Stylus Photo RX 590	OK	OK	OK	
EPSON	Stylus Photo RX 630	OK	OK	OK	
EPSON	Stylus Photo RX 650	OK	OK	OK	
EPSON	Stylus Photo RX 690	OK	OK	OK	
EPSON	Stylus Photo R2880	OK	OK	OK	
EPSON	Stylus Photo TX700W	OK	OK	OK	
EPSON	Stylus Photo TX800FW	OK	OK	OK	
EPSON	Stylus Photo TX820FWD	OK	OK	OK	
EPSON	Stylus Pro 7600	OK	OK	OK	OK
EPSON	Stylus TX550W	OK	OK	OK	
EPSON	Stylus TX420W		OK	OK	
EPSON	Stylus TX410	OK	OK	OK	
EPSON	Stylus TX430	OK	OK	OK	
EPSON	Stylus TX235	OK	OK	OK	
EPSON	Stylus TX220		OK	OK	
EPSON	Stylus TX200	OK	OK	OK	
EPSON	Stylus TX210	OK	OK	OK	
EPSON	Stylus TX130	OK	OK	OK	
EPSON	Stylus TX110	OK	OK	OK	
EPSON	Stylus TX100	OK	OK	OK	
EPSON	Stylus T22	OK	OK	OK	
EPSON	Stylus T20	OK	OK	OK	
EPSON	Stylus T21	OK	OK	OK	
EPSON	Stylus Photo T50	OK	OK	OK	
EPSON	TM T70II		OK	OK	
EPSON	TM T82III		OK	OK	
EPSON	TM883 (III)	OK			OK
EPSON	WorkForce AL-MX200DWF	OK			OK
EPSON	WorkForce AL-C300N	OK	OK	OK	OK
EPSON	WorkForce AL-C500DN	OK	OK	OK	
EPSON	WorkForce AL-M200DN	OK	OK	OK	
EPSON	WorkForce AL-M200DW	OK	OK	OK	
EPSON	WorkForce AL-M220DN	OK	OK	OK	
EPSON	WorkForce AL-M300D	OK	OK	OK	
EPSON	WorkForce AL-M300DN	OK	OK	OK	
EPSON	WorkForce AL-M310DN	OK	OK	OK	
EPSON	WorkForce AL-M320DN	OK	OK	OK	
EPSON	WorkForce AL-M400DN	OK	OK	OK	
EPSON	WorkForce Pro WF-C5290	OK	OK	OK	
EPSON	WorkForce Pro WF-C5790	OK	OK	OK	
EPSON	WorkForce Pro WF-C5890	OK	OK	OK	
EPSON	WorkForce Pro WF-M5299	OK	OK	OK	
EPSON	WorkForce Pro WF-M5799	OK	OK	OK	
EPSON	WF-100	OK	OK	OK	
EPSON	WF-2521	OK	OK	OK	
EPSON	WF-2531	OK	OK	OK	
EPSON	WF-2541	OK	OK	OK	
EPSON	WF-2631	OK	OK	OK	
EPSON	WF-2651	OK	OK	OK	
EPSON	WF-2831	OK	OK	OK	
EPSON	WF-2861	OK	OK	OK	
EPSON	WF-3521	OK	OK	OK	
EPSON	WF-3541	OK	OK	OK	
EPSON	WF-3621	OK	OK	OK	
EPSON	WF-3721	OK	OK	OK	
EPSON	WF-5191	OK	OK	OK	
EPSON	WF-5621	OK	OK	OK	
EPSON	WF-6091	OK	OK	OK	
EPSON	WF-7011	OK	OK	OK	

EPSON	WF-7111	OK	OK	OK	
EPSON	WF-7211	OK	OK	OK	
EPSON	WF-7511	OK	OK	OK	
EPSON	WF-7521	OK	OK	OK	
EPSON	WF-7611	OK	OK	OK	
EPSON	WF-7711	OK	OK	OK	
EPSON	WF-8591	OK	OK	OK	
EPSON	WF-R5691	OK	OK	OK	
EPSON	WF-R8591	OK	OK	OK	
EPSON	WP-4531	OK	OK	OK	
EPSON	WP-4091	OK	OK	OK	
EPSON	XP30	OK	OK	OK	
EPSON	XP-102	OK	OK	OK	
EPSON	XP-202	OK	OK	OK	
EPSON	XP-225	OK	OK	OK	
EPSON	XP-245	OK	OK	OK	
EPSON	XP-302	OK	OK	OK	
EPSON	XP-402	OK	OK	OK	
EPSON	XP-422	OK	OK	OK	
EPSON	XP-442	OK	OK	OK	
EPSON	XP-701	OK	OK	OK	
EPSON	XP-721	OK	OK	OK	
EPSON	XP-2101	OK	OK	OK	
EPSON	XP-4101	OK	OK	OK	
EPSON	XP-15010	OK	OK	OK	
EPSON	GP-C830	OK	OK	OK	OK
EPSON	GP-M800	OK	OK	OK	OK
EPSON	GP-C800	OK	OK	OK	OK
EPSON	AL-C500	OK	OK	OK	
EPSON	AL-C9300	OK	OK	OK	
EPSON	TM-U220	Parallel Only USB Fail	Fail	Fail	OK
Canon	BJ-330	OK			OK
Canon	BJC-4200	OK			OK
Canon	BJC-4300	OK			OK
Canon	BJC-4500	OK			OK
Canon	BJC-4550	OK			OK
Canon	BJC-4600	OK			OK
Canon	BJF9000	OK	OK	OK	
Canon	D380	OK	OK	OK	
Canon	E400	OK	OK	OK	
Canon	E600	OK	OK	OK	
Canon	I-255	OK	OK	OK	
Canon	I-355	OK	OK	OK	
Canon	I-450	OK	OK	OK	
Canon	I-455	OK	OK	OK	
Canon	I-470D	OK	OK	OK	
Canon	I-475D	OK	OK	OK	
Canon	I-550	OK	OK	OK	
Canon	I-560	OK	OK	OK	
Canon	I-850	OK	OK	OK	
Canon	I-865	OK	OK	OK	
Canon	I-950	OK	OK	OK	
Canon	I-6100	OK	OK	OK	OK
Canon	I-6500	OK	OK	OK	OK
Canon	I-9100	OK	OK	OK	
Canon	I-9950	OK	OK	OK	
Canon	IX4000	OK	OK	OK	
Canon	IX5000	OK	OK	OK	
Canon	IX6770	OK	OK	OK	
Canon	Imageclass D380	OK	OK	OK	
Canon	imageCLASS LBP223dw	OK	OK	OK	
Canon	imageCLASS LBP226dw	OK	OK	OK	
Canon	imageCLASS LBP228x	OK	OK	OK	
Canon	imageCLASS M236n	OK	OK	OK	
Canon	imageCLASS MF232W	OK	OK	OK	
Canon	imageCLASS MF429x	OK	OK	OK	
Canon	MP-160	OK	OK	OK	
Canon	MP-638	OK	OK	OK	
Canon	MP 770	OK	OK	OK	
Canon	PIXMA G3000	OK	OK	OK	
Canon	PIXMA MX318	OK	OK	OK	
Canon	PIXMA MX320	OK	OK	OK	
Canon	PIXMA MX357	OK	OK	OK	
Canon	PIXMA MX377	OK	OK	OK	
Canon	PIXMA MX397	OK	OK	OK	
Canon	PIXMA MX416	OK	OK	OK	

Canon	PIXMA MX457	OK	OK	OK	
Canon	PIXMA MX477	OK	OK	OK	
Canon	PIXMA MX497	OK	OK	OK	
Canon	PIXMA MX527	OK	OK	OK	
Canon	PIXMA MX700	OK	OK	OK	
Canon	PIXMA MX727	OK	OK	OK	
Canon	PIXMA MX927	OK	OK	OK	
Canon	PIXUS IP2500	OK	OK	OK	
Canon	PIXUS 990i	OK	OK	OK	
Canon	PIXMA E510	OK	OK	OK	
Canon	PIXMA iP1000	OK	OK	OK	
Canon	PIXMA iP1188	OK	OK	OK	
Canon	PIXMA iP1700	OK	OK	OK	
Canon	PIXMA iP1800	OK	OK	OK	
Canon	PIXMA Ip1880	OK	OK	OK	
Canon	PIXMA Ip1980	OK	OK	OK	
Canon	PIXMA Ip2000	OK	OK	OK	
Canon	PIXMA Ip2870	OK	OK	OK	
Canon	PIXMA iP3000	OK	OK	OK	
Canon	PIXMA Ip3300	OK	OK	OK	
Canon	PIXMA Ip3500	OK	OK	OK	
Canon	PIXMA Ip3680	OK	OK	OK	
Canon	PIXMA iP4000	OK	OK	OK	OK
Canon	PIXMA Ip4200	OK	OK	OK	
Canon	PIXMA Ip4300	OK	OK	OK	
Canon	PIXMA Ip4500	OK	OK	OK	
Canon	PIXMA Ip4760	OK	OK	OK	
Canon	PIXMA Ip4970	OK	OK	OK	
Canon	PIXMA Ip5000	OK	OK	OK	
Canon	PIXMA Ip6000	OK	OK	OK	
Canon	PIXMA Ip7270	OK	OK	OK	
Canon	PIXMA Ip8500	OK	OK	OK	
Canon	PIXMA Ip8770	OK	OK	OK	
Canon	PIXMA MG2270	OK	OK	OK	
Canon	PIXMA MG2470	OK	OK	OK	
Canon	PIXMA MG2570	OK	OK	OK	
Canon	PIXMA MG2580S	OK	OK	OK	
Canon	PIXMA MG2970	OK	OK	OK	
Canon	PIXMA MG3070	OK	OK	OK	
Canon	PIXMA MG3077	OK	OK	OK	
Canon	PIXMA MG3170	OK	OK	OK	
Canon	PIXMA MG3270	OK	OK	OK	
Canon	PIXMA MG3570	OK	OK	OK	
Canon	PIXMA MG3670	OK	OK	OK	
Canon	PIXMA MG3680	OK	OK	OK	
Canon	PIXMA MG4270	OK	OK	OK	
Canon	PIXMA MG5470	OK	OK	OK	
Canon	PIXMA MG5570	OK	OK	OK	
Canon	PIXMA MG5670	OK	OK	OK	
Canon	PIXMA MG6170	OK	OK	OK	
Canon	PIXMA MG6270	OK	OK	OK	
Canon	PIXMA MG6370	OK	OK	OK	
Canon	PIXMA MG7170	OK	OK	OK	
Canon	PIXMA MG7570	OK	OK	OK	
Canon	PIXMA MP110	OK	OK	OK	
Canon	PIXMA MP130	OK	OK	OK	
Canon	PIXMA MP145	OK	OK	OK	
Canon	PIXMA MP150	OK	OK	OK	
Canon	PIXMA MP180	OK	OK	OK	
Canon	PIXMA MP237	OK	OK	OK	
Canon	PIXMA MP258	OK	OK	OK	
Canon	PIXMA MP288	OK	OK	OK	
Canon	PIXMA MP450	OK	OK	OK	
Canon	PIXMA MP730	OK	OK	OK	
Canon	PIXMA MP780	OK	OK	OK	
Canon	PIXMA MP830	OK	OK	OK	
Canon	PIXMA TS3170	OK	OK	OK	
Canon	PIXMA TS3180	OK	OK	OK	
Canon	PIXMA TS5070	OK	OK	OK	
Canon	PIXMA TS8170	OK	OK	OK	
Canon	S-200SPX	OK	OK	OK	
Canon	S-520	OK			OK
Lexmark	C720	OK			OK
Lexmark	E230	OK	OK	OK	
Lexmark	E322	OK	OK	OK	OK
Lexmark	Optra S1250	OK			OK
Lexmark	P4350	OK	OK	OK	

Lexmark	P6250	OK	OK	OK	
Lexmark	T420	OK	OK	OK	OK
Lexmark	T620	OK	OK	OK	OK
Lexmark	W812	OK	OK	OK	OK
Lexmark	Z42	OK	OK	OK	
Lexmark	Z43	OK	OK	OK	OK
Lexmark	Z45	OK	OK	OK	
Lexmark	Z55	OK	OK	OK	OK
Lexmark	Z515	OK	OK	OK	OK
Lexmark	Z615	OK	OK	OK	
Lexmark	Z705	OK	OK	OK	OK
FUJI Xerox	Able 3321	OK			OK
FUJI Xerox	DL700	OK			OK
FUJI Xerox	DL900	OK			OK
FUJI Xerox	DL-3400	OK			OK
FUJI Xerox	DL-3800	OK			OK
FUJI Xerox	DL-3850	OK			OK
FUJI Xerox	DL-5800	OK			OK
FUJI Xerox	DL-6400Pro	OK			OK
FUJI Xerox	DL-6800	OK			OK
FUJI Xerox	DocuPrint 205	OK	OK	OK	OK
FUJI Xerox	DocuPrint 2050	OK	OK	OK	OK
FUJI Xerox	DocuPrint 240A	OK	OK	OK	
FUJI Xerox	DocuPrint C1110B	OK	OK	OK	
FUJI Xerox	DocuPrint C3055	OK	OK	OK	
FUJI Xerox	DocuPrint C3055dx	OK	OK	OK	
FUJI Xerox	DocuPrint C4350	OK	OK	OK	
FUJI Xerox	DocuPrint C5005d	OK	OK	OK	
FUJI Xerox	DocuPrint CM205 f	OK	OK	OK	
FUJI Xerox	DocuPrint CP105 b	OK	OK	OK	
FUJI Xerox	DocuPrint CP305d	OK	OK	OK	
FUJI Xerox	DocuPrint P205 b	OK	OK	OK	
FUJI Xerox	DocuPrint P215 b	OK	OK	OK	
FUJI Xerox	DocuPrint P255 d	OK	OK	OK	
FUJI Xerox	DocuPrint M115w	OK	OK	OK	
FUJI Xerox	DocuPrint M115z	OK	OK	OK	
FUJI Xerox	DocuPrint M205 b	OK	OK	OK	
FUJI Xerox	DocuPrint M205 f	OK	OK	OK	
FUJI Xerox	DocuPrint M205 fw	OK	OK	OK	
FUJI Xerox	DocuPrint P115w	OK	OK	OK	
FUJI Xerox	FP 410	OK			OK
FUJI Xerox	Jet Wind 500C	OK			OK
FUJI Xerox	Phaser 3310	OK	OK	OK	OK
FUJI Xerox	PP 10	OK			OK
Konica Minolta	Bizhub 423		OK	OK	
Konica Minolta	Di 152	OK			OK
Konica Minolta	Di 200/Di 250/Di 251	OK			OK
Konica Minolta	magicolor 2450	OK	OK	OK	OK
Konica Minolta	magicolor 5450	OK	OK	OK	OK
Konica Minolta	magicolor 7300	OK	OK	OK	
Konica Minolta	Magicolor 7300	OK	OK	OK	
Konica Minolta	PagePro 1350W	OK	OK	OK	
Konica Minolta	PagePro 9100	OK	OK	OK	
Samsung	CLP-315	OK	OK	OK	
Samsung	CLP-500	OK	OK	OK	OK
Samsung	CLP-510	OK	OK	OK	OK
Samsung	CLP-620ND	OK	OK	OK	
Samsung	CLP-661NDK	OK	OK	OK	
Samsung	CLP-670NDK	OK	OK	OK	
Samsung	CLP-680ND	OK	OK	OK	
Samsung	CLP-775N	OK	OK	OK	
Samsung	CLX2160	OK	OK	OK	
Samsung	ML-1510/1710	OK	OK	OK	OK
Samsung	ML-1520	OK	OK	OK	
Samsung	ML-1660	OK	OK	OK	
Samsung	ML-1710	OK	OK	OK	
Samsung	ML-1750	OK	OK	OK	OK
Samsung	ML-1915	OK	OK	OK	
Samsung	ML-2010	OK	OK	OK	
Samsung	ML-2165W	OK	OK	OK	
Samsung	ML-2250	OK	OK	OK	OK
Samsung	ML-2550	OK	OK	OK	OK
Samsung	ML-2580N	OK	OK	OK	
Samsung	ML-2580NK	OK	OK	OK	
Samsung	ML-3471ND	OK	OK	OK	OK
Samsung	ML-4555N	OK	OK	OK	
Samsung	ML-5010ND	OK	OK	OK	

<b>Samsung</b>	ML-5015ND	OK	OK	OK	
<b>Samsung</b>	ML-8951N	OK	OK	OK	
<b>Samsung</b>	SL-M2620ND	OK	OK	OK	
<b>Samsung</b>	SCX-4016	OK	OK	OK	OK
<b>Samsung</b>	SCX-4100/4106/4116/4216F	OK	OK	OK	OK
<b>Samsung</b>	SRP 270	OK			OK
<b>Samsung</b>	Xpress SL-M2020	OK	OK	OK	
<b>Samsung</b>	Xpress SL-M2020W	OK	OK	OK	
<b>Samsung</b>	ProXpress SL-M3820ND	OK	OK	OK	
<b>Panasonic</b>	KX-MB1500TW	OK	OK	OK	
<b>Panasonic</b>	KX-MB1520TW	OK	OK	OK	
<b>Panasonic</b>	KX-MB1530TW	OK	OK	OK	
<b>Panasonic</b>	KX-P1121	OK			OK
<b>Panasonic</b>	KX-P1123	OK			OK
<b>Panasonic</b>	KX-P1124	OK			OK
<b>Panasonic</b>	KX-P1624	OK			OK
<b>Panasonic</b>	KX-P6500	OK			OK
<b>TOSHIBA</b>	Estudio-25	OK			OK
<b>NEC</b>	NEC P2200	OK			OK
<b>NEC</b>	NEC P3200	OK			OK
<b>NEC</b>	NEC P5300	OK			OK
<b>NEC</b>	NEC P8000	OK			OK
<b>IBM</b>	IBM InforP 20	OK			OK
<b>IBM</b>	InfoP 1116	OK	OK	OK	OK
<b>IBM</b>	InfoP 1312	OK	OK	OK	OK
<b>IBM</b>	InfoP 1316	OK	OK	OK	OK
<b>IBM</b>	InfoP 1332	OK	OK	OK	OK
<b>IBM</b>	InfoP 1412	OK	OK	OK	OK
<b>Star</b>	NX-2420				OK
<b>Sharp</b>	AR-255	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-265FG	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-M160(AR-NB2)	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-M205	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-M207	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-M235	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-M275	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-M350	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-M400	OK(Parallel only)			OK(Parallel only)
<b>Sharp</b>	AR-M450	OK(Parallel only)			OK(Parallel only)
<b>RICOH</b>	NF3570	OK			OK
<b>RICOH</b>	Afcio MP 1600	OK	OK	OK	
<b>RICOH</b>	Afcio MP 3350	OK	OK	OK	
<b>RICOH</b>	Afcio MP 5001	OK	OK	OK	
<b>RICOH</b>	Afcio MP 6002	OK	OK	OK	
<b>RICOH</b>	Afcio MP 7502	OK	OK	OK	
<b>RICOH</b>	Afcio MP 9002	OK	OK	OK	
<b>RICOH</b>	Afcio MP C2030	OK	OK	OK	
<b>RICOH</b>	Afcio MP C2050	OK	OK	OK	
<b>RICOH</b>	Afcio MP C3001	OK	OK	OK	
<b>RICOH</b>	Afcio MP C3504		OK	OK	
<b>RICOH</b>	Afcio MP C4000	OK	OK	OK	
<b>RICOH</b>	Afcio MP C5501A	OK	OK	OK	
<b>RICOH</b>	Afcio MP C5000	OK	OK	OK	
<b>RICOH</b>	Afcio SP 3510SF	OK	OK	OK	
<b>RICOH</b>	Afcio SP C420DN	OK	OK	OK	
<b>RICOH</b>	Gestetner MP 2001SP	OK	OK	OK	
<b>RICOH</b>	Gestetner MP 2501SP	OK	OK	OK	
<b>RICOH</b>	Gestetner MP 2554SP	OK	OK	OK	
<b>RICOH</b>	Gestetner MP 3054SP	OK	OK	OK	
<b>RICOH</b>	Gestetner MP 3554SP	OK	OK	OK	
<b>RICOH</b>	Gestetner MP 4054SP	OK	OK	OK	
<b>RICOH</b>	Gestetner MP 5054SP	OK	OK	OK	
<b>RICOH</b>	Gestetner MP 6054SP	OK	OK	OK	
<b>RICOH</b>	MP C2003SP	OK	OK	OK	
<b>RICOH</b>	MP C2503SP	OK	OK	OK	
<b>RICOH</b>	MP C3003SP	OK	OK	OK	
<b>RICOH</b>	MP C3503SP	OK	OK	OK	
<b>RICOH</b>	MP C4503SP	OK	OK	OK	
<b>RICOH</b>	MP C2003SP	OK	OK	OK	

Brother	MFC 1815	OK	OK	OK	
Brother	MFC 1910W	OK	OK	OK	
Brother	MFC 4800	OK	OK	OK	OK
Brother	MFC 4800J	OK	OK	OK	OK
Brother	MFC 6800	OK	OK	OK	OK
Brother	MFC 7220	OK	OK	OK	OK
Brother	MFC 7420	OK	OK	OK	OK
Brother	MFC 7820N	OK	OK	OK	OK
Brother	MFC 8840D	OK	OK	OK	OK
Brother	MFC 210C	OK	OK	OK	
Brother	MFC 240C	OK	OK	OK	
Brother	MFC-J200	OK	OK	OK	
Brother	MFC-J2320	OK	OK	OK	
Brother	MFC-J3520	OK	OK	OK	
Brother	MFC-J430W	OK	OK	OK	
Brother	MFC-J825DW	OK	OK	OK	
Brother	DCP-1510	OK	OK	OK	
Brother	DCP-1511	OK	OK	OK	
Brother	DCP-J100	OK	OK	OK	
Brother	DCP-J105	OK	OK	OK	
Brother	DCP-7030	OK	OK	OK	
Brother	DCP-L2540DW	OK	OK	OK	
Brother	DCP-T520w	OK	OK	OK	
Brother	HL-1110	OK	OK	OK	
Brother	HL-1210W	OK	OK	OK	
Brother	HL-1260	OK			OK
Brother	HL-2040	OK			
Brother	HL-2140	OK	OK	OK	
Brother	HL-2170W	OK	OK	OK	
Brother	HL-2240D	OK	OK	OK	
Brother	HL-L2320D	OK	OK	OK	
Brother	HL-L2380dw	OK	OK	OK	
Brother	HL-L2395dw	OK	OK	OK	
Brother	HL-L2460dw	OK	OK	OK	
Brother	HL-3170CDW	OK	OK	OK	
Brother	HL-L5210dn	OK	OK	OK	
Brother	HL-L5210dw	OK	OK	OK	
Brother	HL-L5215dn	OK	OK	OK	
Brother	HL-L6210dw	OK	OK	OK	
Brother	HL-L6400dw	OK	OK	OK	
Brother	HL-L6415dw	OK	OK	OK	
Brother	IntelliFax 2820	OK	OK	OK	
OKI	Microline 391				OK
	Microline 5100FB				OK
	B4350	OK	OK	OK	OK
	ES5112	OK	OK	OK	
MITAC	MP-6600C				OK
BENQ	BENQ CM3000	OK	OK	OK	
Avision	MF 3200	OK	OK	OK	
	MF 3230	OK	OK	OK	
Citizen	GSX230	OK			OK
DOCUJET	1610F	OK	OK	OK	OK
	UA1610	OK	OK	OK	OK
FUTEK	F8000	OK			OK
	F9000	OK			OK
	F70	OK			OK
	F80	OK			OK
	F84+	OK			OK
	F86+	OK			OK
	F90	OK			OK
	F93	OK			OK
	F94	OK			OK
	F95	OK			OK
F96	OK			OK	
F97	OK	OK	OK	OK	
Kyocera	FS-1010	OK	OK	OK	OK
	FS-1010KX	OK	OK	OK	
	FS-1020	OK	OK	OK	OK
	FS-1920	OK	OK	OK	OK
	FS-2000D	OK	OK	OK	OK
	FS-820	OK	OK	OK	OK
	FS-920	OK	OK	OK	OK
	FS-6020	OK	OK	OK	OK
	FS-6026	OK	OK	OK	OK
	ECOSYS M2540dn	OK	OK	OK	
ECOSYS M2635dn	OK	OK	OK		
ECOSYS P-3045dn	OK	OK	OK		

	ECOSYS P-3050dn	OK	OK	OK	
	ECOSYS P-3055dn	OK	OK	OK	
	TASKalfa 180	OK	OK	OK	
	TASKalfa 180GX	OK	OK	OK	
	TASKalfa 2552ci	OK	OK	OK	
	TASKalfa 3212	OK	OK	OK	
<b>TSC</b>	TC200	OK			
	TTP-245+	OK			OK
	TTP-343+	OK	OK	OK	
	TDP-225	OK	OK	OK	
	TTP-2410M	OK			OK
	TTP-243E	OK			OK
	TTP-244+	OK	OK	OK	
	TTP-244CE	OK	OK	OK	
	TTP-245C	OK	OK	OK	
	TTP-247	OK			OK
	TTP-342M+	OK			OK
	TTP-344M	OK			OK
TTP-344M+	OK			OK	
TTP-345				OK	
<b>Zebra</b>	S4M				OK
	ZP450	OK	OK	OK	
	ZP500 Plus	OK	OK	OK	
	ZT230	OK	OK	OK	
<b>LEDOMARDS</b>	LP-8000A		OK	OK	
	LP-7800IV		OK	OK	
	LP-3000		OK	OK	
	LP-2000		OK	OK	
	LP-1000		OK	OK	
	LP-7580	OK			OK
	LP-7800	OK			OK
	LP-7800III	OK			OK
LP-8000/8000S	OK			OK	
<b>ARGOX</b>	CP-3140L	OK			
	IX4-350		OK	OK	
	X-3200	OK	OK	OK	
<b>SATO</b>	CL412E	OK			OK
	CG408	OK			OK
	CL408e	OK			OK
<b>RING</b>	412PEI+	OK	OK	OK	
<b>HPRT</b>	SL41	OK	OK	OK	
<b>Xprinter</b>	XP-490B	OK	OK	OK	

Only support parallel

Only support parallel

Only support parallel

Only support parallel

Only support parallel

Only support parallel

Only support parallel

Only support parallel

Only support parallel

Only support parallel

Only support parallel

Only support USB

Only support parallel