DIGITUS®

Adattatore USB 2.0 a doppia banda 11 AC 600 Mbps



Guida di installazione rapida

DN-70565

Installazione del driver

Vi preghiamo di seguire le seguenti istruzioni per installare il vostro nuovo adattatore Wi-Fi USB:

- 1. Inserire la scheda di rete USB wireless in una porta USB 2.0. di un computer acceso. Non applicare forza eccessiva per inserire l'adattatore; se è bloccato, capovolgere l'adattatore e riprovare.
- 2. Il seguente messaggio apparirà sul vostro computer, cliccare su "Cancel / Close".

U Driver Software Installation		
Installing device driver soft	ware	
802.11 n WLAN	Waiting for user input	
		Class
		Close

Windows 7 / 8 / 10

 Inserire il CD driver nel CD-ROM. La schermata per l'esecuzione automatica dovrebbe comparire in basso, altrimenti clicchare due volte su "<u>autorun.exe</u>" su CD.

DIGITUS®	7		- ×
	Install Driver		
	Exit		

Cliccare su "Install Driver" per avviare la procedura di installazione

4. Descrizioni di installazione mostrate. Cliccare su "Next" per continuare



 Una volta terminata l'installazione il compute chiederà di essere riavviato, cliccando "<u>Finish</u>" consentiete il riavvio del computer per concludere l'installazione dei file del driver



6. Inserite la scheda di rete wireless USB nella porta USB 2.0 del computer, il sistema rileverà il nuovo hardware e installerà automaticamente i driver.



Dopo aver finito l'installazione, cliccate sugli strumenti dell'adattatore dalla vostra barra di avvio o dalla cartella programmi. Cliccare su "<u>available</u> <u>networks</u>", selezionate il punto di accesso wireless a cui desiderate collegarvi e premete il tasto "<u>Add to Profile</u>".

REALTEK 11n USB W	ireless LAN Utility	/				
Refresh(R) Mode(M) Abou	it(A)					
🖃 🍃 MyComputer	General Profile A	vailable Network Statu:	s Statistics V	Vi-Fi Protect Setup		
	Available Netwo	rk(s)				
	SSID	Channel	Encryption	Network Authentication	Signal	1
	1000 1000 1000 1000 1000 1000 1000 100	1	AES	WPA Pre-Shared Key	88%	Tr
	1 ³⁰ NETCORE	1	None	Unknown	42%	Ir
	I [™] HLY3F	6	TKIP	WPA Pre-Shared Key	26%	Ir
	1, QA300M	6	None	Unknown	58%	Ir
	1" WR2880	6	None	Unknown	8% 600	Ir Tr
	1 [°] All-Lirik	11	NONE	Unknown WP& Pre-Shared Key	92%	1r Tr
	<	III				>
	Note Double click	Refresh k on item to join/creat	e profile.	Add to Profile		
✓ Show Tray Icon Radio Off		Disable AcWindows	lapter Zero Config		Clos	•

8. Inserire le informazioni di sicurezza se necessario, poi cliccare su "OK" per connettervi alla rete wireless.

Profile Name: HLY96C	802.1x configure
Network Name(SSID): HLY96C	EAP TYPE :
	GTC
	Tunnel : Privision Mode :
This is a computer-to-computer(ad hoc) network; wireless access points are not used.	
Channel: 1 (2412MHz) 💙	Username :
Wireless network security	
This network requires a key for the following:	Identity :
Network Authentication: WPA-PSK	
Data encryption: AES 🗸 🗸	Domain :
ASCII	Password :
Key index (advanced): 1 🗸	Certificate :
Network key:	
*******	PAC : Auto Select PAC
Confirm network key:	

9. Connesso. Compare lo schermo con lo stato.

🙁 REALTEK 11n USB Wireless LAN Utility		
Refresh(R) Mode(M) Abou	t(A)	
Builden	General Profile Available Network Status Statistics Wi-Fi Protect Setup	
A VEST CEX WITCO	Status: Associated	
	Shaadi Ty:150 Mhns Ry:150 Mhns	
	Type: Infrastructure	
	SSID: HI VOSC	
	531D, HE190C	
	Signal Strength: 74%	
	Link Quality: 99%	
	- Network Address	
	Mac address: DD:ED:4C:71:0D:01	
	IP Address: 192.168.1.139	
	Subnet Mask: 255.255.255.0	
	Gateway:	
	ReNew IP	
	Disable Adapter	