



300 Mbps Wireless Repeater / Access Point, 2.4 GHz + USB Charging Port



Quick Installation Guide DN-7072

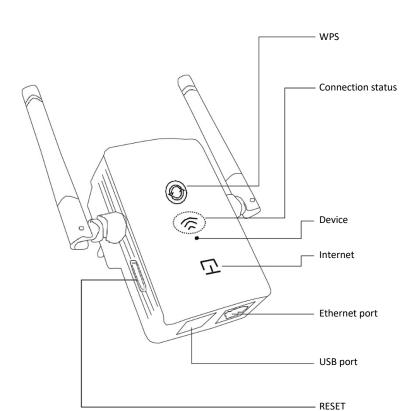

 Press this button and the WPS button of end device within 2 minutes, then connect immediately,



| | ON | OFF | Blink |
|---|---|------------------------------------|----------------|
| 0 | Device is working well | Power-on self-test or device error | WPS in process |
| | Device can not be connected with internet | Device is connected with internet | |

- 1. For connect to Ethernet device (or)
- 2. Connect to uplink switch / router to become AP mode

For power charge DC 5V 500mA

Press this button for 5 seconds to restore to factory setting

Getting started

1. Plug into the outlet (near the router)



2. Join the wifi SSID:

WIRELESS-XXXX by mobile phone.



AP mode settings (Alternative)

with a computer. (Default ID /password: admin)

3. Scan the below QR code or enter 192.168.9.1 at address bar, then input Login: admin and Password: admin, you will get into the setup page.



Login A login and password are required for http://192.168.9.1 The connection to this website is not Login Password Cancel Login


•

Encrypt WPA2-PSK

4. Select the language and click "Enter".



5. After entering the setting page, just select your home wifi router and input your home wifi router password (change ssid and password of extender if need), then click "Next".

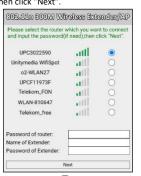

all 3. Click on Wireless Settings and set up a new ID and password (8 digits)

4. Press "Save above settings and reboot"

ChinaNet-2.4G-BB60



1. Login web UI with web browser by entering http://wireless.repeater or IP 192.168.9.1

2. Click on the settings button on the right corner. (This is not supported by smart phone)

802.11n 300M Wireless Extender/AP

c0:b8:e6:f4:8d:2f

5. Connect network uplink and wait for Internet LED red light off.

Technical Description

Frequency Range: 2412 to 2472 MHz Transmission Power: < 20 dBm Hardware Version: V1.2 Software Version: V3.4.11

password: admin. How do change SSID, password?

After entering the setting page, you can modify any SSID and password you want in the text box. Please click "Save above setting and reboot" after you complete the modification.

How do go back to factory setting?

Please hold the Reset Button for 5 seconds to reset the device.

Hereby Assmann Electronic GmbH, declares that the Declaration of Conformity is part of the shipping content. If the Declaration of Conformity is missing, you can request it by post under the below mentioned manufacturer address.

www.assmann.com Assmann Electronic GmbH Auf dem Schüffel 3 58513 Lüdenscheid Germany



6. Now you can join it to enjoy the internet. 802.11n 800M Wireless Extender/AP

Please do not power off! This device will reboot(it will cause the setup page can not be opened)! lease wait 1 minute and check the LED on the pane The red LED light off, you have connected to the router and can join internet.

Frequently asked and answers

How do enter setup page again? You can enter the setting page at

anytime. (In case you can't enter, have other methods: Re-plug the device and power it, on, use your mobile phone to connect SSID (WIRELESS-XXXX) and none password. Then input http://wireless.repeater to enter into

setup page, input username: admin and