 


**ednet.**

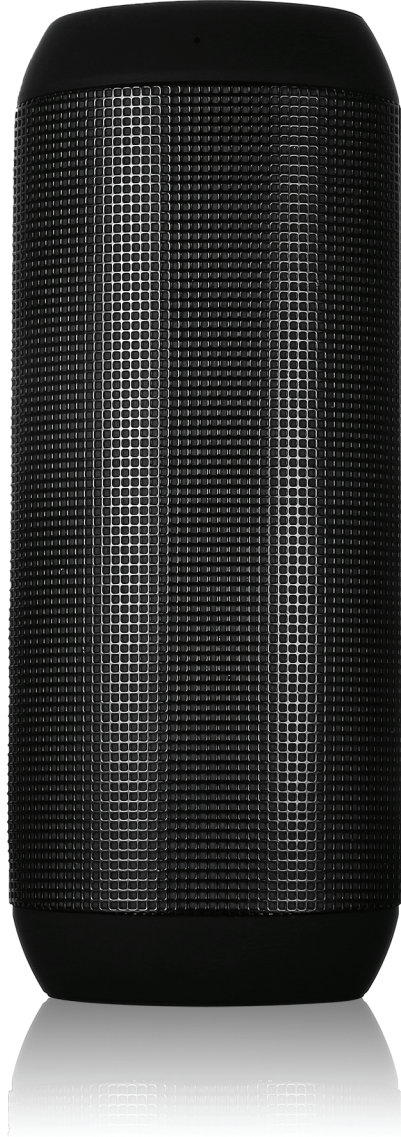

# **Sonar LED Bluetooth<sup>®</sup> Speaker**

**User Manual**  
**33041**

## **Important Safety Instructions**

- ◆ Keep speaker away from water and other liquids.
- ◆ Keep speaker away from any source of heat.
- ◆ Adjust the volume to a suitable level for avoiding to damage your hearing, or the unit itself.
- ◆ If you do not operate the speaker for a long time, please charge battery once a month, in order to prevent the lithium battery from being damaged.

## **Features**

### **1. Five Multi-colored LED Themes**

Full spectrum light themes matching with your music

### **2. Bluetooth Music and Mobile Hands-free Function**

Bluetooth 4.0 stereo music playing, support mobile hands-free function.

### **3. NFC (Near Field Communication)**

One touch easy pairing with your NFC Smartphone

### **4. Aux In**

Work as the external speaker by connecting to the audio source of computer, mobile, PSP/MP3/MP4 etc.

### **5. USB Sound card & Card reader**

USB Sound Card, card reader and charging functions can be achieved via the same USB cable

## **Technical Data**

**Voltage:** DC 5V

**Impedance:** 4Ω

**Output:** 2 \* 3.5W

**Aux in Jack:** 3.5mm

 
 
**Net Weight:** 444g

**Size:** 184.7mm\* 73.3mm\* 81.0mm

## **Package Contents**



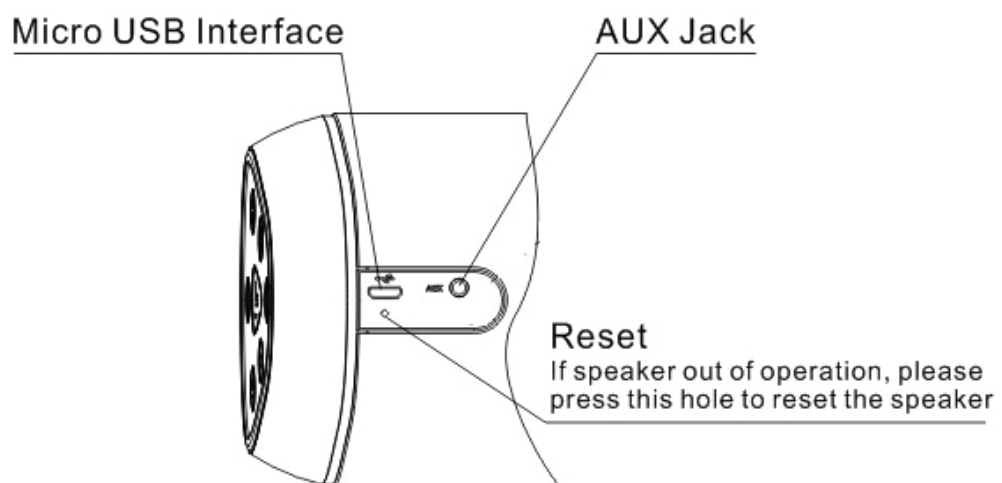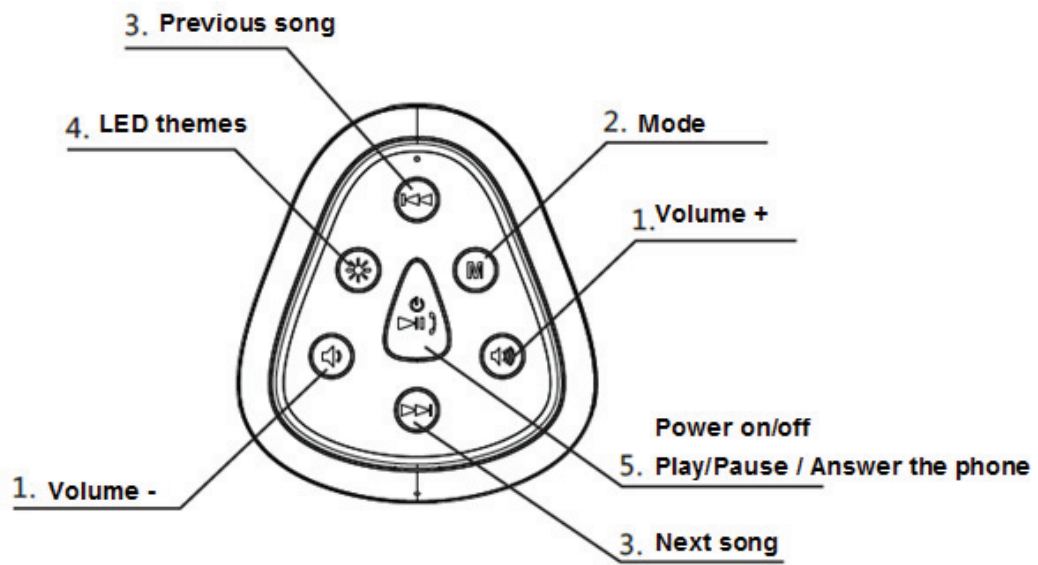

- LED Bluetooth Speaker \* 1
- Micro USB Cable \* 1
- User Manual \* 1
- 3.5mm audio cable \* 1

## Slot and Keys



## Quick Start



### 1. /

Short press the  /  buttons to decrease / increase the volume gradually. Long press the  /  buttons to decrease / increase the volume continuously.

### 2. **M**

Short press the **M** button to switch the mode of Bluetooth/ AUX In

### 3. /




Under music playing mode, short press the  /  buttons to switch to the previous / next song.

Long press the  /  buttons for previous/next folder.

### 4.

Short press to switch the LED themes

### 5.

Long press the  button and hold for 2 seconds to power on the speaker, the Working Indicator Light will be blue. Long press the  button to power off the speaker. Short press the  button to pause/play/mute/answer the phone/end up the phone

### 6.

Pressing the light and the volume buttons simultaneously, you can choose the level of illumination: no lighting, level 1, level 2 and level 3.

## Instructions

### 1. **Bluetooth**

 
#### (1) Bluetooth Paired

Press the **M** button to enter the Bluetooth mode. Then please turn on the Bluetooth mode with your mobile or other devices for pairing Ednet LED Light Bluetooth speaker. The mobile phone will display to found the “**33041**”, please connect it. (The speaker will voice “Device paired” when connecting).

#### (2) **NFC Function**

(It requires the mobile has the NFC function and the speaker need under Bluetooth mode)

Turn on the mobile’s NFC function and make the mobile touch the speaker’s NFC area. The mobile will remind you to pair with the Bluetooth device. Choose yes to complete the pairing.

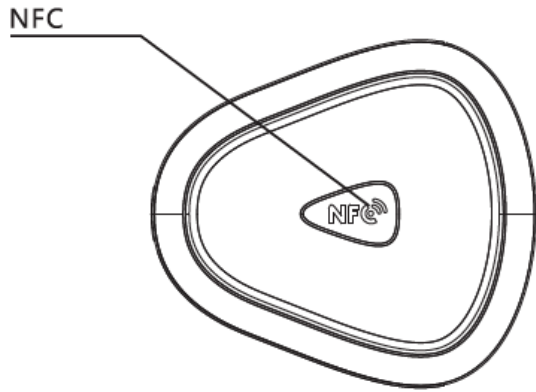




### (3) **Bluetooth Music**

Please turn on the mobile or other devices' music player, and speaker will play the selected music.

### (4) **Mobile Hands-free**

Under pairing, using phone to call, it can enter the Hands-free status.

When a mobile call comes in, short press the  button to pick up the phone, re-press the  button to end up the call. Press the  button twice and speaker will re-dial the last telephone number.

## 2. **LED Themes**

Short press the  to switch the LED themes, there are five different LED themes.



Club



 
Equalize



Groove



Rainbow

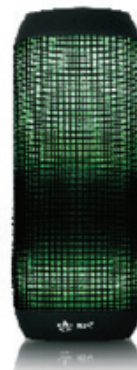


Meteor

Please note: The Club and Equalize themes only display when music playing

### 3. Gravity sensor

 At Club and Equalize themes, the speaker can support gravity sensor.

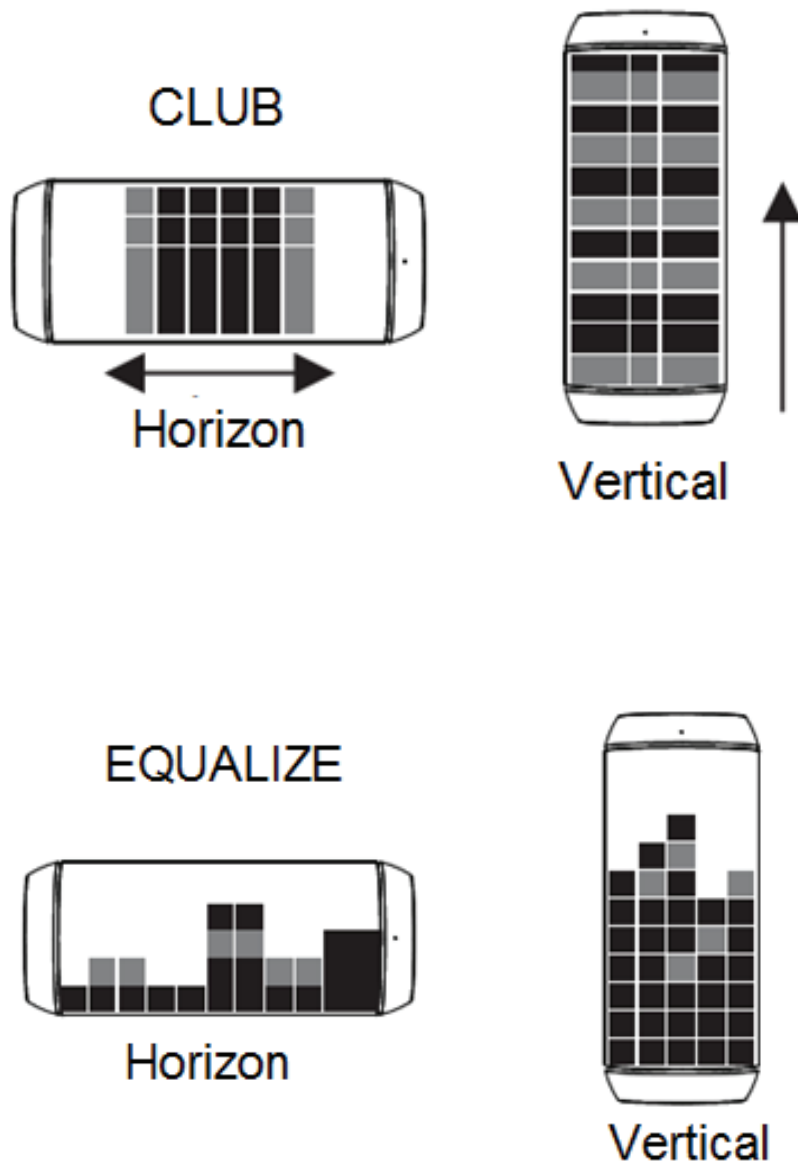

### 4. Aux In

Use the 3.5mm audio cable included to connect the speaker to an audio source (PC, MP3/MP4, mobile phone). Short press the **M** button to enter “**AUX IN**” mode (the speaker will voice “Aux in” mode). The speaker will play the music from the audio source.

**Please note:** Low battery will affect the music sound quality, please charge the speaker by adaptor (5V 1A) soon.

## **5. PC USB Mode**

Please use the USB cable what we included to connect the speaker to the computer, a short press of the **M** button to enter the PC USB Mode, which will operate as a computer speaker. In the first time using this function, computer will automatically identify the speaker and install the driver.

Please note: At this mode, it just have MUTE function no Pause.

## **6. Charging**

The speaker is with the built-in the lithium battery. Please use the USB cable what we included to connect the speaker to the computer or a branded good quality 5V/1000mA adaptor to charge the battery. When charging, the LED indicator is orange, when finished charging, the LED indicator will turn off.

Please note: If low capacity, the indicator light will flash quickly, please charge immediately.

## **Troubleshooting**

### **1. What should I do if the speaker can not pair with the Bluetooth device and play music accordingly?**

Please check the specification/ the manual of the Bluetooth device (your mobile or computer), and check if the device can support the A2DP stereo audio transmission. If yes, please turn on the A2DP stereo mode.

### **2. What should I do if the PC USB function could not work?**

(1) Connect the speaker to the computer via the USB cable included, and enter the PC USB mode. And then play the video/ audio from the computer.

(2) If it could not work, it may be the problem that the sound card of the speaker is incompatible with the computer. Please try to click the device manager--- click the Voice video and games controller---right click the USB Audio device---click the uninstall. Then please switch the speaker to PC USB mode again. The computer will automatically update the USB sound card drive to achieve the compatibility

**Please note:** The USB sound card function only apply to: Windows XP/ Windows vista Windows 7/ windows 8.