



USB-PRINTER WIRELESS LAN PRINTSERVER

(DN-13014-1)



User's Manual

COPYRIGHT

Copyright ©2008/2009 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This equipment must be installed and operated in accordance with provided instructions and a minimum 20 cm spacing must be provided between computer mounted antenna and person's body (excluding extremities of hands, wrist and feet) during wireless modes of operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE)

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, the Netherlands, Portugal, Spain, Sweden, and the United Kingdom.

The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not intended for use

None.

DISCLAIMER

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

Contents

1. INTRODUCTION.....	1
1.1 Product Introduction.....	2
1.2 Product Package	3
1.3 Network Printing Architecture	4
1.3.1 Print Server Network Functions.....	5
1.3.2 Network Printing Functions for Clients.....	5
1.3.3 Network Printing Functions for Network Server.....	8
1.4 Network Printing Environment	9
1.5 Contents of the User's Manual	11
1.6 Firmware & Printing Function	13
2. HARDWARE INSTALLATION	14
3. WINDOWS PEER-TO-PEER NETWORK	15
3.1 System Architecture.....	16
3.2 Administrator Installation and Setup	18
3.3 Administrator Utilities	26
3.4 Client Installation and Setup	27
3.5 Client Utilities	32
3.5.1 Network Ports Quick Setup	32
3.5.2 Remote Ports (Utility).....	34
3.6 Windows Add Printer Procedure.....	37
3.6.1 Windos Vista.....	37
3.6.2 Windos XP.....	41
4. WINDOWS NT/2000/2003 NETWORK.....	45
4.1 System Architecture.....	46
4.2 Windows NT/2000/2003 Server Installation and Setup .	47
4.3 User Installation and Setup.....	49
5. NETWARE NETWORK	50
5.1 System Architecture.....	51
5.2 NetWare 3.x/4.x/5.x Installation & Setup	53

5.2.1	Installation Using PCONSOLE	53
6.	UNIX SYSTEM NETWORK	57
6.1	Introduction	58
6.2	Enable Print Server's TCP/IP Support.....	59
6.3	Setup Print Server's IP Address	60
6.3.1	DHCP.....	60
6.3.2	BOOTP	60
6.4	Verify Print Server's IP Address	63
6.5	Configure Remote LPD Printing on the Host	64
7.	CONFIGURATION UTILITY	67
7.1	Introduction	68
7.2	Search for All Available Print Server.....	70
7.3	Status of Print Server.....	71
7.4	Setup the Print Server	73
7.5	General Configuration.....	75
7.6	TCP/IP Configuration	76
7.7	Netware Print Server Configuration	78
7.8	AppleTalk Configuration	80
7.9	Bonjour Configuration	81
7.10	SNMP Configuration	82
7.11	SMB Configuration.....	83
7.12	System Configuration	84
7.13	Wireless Configuration.....	87
7.14	Wizard.....	98
7.15	Report	102
8.	WEB MANAGEMENT.....	103
8.1	Introduction	104
8.2	Login	105
8.3	Device Status.....	106
8.3.1	System.....	106

8.3.2	Printer.....	107
8.3.3	TCP/IP.....	108
8.3.4	SMB	109
8.3.5	SNMP.....	110
8.3.6	NetWare	111
8.3.7	AppleTalk	112
8.3.8	Bonjour	113
8.4	Setup Wizard	114
8.4.1	System.....	114
8.4.1.1	Admin Password	115
8.4.1.2	Advanced Settings	116
8.4.2	Wireless.....	117
8.4.2.1	Site Survey	119
8.4.2.2	Encryption.....	120
8.4.3	TCP/IP.....	125
8.4.4	SMB	127
8.4.5	SNMP.....	128
8.4.6	NetWare	130
8.4.7	AppleTalk	132
8.4.8	Bonjour	134
8.4.9	Save Settings.....	135
8.5	System Tools	136
8.5.1	Load Default	136
8.5.2	Upgrade Firmware from Browser.....	137
8.5.3	Backup Setting.....	138
8.5.4	Restore System.....	139
8.5.5	Language.....	140
9.	TELNET MANAGEMENT	141
9.1	Introduction	142
9.2	Login	143
9.3	Get Setting Values – “get” Command.....	144
9.4	Modify Setting Values – “set” Command	147
9.5	Other Commands	150
9.5.1	ipconfig	150
9.5.2	reboot	150
9.5.3	exit.....	150
9.5.4	help.....	150
10.	IPP PRINTING	152
10.1	Introduction	153

10.2	System Setup	154
10.2.1	Print Server Side	154
10.2.2	Client Side.....	154
11.	WINDOWS XP SP2 SETUP	159

1. Introduction

1.1 Product Introduction

Thank you for purchasing and using our print server. This print server allows your printer to become a shared device on the network. It offers printing flexibility and manageability on your Local Area Network at an extremely low cost and with an absolute minimum setup and maintenance required.

This print server provides IEEE 802.11g/b wireless LAN (up to 54Mbps data transfer rate) and an Ethernet network port (10/100Mbps Ethernet) for printer.

This print server supports IPX/SPX, NetBEUI, TCP/IP and AppleTalk protocols. It is the best network printing solutions for various common network operating systems such as Windows 98SE/Me/NT/2000/XP/2003/Vista, NetWare, Unix/Linux and MAC OS, etc.

With the help of Installation Wizard, you can easily and instantly complete the settings for the printing environment, and start enjoying the fantastic features provided by the print server.

In the following chapters, we will introduce in detail the printing features, installation methods, and system configuration for different network environments.

If you would like to set up and install print server quickly, please refer to the Quick Installation Guide that comes along with this print server.

1.2 Product Package

This package contains the following components:

One Print Server

One Antenna

One Power Adapter

One Quick Installation Guide

One CD-ROM (Including all the software utilities, drivers and User's Manual)

1.3 Network Printing Architecture


This section illustrates how print server functions and operates on the network. Before you install and use print server, it is strongly recommended that you read this section completely, and select only the chapters you need according to your network operating system by “Contents of the User’s Manual” in next section.

This section will first introduce the role every component plays in the network-printing environment.


Print Server

Client User


Network Server (optional)

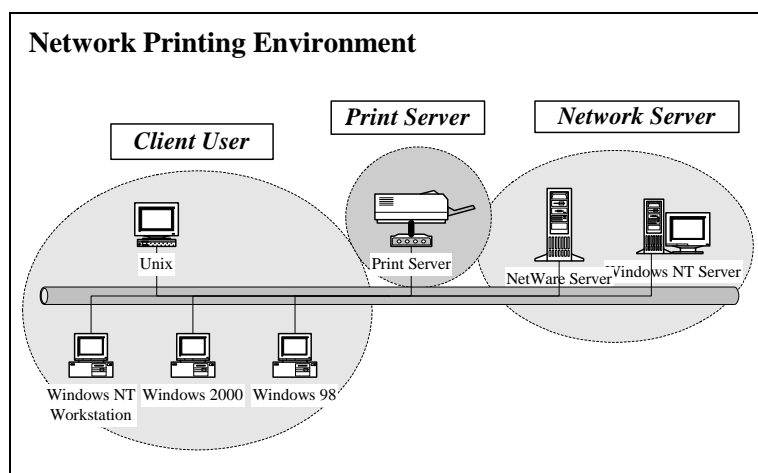


1.3.1 Print Server Network Functions

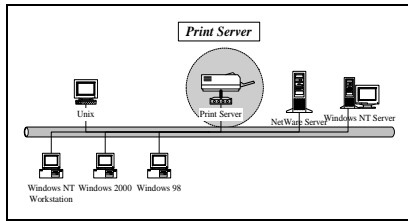

Because print server supports IPX/SPX, NetBEUI, TCP/IP and AppleTalk network protocols, any networked computer can directly print to the print server from any of its installed protocol.

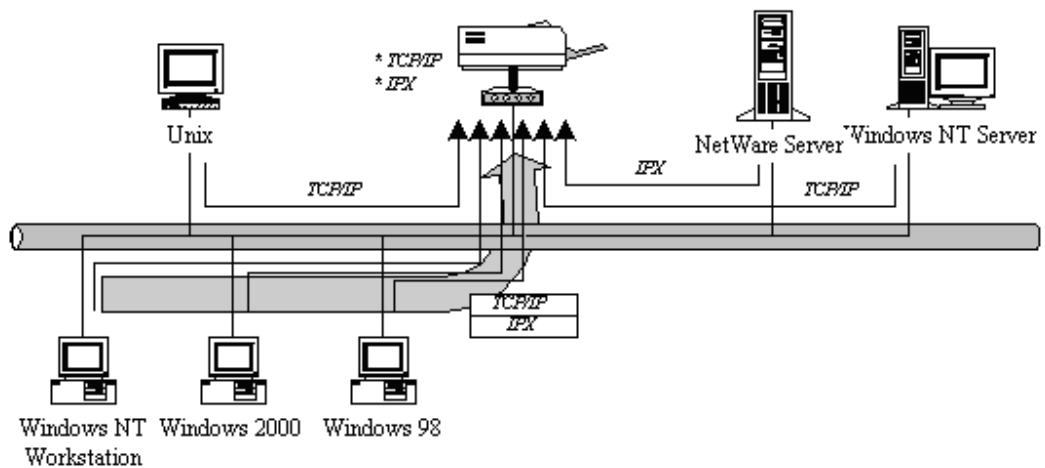


1.3.2 Network Printing Functions for Clients

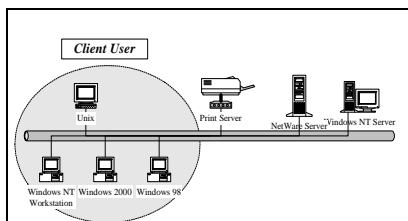


Common operating systems for clients are classified as following:

Windows 98SE/Me/NT/2000/XP/2003/Vista

Our print server system provides PTPP (Peer-to-Peer Printing) driver and utilities for Windows 95/98SE/Me/NT/2000/XP/2003/Vista users. PTPP (Peer-to-Peer Printing) supports TCP/IP protocol.

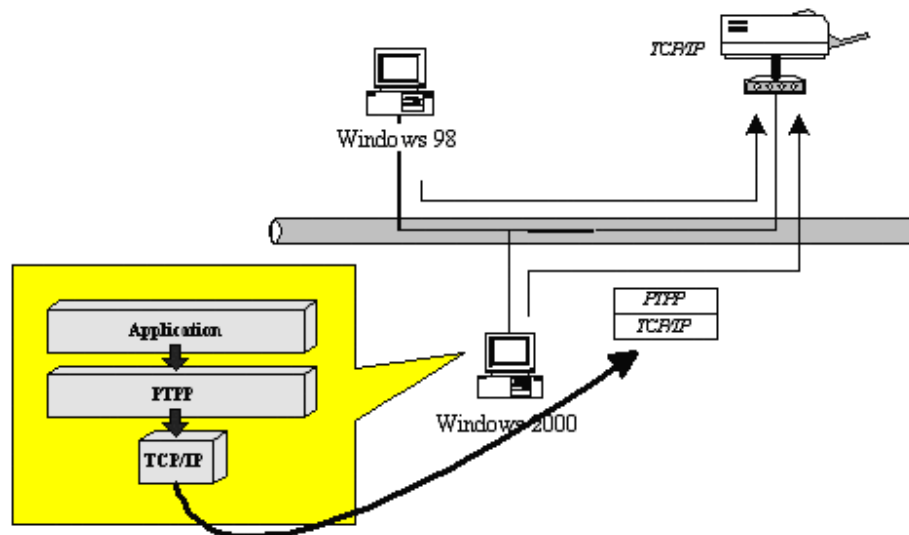

In the client installation procedure, after PTPP (Peer-to-Peer Printing Driver) is installed into Windows, the system will automatically (manual configuration is also allowed) search all the print servers on the network, and then add their printing ports into Windows' printing port (see below).

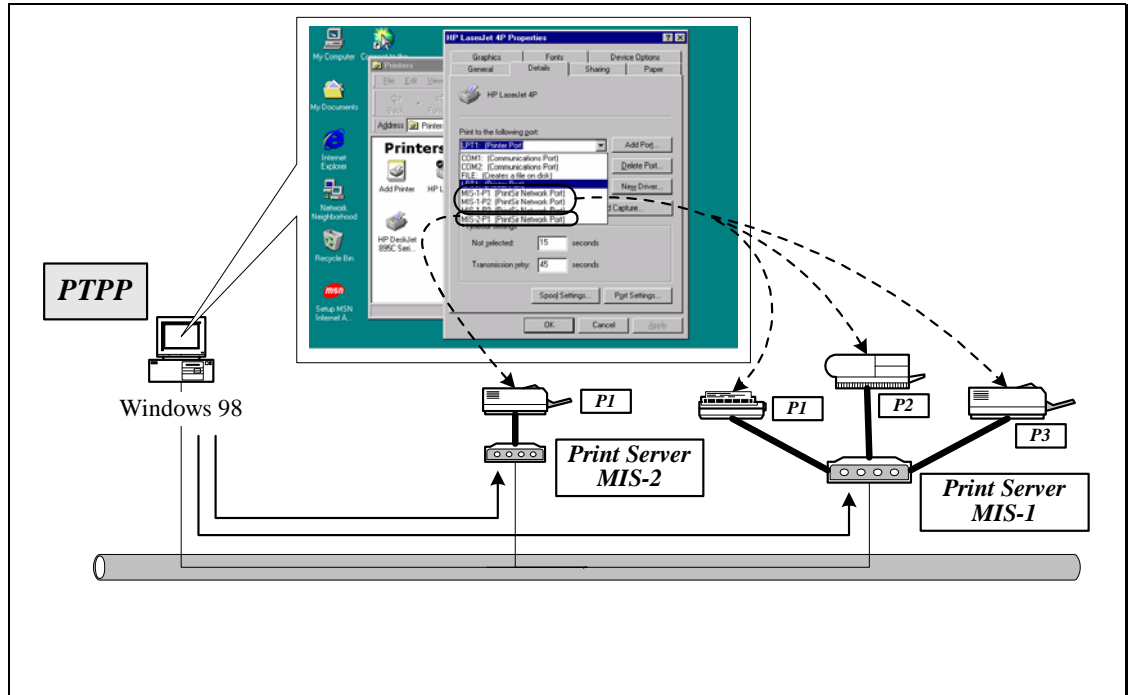


UNIX / Linux

UNIX (include HP/UX, SCO Unix, SunOS, Solaris, Unixware DECUnix, IBM AIX and others) and Linux use the system-standard LPR to print through print server.

MAC OS

MAC OS can use the system-standard AppleTalk network to print through print server.

1.3.3 Network Printing Functions for Network Server

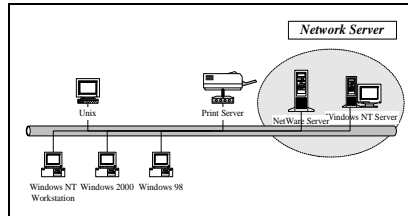

Common network servers are classified as following:

Windows NT/2000/2003/Vista

Our print server system provides PTPP (Peer-to-Peer Printing) driver and utilities for Windows NT/2000/2003/Vista. After PTPP is installed, the server can directly print through print server. Adding this printing function into Windows NT/2000/2003/Vista Server allows print queue, user authority management, and many other advanced features to be used.

NetWare 3.x/4.x/5.x


In NetWare environment, print server offers various printing modes like print queue, remote printer, etc.

1.4 Network Printing Environment

Common network environment are classified as following:


Windows Peer-to-Peer Network

The client's PTPP driver will use TCP/IP protocol to print through print server.

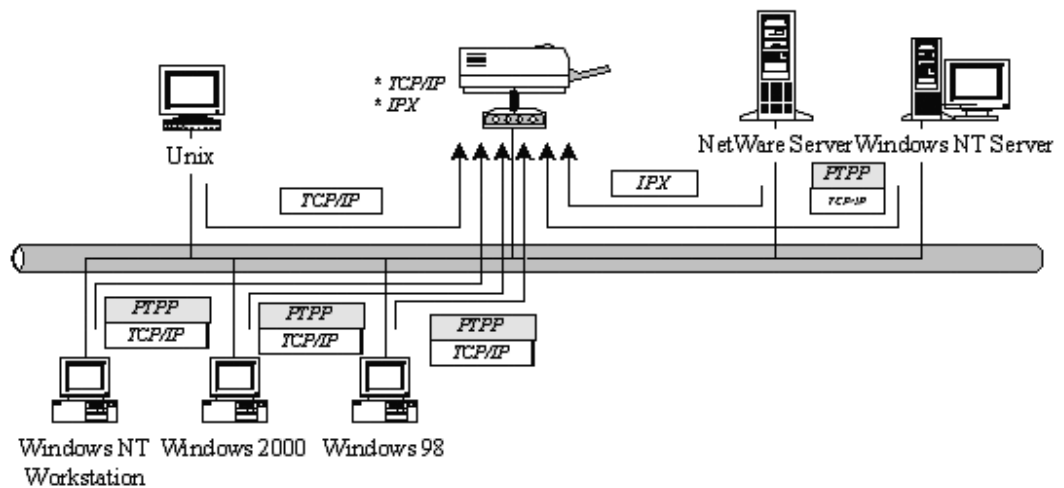


Windows NT/2000/2003/Vista Network

Network printing function will become available after PTPP driver is installed into Windows NT/2000/2003/Vista. Adding this printing function into Windows NT/2000/2003/Vista Server allows print queue, user authority management, and many other advanced features to be used.

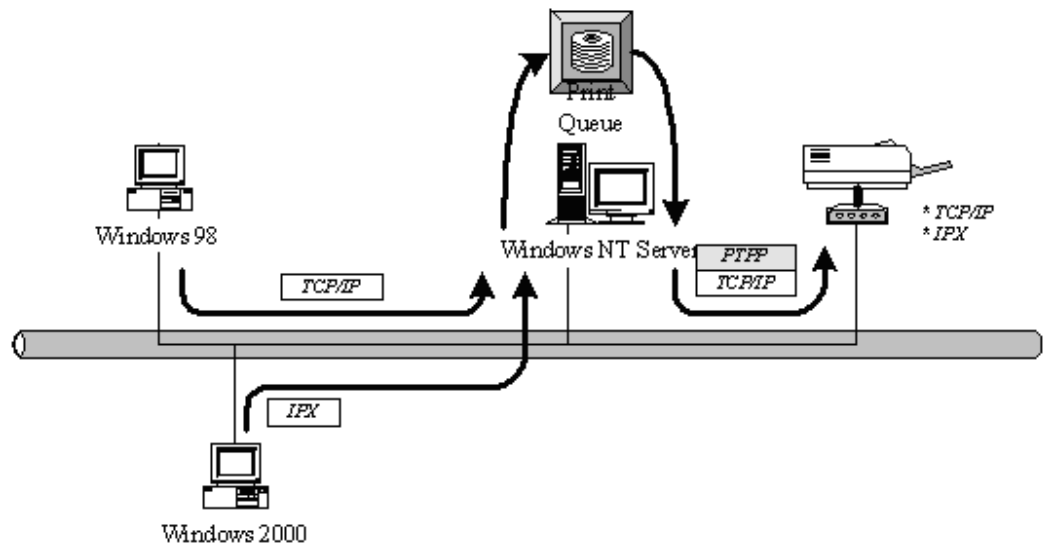

NetWare Network (see below)

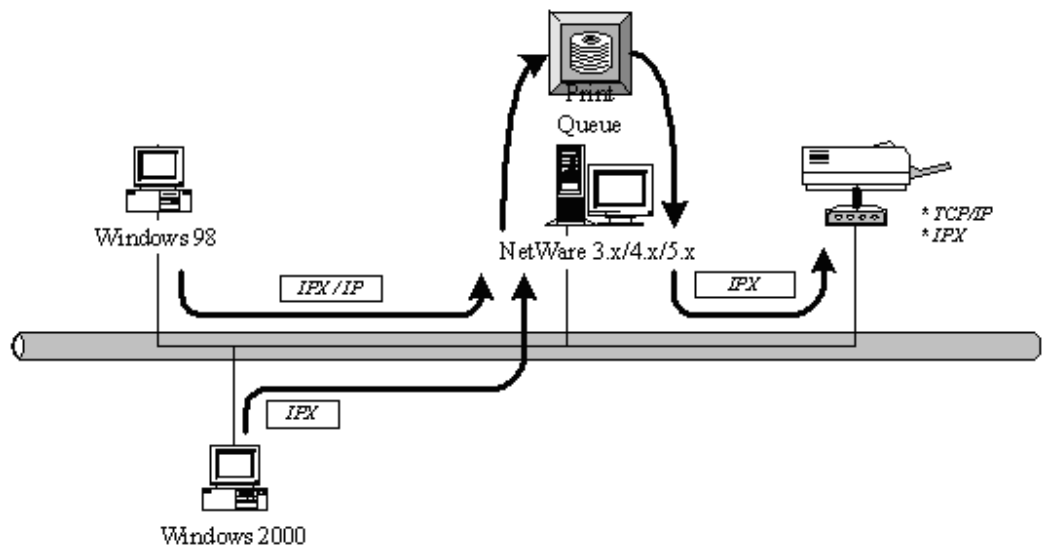

1.5 Contents of the User's Manual

Chapter 2 explains print server's hardware installation and configuration. It is strongly recommended for you to read.

The following chapters introduce:

Chapter 3. Windows Peer-to-Peer Network

Chapter 4. Windows NT/2000/2003/Vista Server-Based Networks

Chapter 5. NetWare Network

Chapter 6. UNIX System Network

You may select the appropriate chapters and sections to read depending on your network printing's requirement.

Chapter 7 and chapter 8 introduce print server's management and configuration utilities on Windows and Web Browser's environment respectively. You may select the appropriate management utility according to the administrator's computer platform.

Chapter 9 introduces the commands that can be used in print server management through Telnet.

Chapter 10 introduces Print Server's IPP Printing function and setup procedure. The IPP Printing provides a convenient way to print documents across the Internet by the IPP protocol.

Chapter 11 In Windows XP SP2, you may not find any print server listed on the “Available Ports” in “Network Ports Quick Setup”. Please follow the instruction in this chapter and resolve the problem.

1.6 Firmware & Printing Function

The print server provides a complete network printing solution. The feature set is listed below:

PTPP (Peer-to-Peer-Printing)

TCP/IP (LPR)

IPP Printing

NetWare Bindery Printing

AppleTalk

SMB Printing

2. Hardware Installation

1. Unpack the print server package and verify that all the items listed in the section 1.2 are provided.

2. Connect the print server to the printer you want to share on the network.

3. Connect the print server to your network by attached the network cable to the UTP port of the print server.

4. Connect the power adapter to the print server. The print server will perform the Power-On-Self-Test (POST) after it is powered on. During the POST, the Status LED will be on. When the LEDs are unlighted, the print server is ready.


NOTE1: MUST use the power adapter shipped with the print server, do NOT use any other power adapter from any sources.

NOTE2: To prevent the compatibility problem between print server and a few printer, it is recommended that you power on the print server before the printer.

3. Windows Peer-to-Peer Network

3.1 System Architecture

Print server supports Windows Peer-to-Peer network printing mode, which is suitable for most medium and small network environments. Through quick and simple installation procedure, users can immediately enjoy the convenience of network printing.

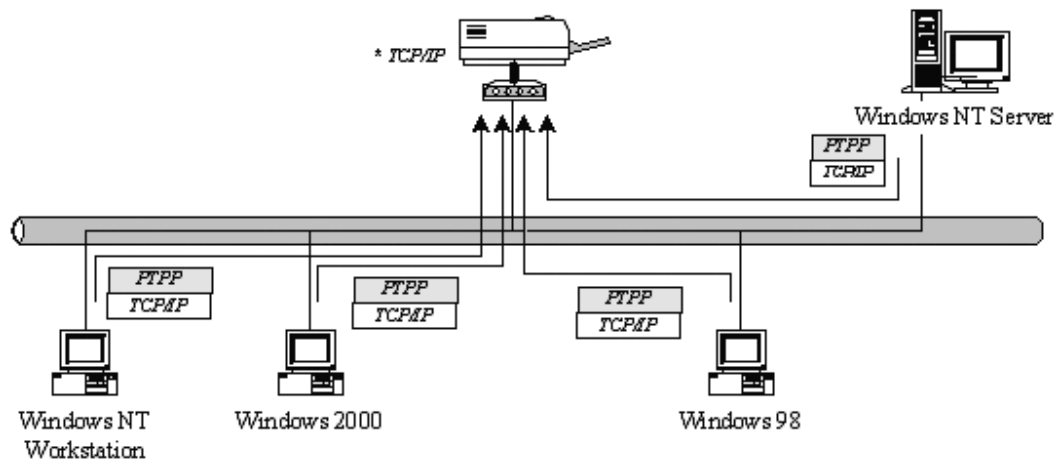

Installation procedure is separated into following two parts:

1. Administrator Installation and Setup (refer to section 2 for more detailed information).

System administrators must:

Install administrator's utilities into his/her computer.

Configure print server from administrator's configuration utility.

2. Client Installation and Configuration (refer to section 3 for more detailed information).

Client users must install Windows PTPP driver (Peer-to-Peer Printing) for network printing.

In addition, after PTPP is installed, the system will automatically search for all print servers on the network, and add the printing port of the print servers into Windows' printing port (refer to Network Printing Architecture in section 1.4 for more detailed information).

3.2 Administrator Installation and Setup


The Administrator Installation can be performed on Windows 98SE/Me/NT/2000/XP/2003/Vista with the same user interface. Before the installation, please verify that your network protocol is installed on your PC (TCP/IP, IPX and/or NetBEUI). It will be helpful in your installation process.

Insert the CD shipped along with the print server into your CD-ROM drive. The Autorun.exe program should be executed automatically. If not, run Autorun.exe manually from CD-ROM drive's root directory.


The "Installation Manager" will be displayed on the screen as following. Click "Administrator Installation".




The “Utilities Setup” window will be displayed. Click “Next”.

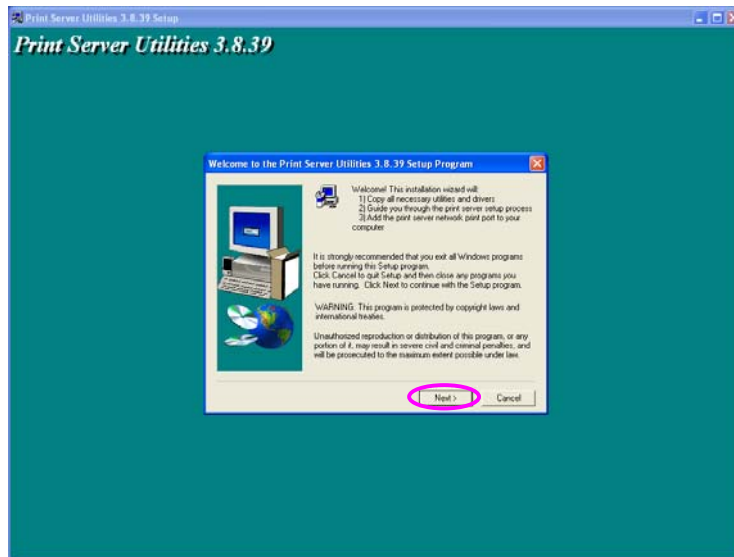


Click “Next” to install the utilities in the default folder or click “Browse” to specify the destination folder where you would like to install the utilities.

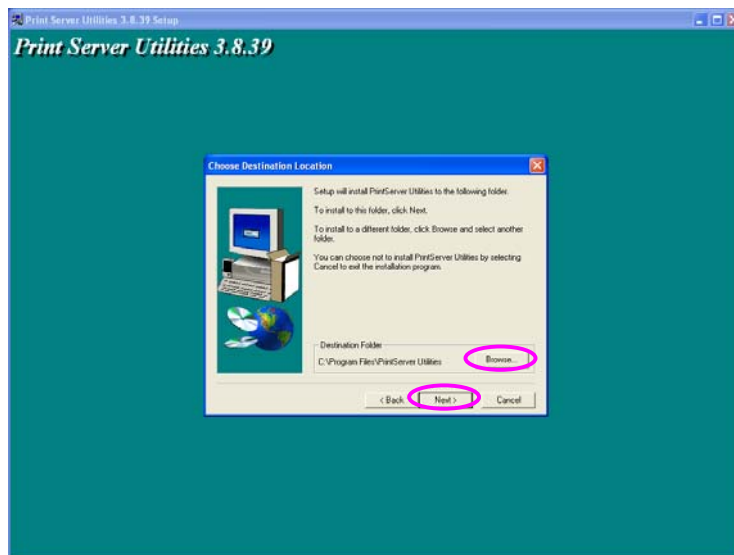


Select the components you want to install. It is highly recommended to install all provided components. Click “Next” to continue.

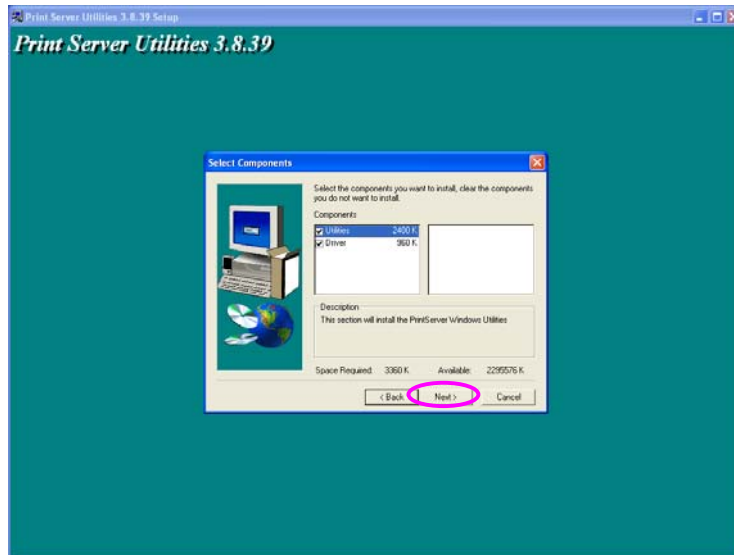


Specify the program folder where the program icons will be added to, click “Next”.

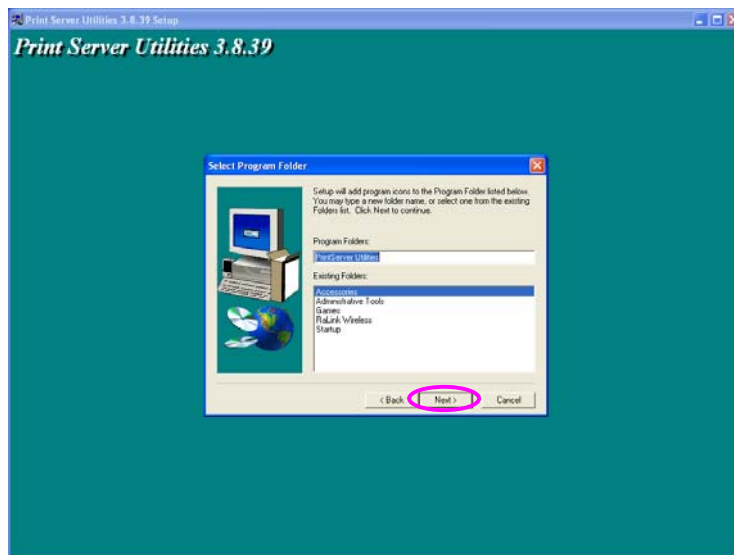

The system will start to install the utilities automatically.

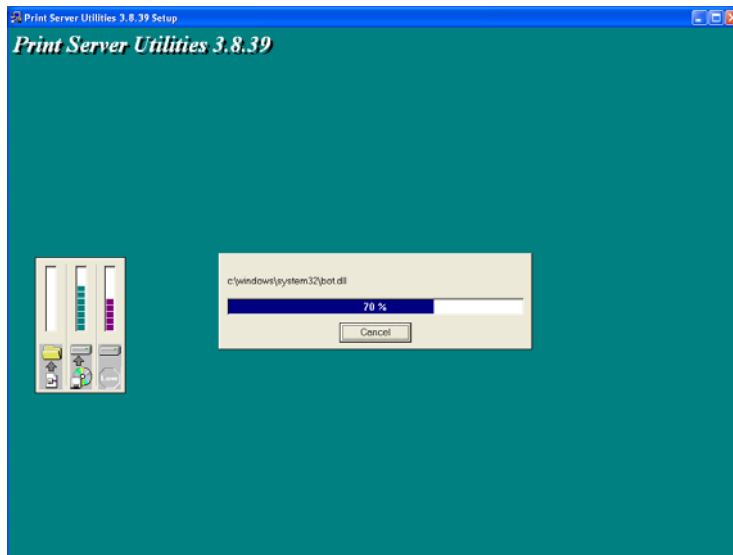


You have completed the installation phase and prepare to configure the Print Server. The “Choose Print Server” will list all Print Servers within the network. Select the Print Server you would like to configure and click “Next”.

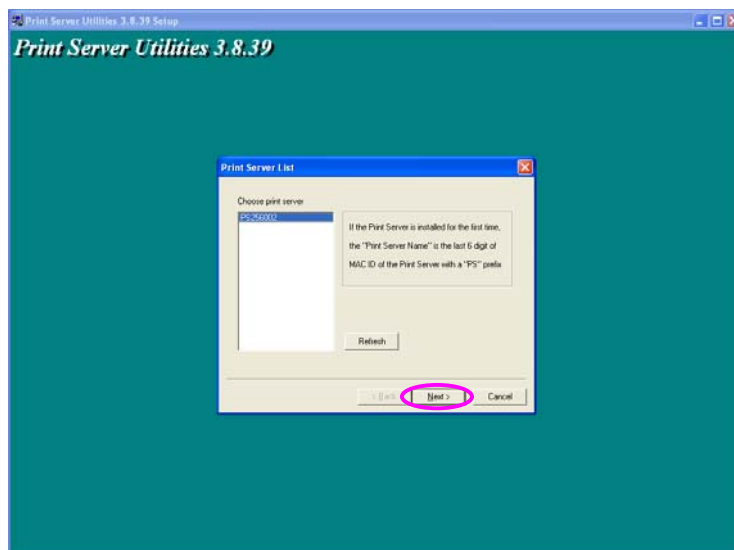


NOTE 1: If this is the first time you configure the Print Server, the “Print Server Name” is the last 6-digit of MAC ID with prefix “PS”. Please check the MAC ID on the print server.

NOTE 2: The list can only display the devices from the same manufacturer.


Specify a recognizable name for the Print Server and click “Next”.

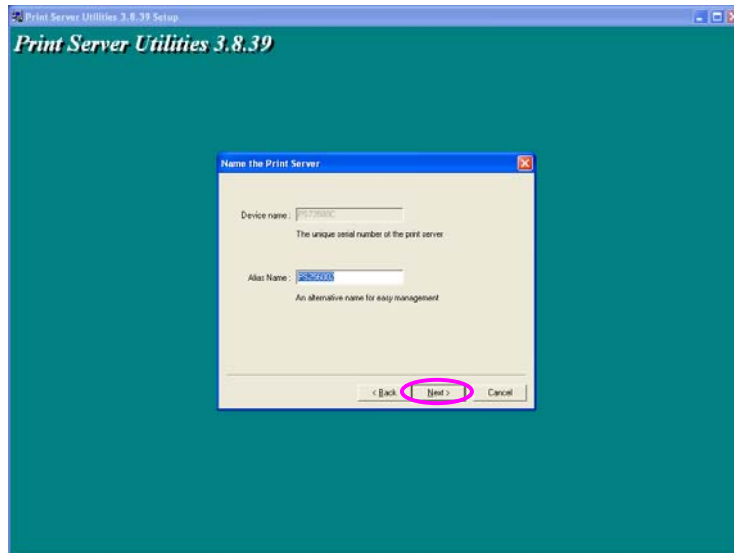

Specify the IP Address for the Print Server manually or click “Next” to keep default IP Address, i.e. 192.168.2.2.

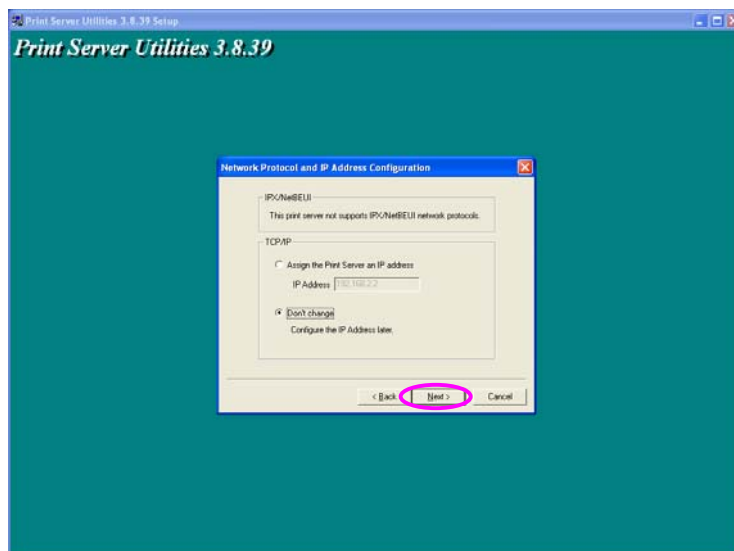

The configuration summary is displayed in the window. Now, you have completed the “Print Server Setup”. Click “Finish” and your system will add network port of the Print Server to your PC automatically.

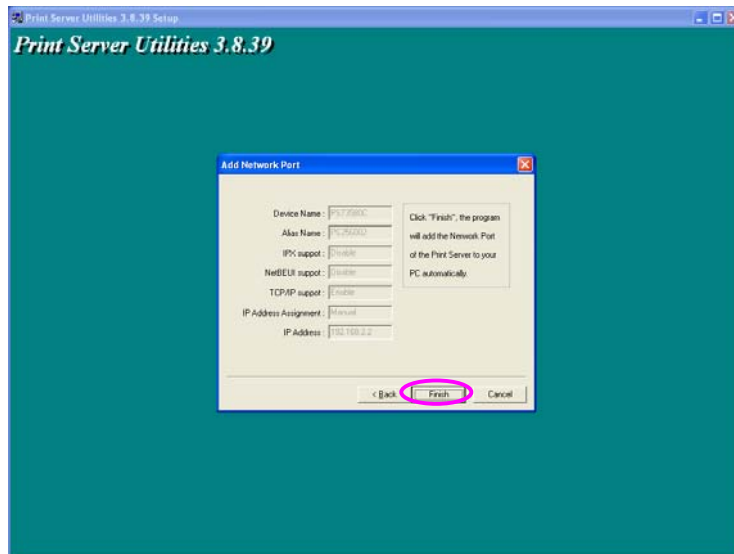

The Administrator Installation procedure is totally completed. Click “Finish”.



The Administrator Installation Program have executed the installation procedure that performs the following tasks:

Install all utilities and drivers to the administrator's PC.

Configure the print server (including the print server name and network protocol)

Add the network port of the print server to the administrator's PC.

If you want to print from this administrator's PC to the print server, all you need to do is to perform Windows' standard "Add Printer" procedure (please refer to Section 3.6).

3.3 Administrator Utilities


After Administrator Installation is completed, there will be four utilities in print server's Program folder.

Network Ports Quick Setup – Add the network ports of print servers within the network to your PC.

Print Server Configuration – Allows you to configure the print server's IP Address, network protocols and other advanced functions. Please refer to Chapter 7 for the detail instruction of the configuration.

Remote Ports – Add the network port of remote printer server to your PC.

Uninstall – Assistant for removing all installed administrator software.

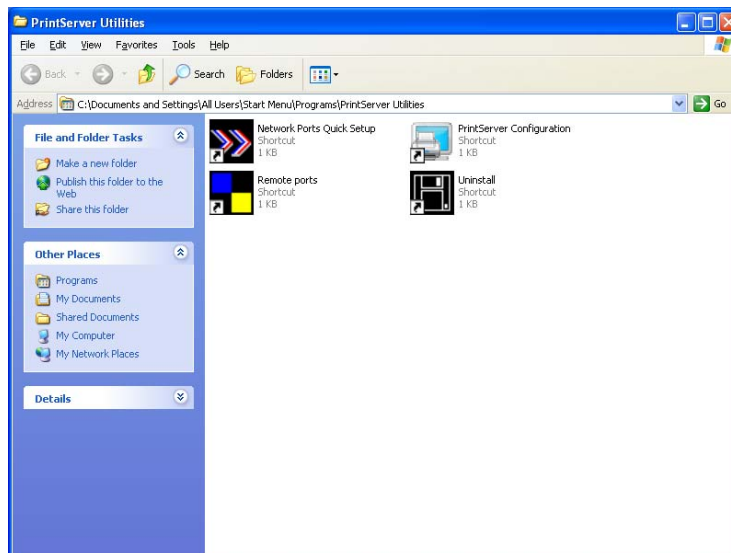


3.4 Client Installation and Setup


The Client Installation can be performed on Windows 98SE/Me/NT/2000/XP/2003/Vista with the same user interface. Before the installation procedure, please confirm that your PC has connected to the network and installed at least one network protocol.

Insert the CD shipped along with the print server into your CD-ROM drive. The Autorun.exe program should be executed automatically. If not, run Autorun.exe manually from CD-ROM drive's root directory.


The "Installation Manager" will be displayed on the screen as follows. Click "Client Installation".

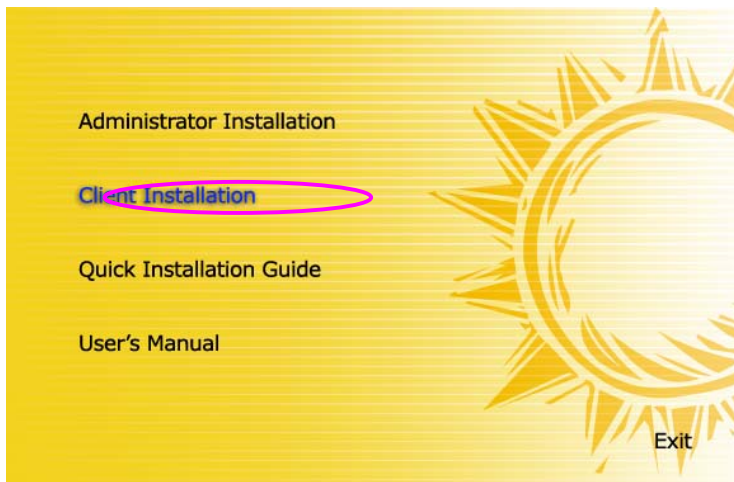


The “Utilities Setup” window will be displayed. Click “Next”.

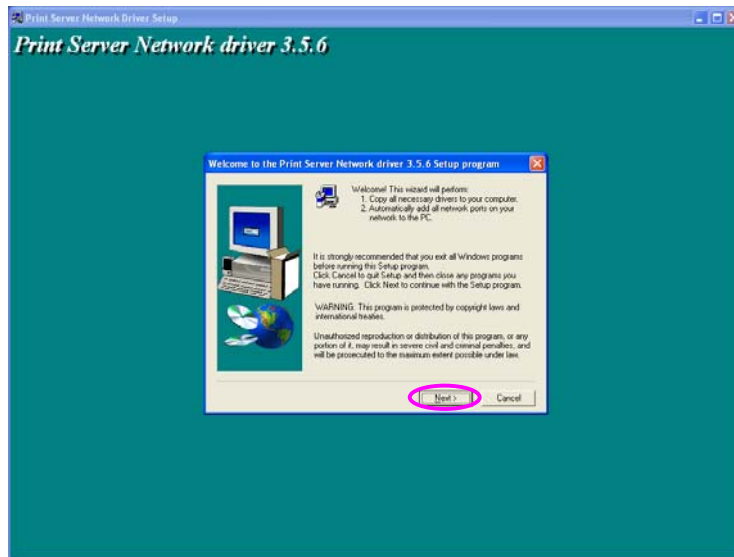


Click “Next” to install the utilities in the default folder or click “Browse” to specify the destination folder where you would like to install the utilities.

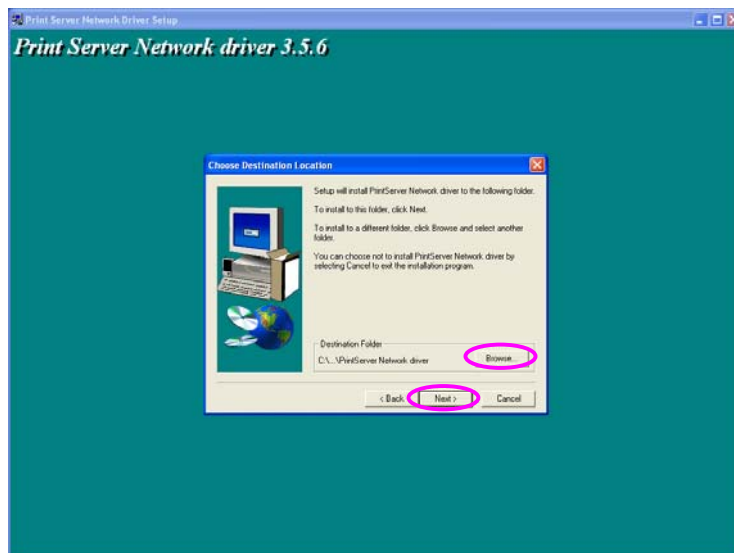


Specify the program folder where the program icons will be added to, click “Next”.

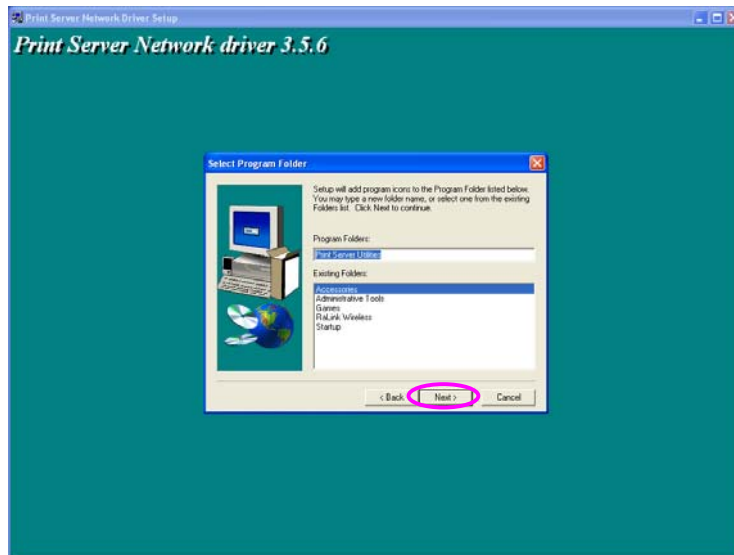


The system will start to install the utilities automatically.

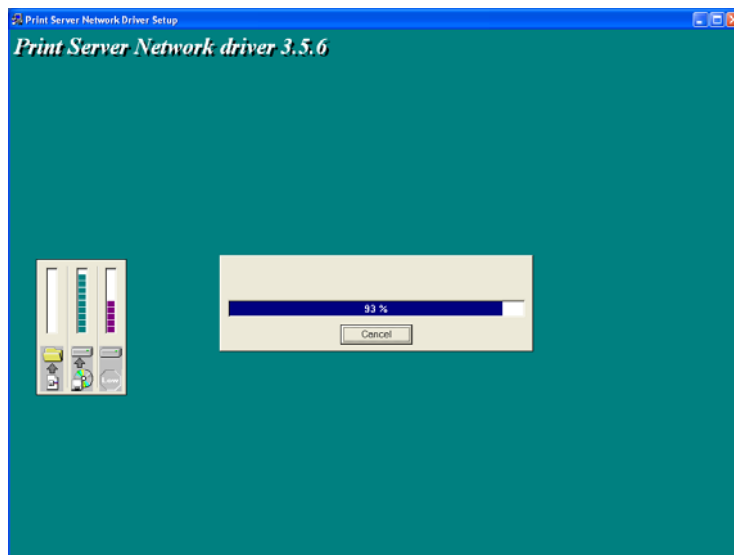

Now, the installation procedure is completed, you are ready to set up the client's computer. All network ports of the Print Servers detected on the network will be added to your PC automatically, click "Continue".

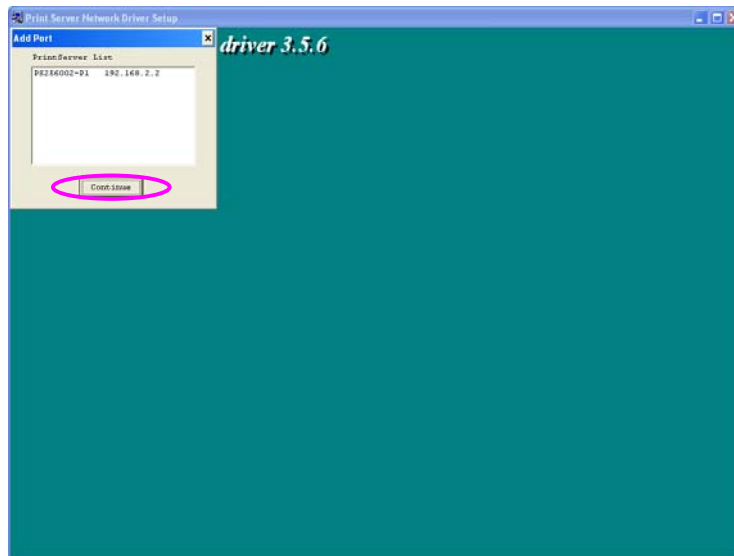

The Client Installation procedure is completed. Click "Finish".

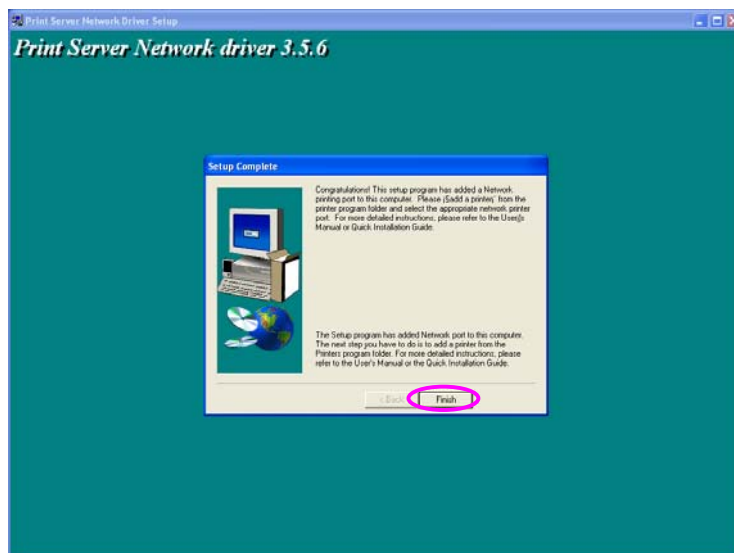

After the installation, you have completed the following tasks:

Install all utilities and drivers to the client's PC.

Add all the print server's network ports of the network to the client's PC.

You can then perform the Windows' standard "Add Printer" procedure to add network printers to your PC. Please refer to Section 3.6.

3.5 Client Utilities


After Client Installation is completed, there will be three tools in print server's Program folder.

Network Ports Quick Setup

Remote Ports

Uninstall Network Driver


The Uninstall Network Driver will assist you in removing all installed client software. The other two tools are described as follows.

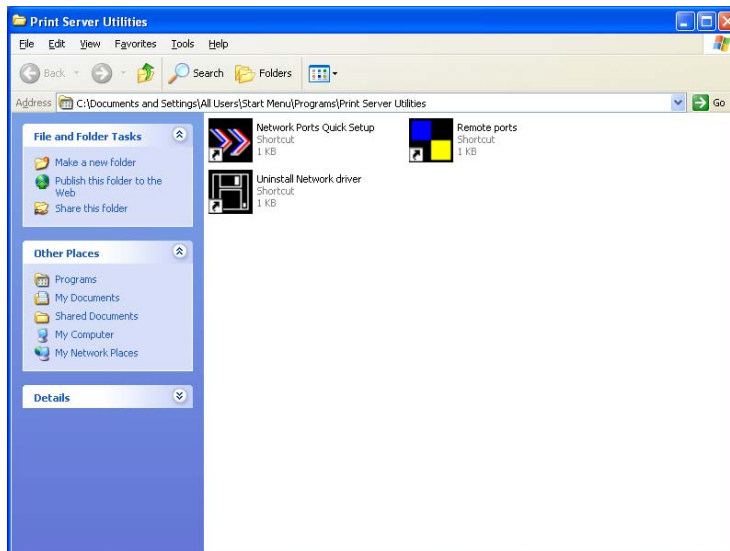


3.5.1 Network Ports Quick Setup

Network Ports Quick Setup Utility offers a very simple method to add or remove print server's printer port from the client's computer.

During the client's installation procedure, the system will automatically search for all print servers on the network, and add them into the printer ports of the client's computer (see below).

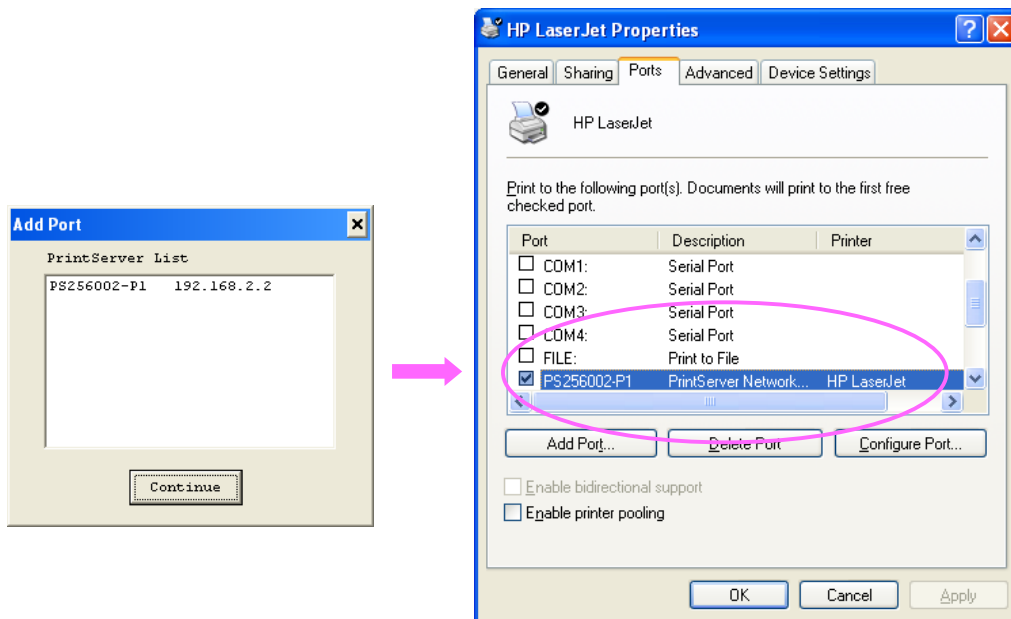

If you have just installed another new print server in the network, you must run this program first. This program will search for new print servers and allow you to add the new network printer port into client's computer conveniently. Perform the standard Add Printer procedure, then you can print directly to the printer through the newly installed print server.

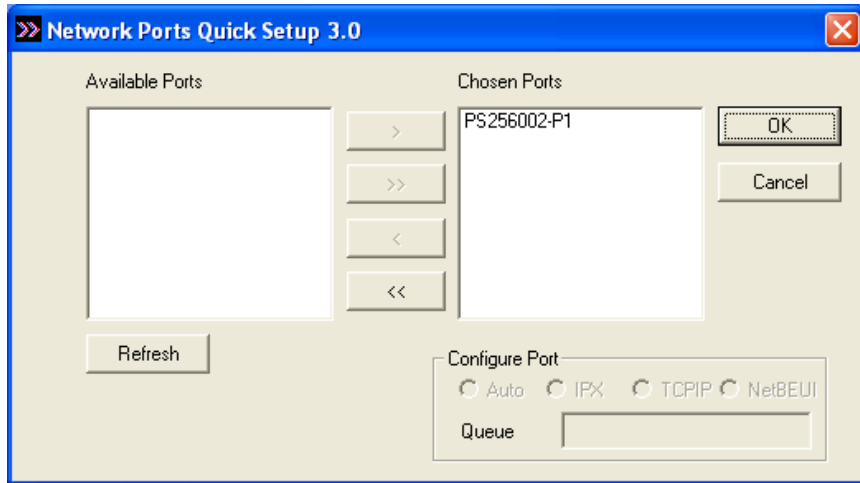


Please be aware that Network Ports Quick Setup Utility can only detect and configure all print servers on the same network, it cannot search and configure print servers on other subnets across network segments. You must use Remote Ports Utility described in the next section to manage remote (across network segments) print servers.

3.5.2 Remote Ports (Utility)


Remote Ports Utility offers a convenient way for you to manage and add printer port of the remote print server. From the assistant of this utility, you can print to other print servers outside the subnet across network segment. However, please note that this function only supports TCP/IP network protocol.

Please follow the procedures described below:


Step1. Run Remote Ports Utility. Clicks “Add” to add a remote print port.

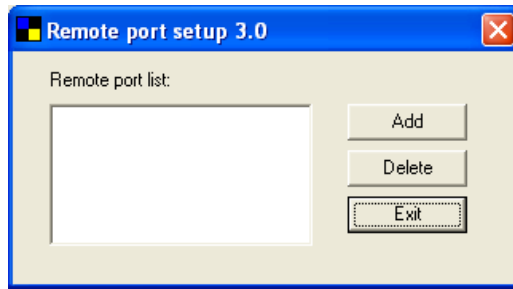


Step2. Enter print server's name, IP address, select used ports, and enter LPR queue name of each port. Click "Ok".

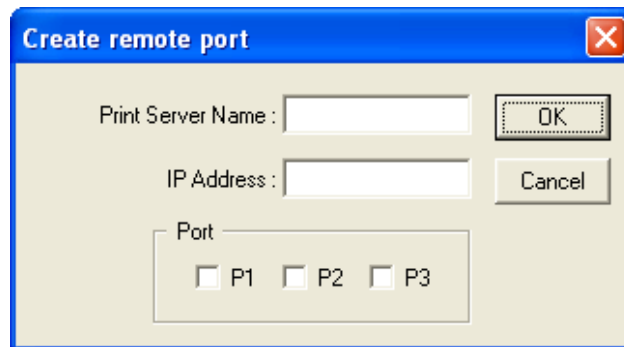

Step3. The new remote print port is displayed as follows.

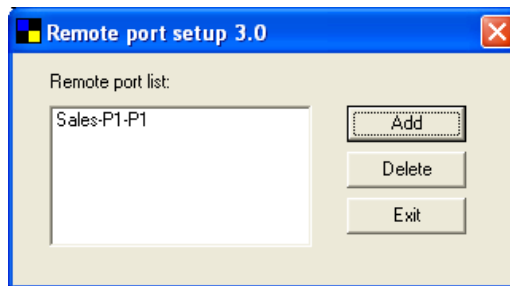

In order to use the remote printing function, you will have to proceed with normal Add Printer procedure and select your printer port as the newly added remote printer port.

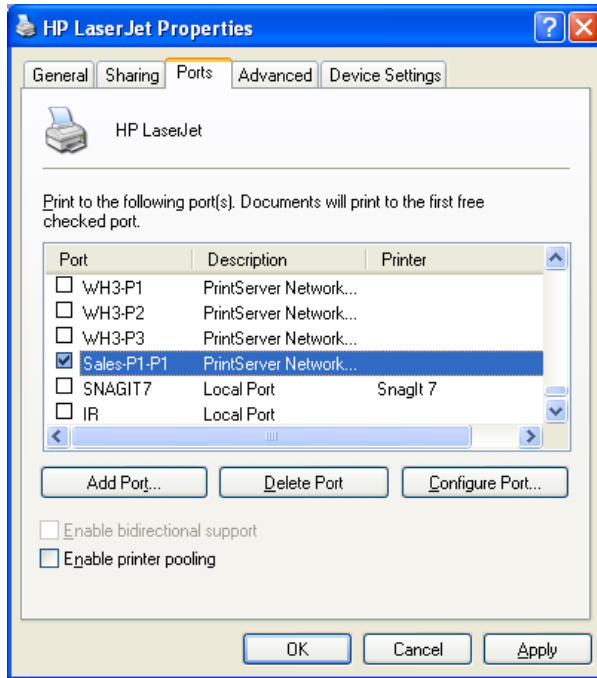


3.6 Windows Add Printer Procedure

After adding a “Network Port” of the print server to your PC by Administrator or Client Installation Program, you can follow the procedure described below to add printer to the Windows. Note that following “Add Printer” steps are running in Windows XP, the steps in other Operating Systems are similar.


3.6.1 Windos Vista

The following “Add Printer” steps are running in Windows Vista.


1. Click “Start”, select “Settings\Printers”.
2. Click “Add a Printer”.
3. The “Add Printer” wizard is displayed. Select “Add a local printer”.

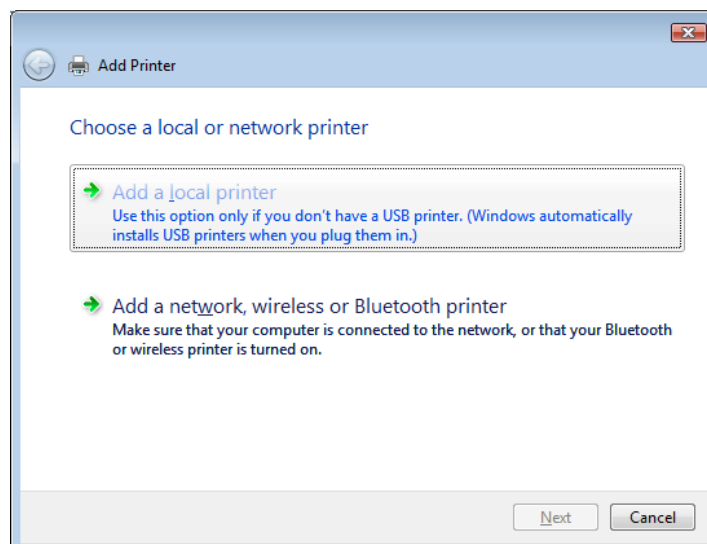


4. Choose the suitable printer port which was created by the installation process and click “Next”.

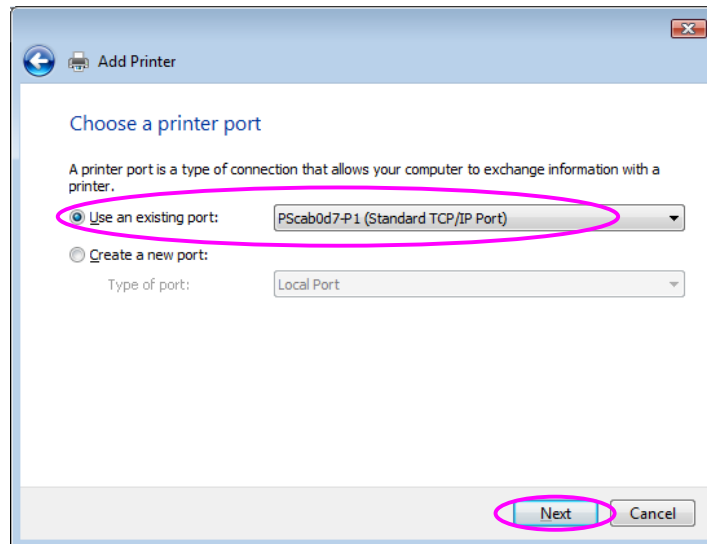


5. Select the printer manufacturer and the printer model and click “Next”. If your printer is not in the list, click “Have Disk...” to install the driver of the printer. After installation, the printer model will be added to the list.

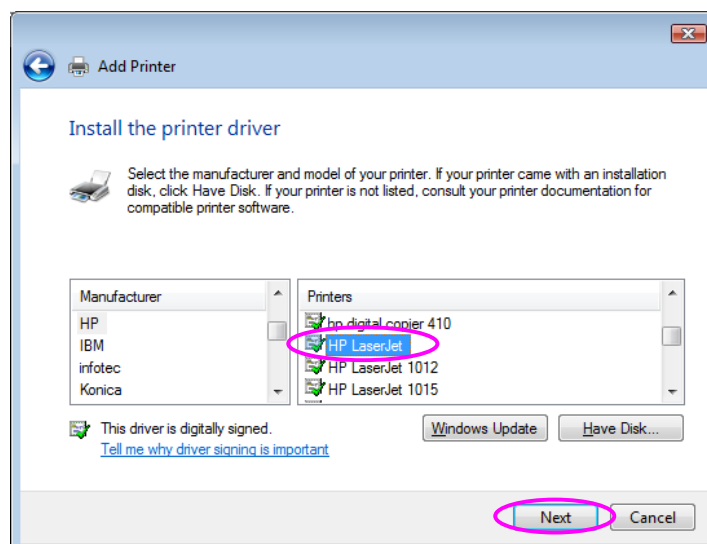


6. Name your printer and set the default printer, click “Next”.

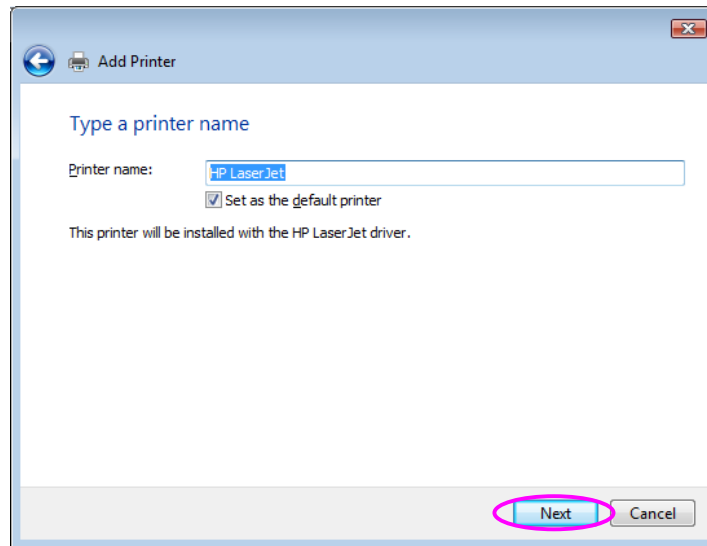


7. The printer drivers are being installed.

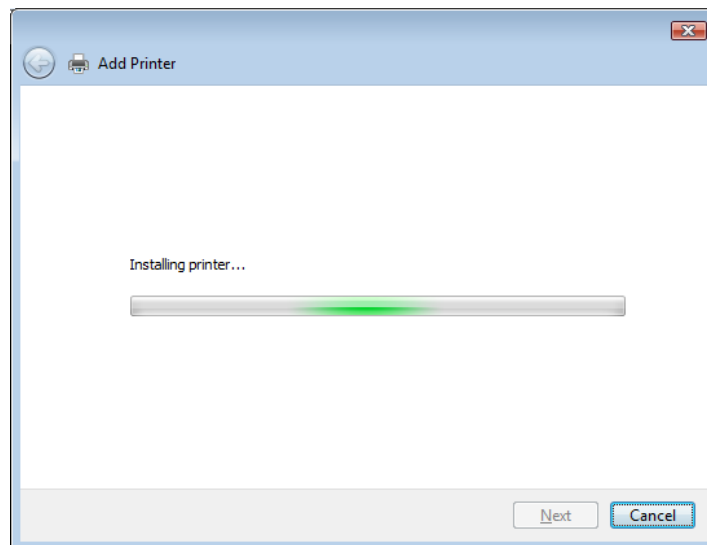

8. It is recommended to print a test page. Click “Finish”.

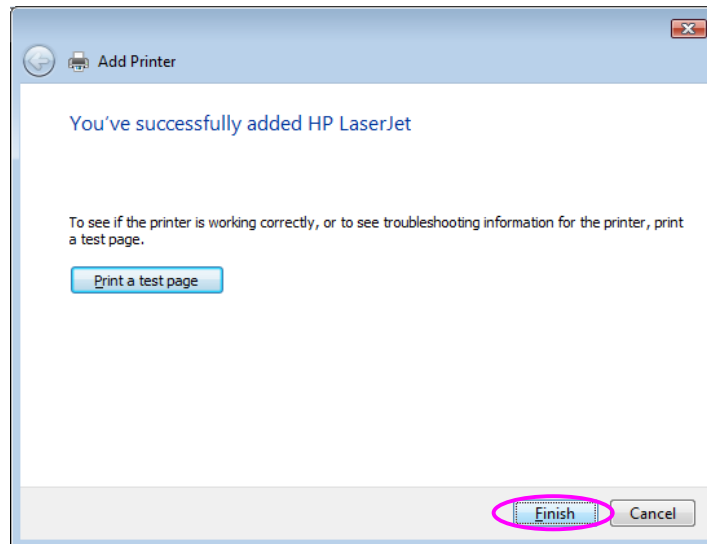

9. The printer is added to “Printers” page, you have added the printer to your computer successfully. Now you can start to print from your computer to the print server.

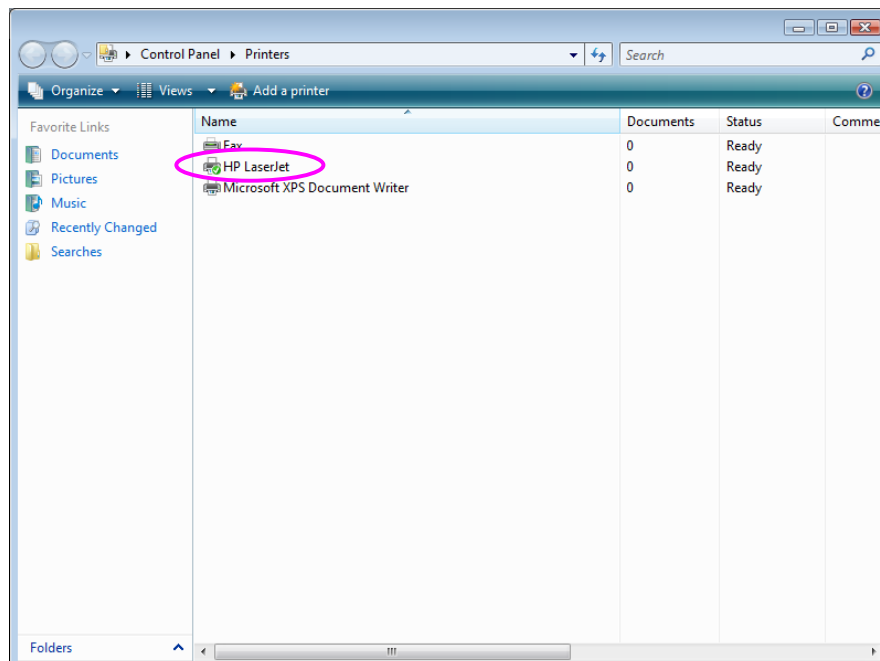


3.6.2 Windos XP


Step1. Click “Start”, choose “Settings” and select “Printers and Faxes”.

Step2. Click “Add a Printer”.


Step3. The “Add Printer Wizard” is displayed. Click “Next”.

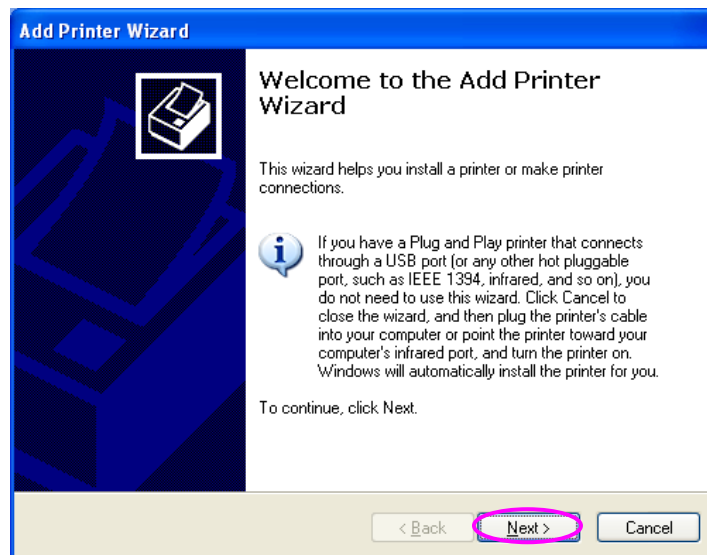


Step4. Select “Local printer attached to this computer” and make sure that “Automatically detect and install my Plug and Play printer” is not selected. Click “Next”.

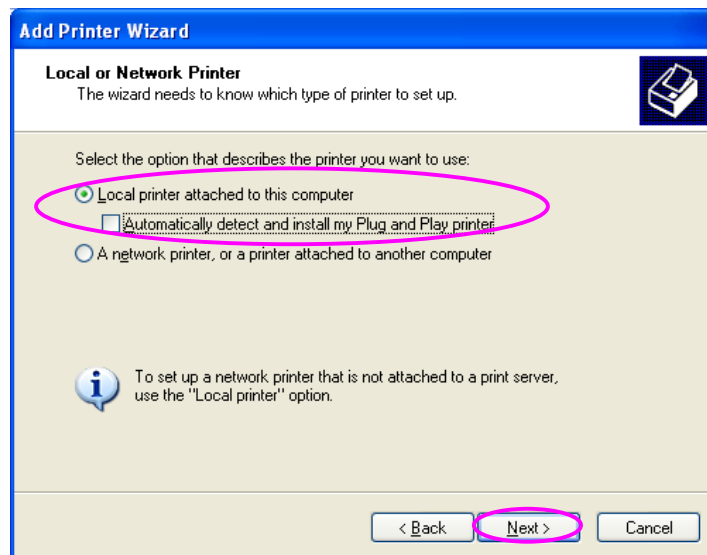


Step5. Choose the suitable “Print Server Network Port” which was created by the Administrator Installation or Client Installation process and click “Next”.

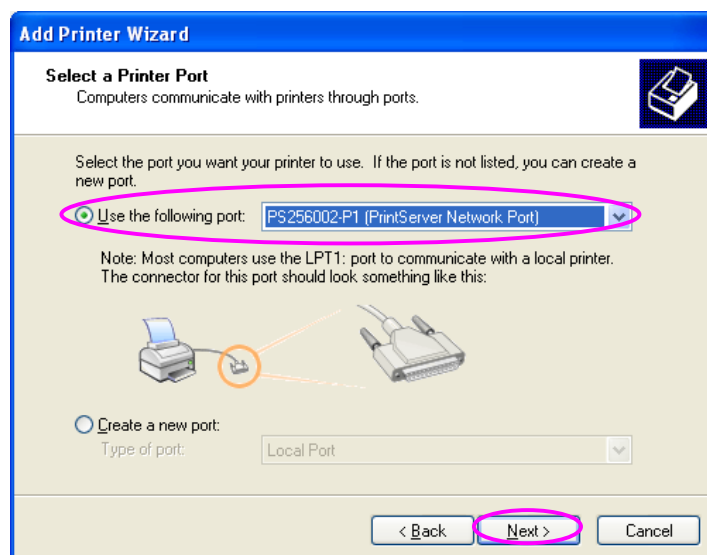


Step6. Select a suitable printer manufacturer and the printer model and click “Next”. If your printer is not in the list, click “Have Disk...” to install the driver of the printer. After installation, the printer model will be added to the list.

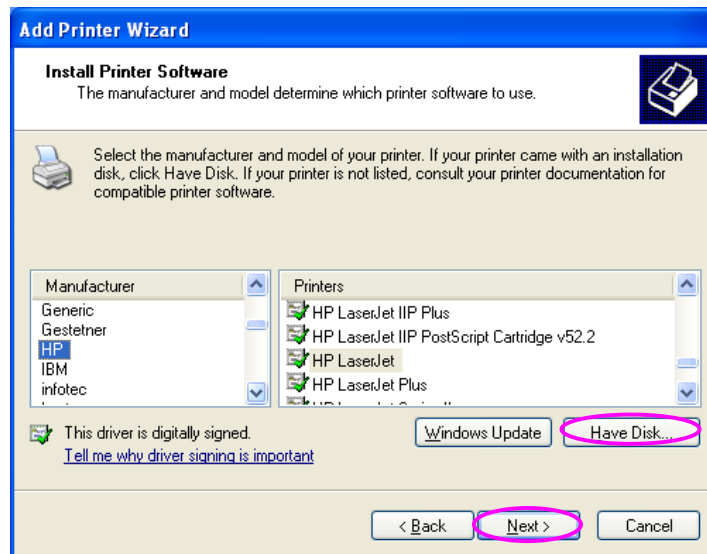


Step7. Name your printer and setup the default printer, click “Next”.

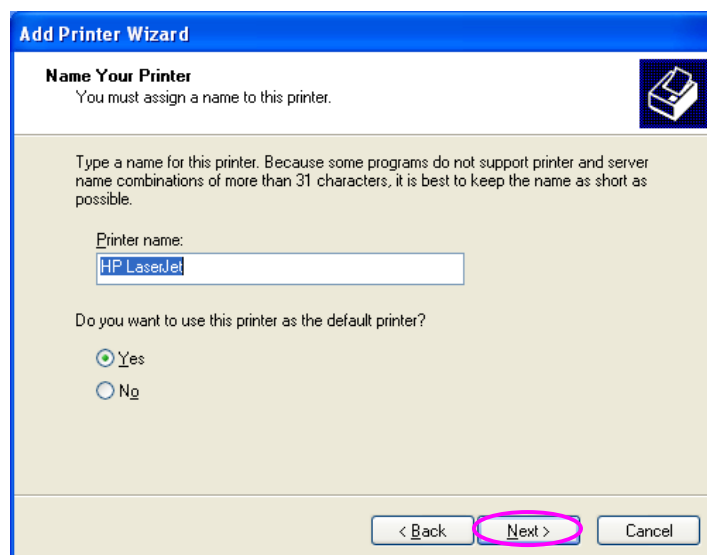

Step8. Choose to print the test page or not. It is recommended to print a test page. Click “Next”.

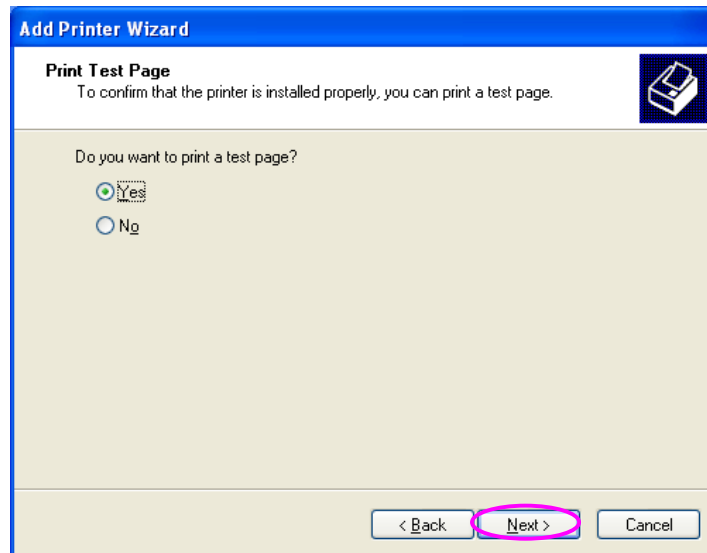


Step9. You have added the printer to the PC successfully. The information of the printer is displayed in the windows. Click “Finish”.

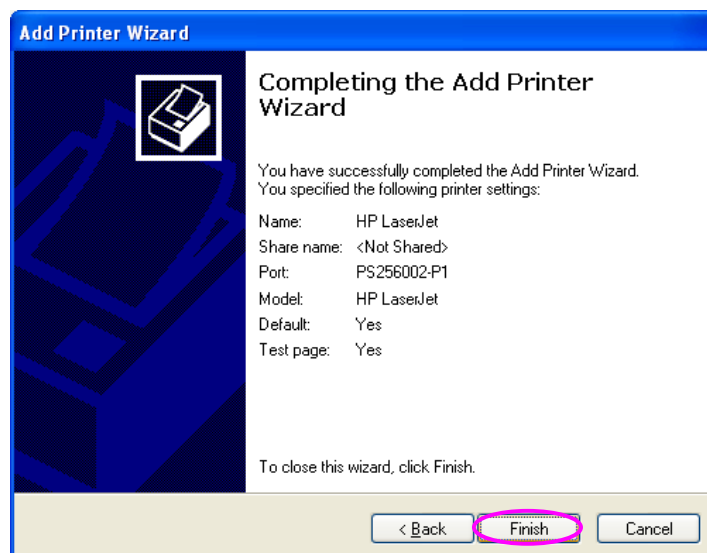

4. Windows NT/2000/2003 Network


4.1 System Architecture

In Windows network environment, other than the Peer-to-Peer network printing architecture described in the previous chapter, we also offer the Server-Based Printing architecture for Windows NT/2000/2003 server. Only one Windows NT/2000/2003 is required to have Windows PTPP (Peer-to-Peer Printing) driver installed and share the printing service on the network. Other network users can simply connect to the server and access the shared printer (see below).

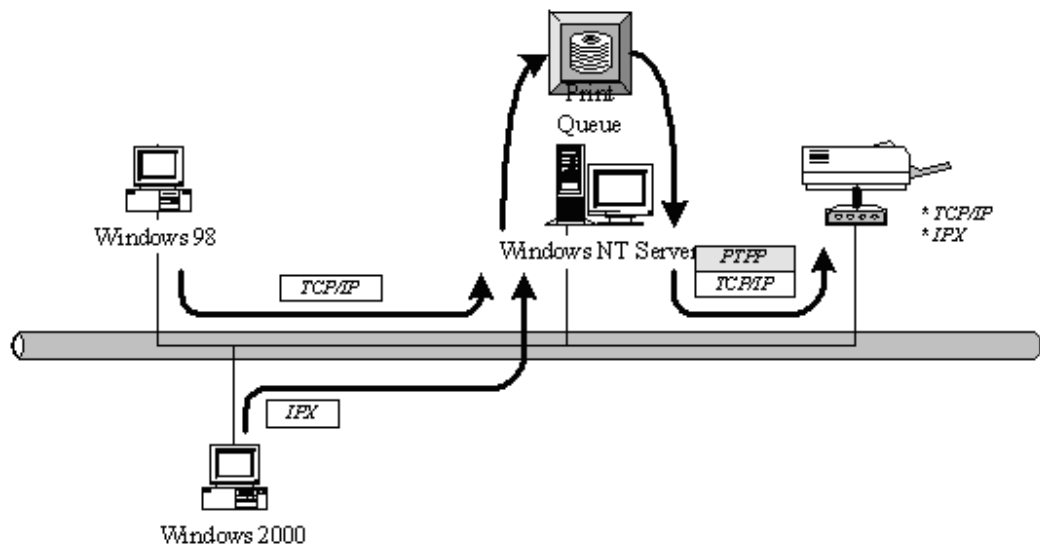

4.2 Windows NT/2000/2003 Server Installation and Setup

Please follow the procedures described below for installation and construct a peer-to-peer connection (PTPP) between Windows NT/2000/2003 Server and Print Server.

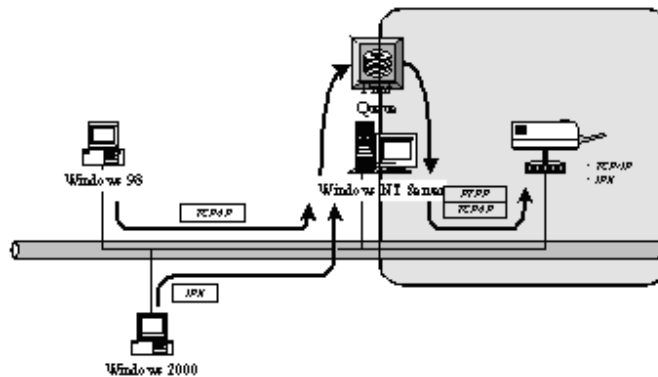

Step1.

If this is your first time installing print server, please install the administrator software on Windows NT/2000/2003 server first. Refer to section 3.2 for installation instructions.

If your network has already installed a working print server and your Windows NT/2000/2003 server has not yet installed the PTPP driver, please install the client software. Refer to section 3.4 and 3.5 for installation instructions.


Step2.

Please add/configure the Peer-to-Peer Printing of the Windows NT/2000/2003 network printer and verify that you can print from Windows NT/2000/2003 to the print server by the installed PTPP driver.


Step3.

Share the above server's printer to the network by performing the standard Windows printer sharing process.

4.3 User Installation and Setup

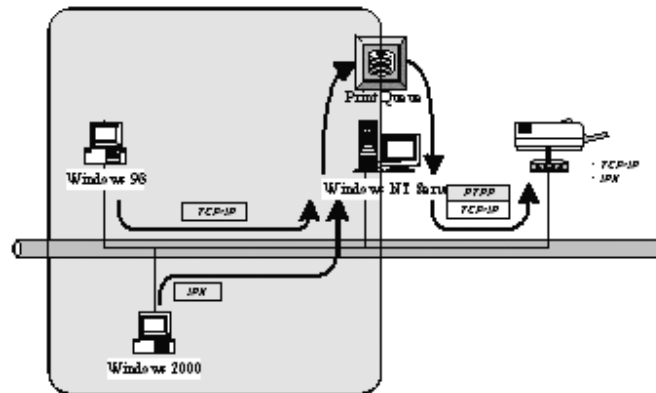

After server side's installation is completed, client side will be able to find the server's shared printer in Network Neighborhood. You only need to perform Window's standard *Add New Printer* procedure, select "**Network Printer**" shown in the screen below, and complete the configurations afterwards to access the shared printer.

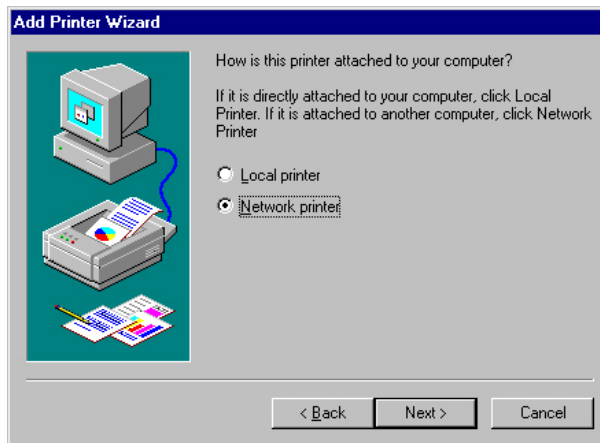


5. NetWare Network

5.1 System Architecture

We implemented NetWare printer sharing functionality into the print server itself, thus allowing one or more printers attached by a print server to be connected to the network. We have developed the print server to support NetWare print server.

Embedded print server, which emulates the “queue management functionality” of NetWare print server, PSERVER program running on the NetWare server. A user first prints a job at a workstation, the job is routed to a NetWare server, the NetWare server stores the job in a print queue and then the print server gets the print job from the queue to printers.

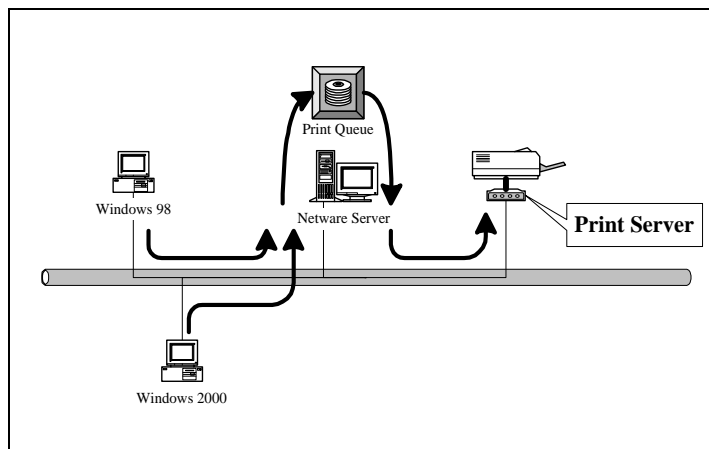

Compare with NetWare printing functionality, the advantages of embedding the NetWare network printing functionality in the print server include:

Installation is easier and quicker.

Network management is easier.

Printing performance is enhanced.

Relieve NetWare file server's burden.

Relieve the need of a workstation running the remote printer utility.

Improve productivity by locating the printer near the workgroup.

Each print server should log into a NetWare server before servicing the print jobs. Each print server will occupy a user account with which it can log into the NetWare server.


5.2 NetWare 3.x/4.x/5.x Installation & Setup

Once your print server is connected to your Ethernet network, you can set it up for use with your networking software.

5.2.1 Installation Using PCONSOLE

5.2.1.1 Configuring as Print Server Mode


1. Run the NetWare PCONSOLE program.
2. Change the current file server, if necessary, using the Change Current File Server menu selection.
3. Choose the Print Queue Information menu selection.
4. Press the Insert key to add a new print queue.
5. Type in a print queue name, such as "PQ" or "Q1".

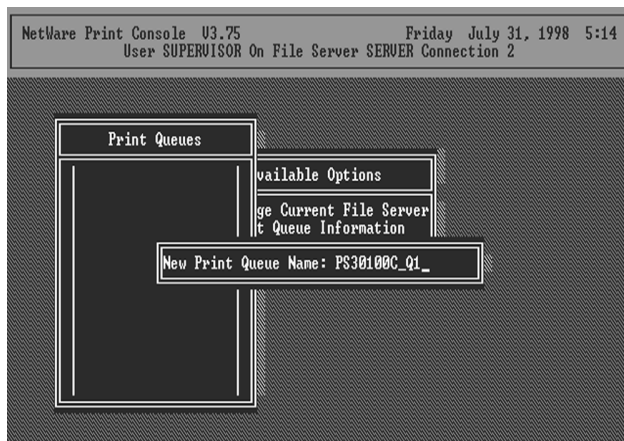

6. You have now successfully created the print queue that your print server will serve. Press the Escape key until the Available Options main menu is displayed.

7. Select Print Server Information.

8. Press the Insert key to add a new NetWare print server object. The print server name can be identical to the PSxxxxxx name printed on the label of the print server.

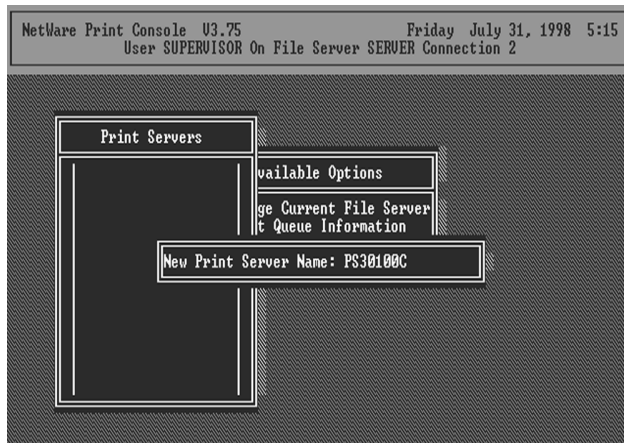


9. Press Enter to select the newly created print server.

10. Select Print Server Configuration.

11. Select Printer Configuration.

12. Select Printer 0 (or Printer 1, Printer 2), and press Enter, then select P1 (or P2, P3) in the Type field. If your print server is with only one port, you do not need to configure this Type field.

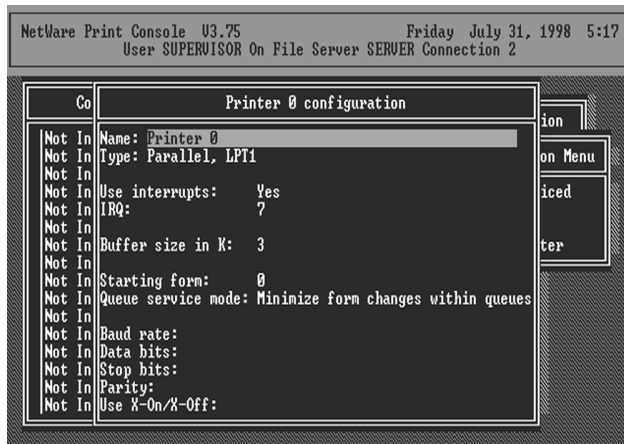

13. Press **Escape**, and answer **Yes** to the **Save Changes** question.

14. Select **Queues Serviced by Printer**, then select **Printer 0** (or **Printer 1**, **Printer 2**) and press **Enter**.

15. Press **Insert** and add your newly created print queue to the list of queues serviced by the printer. Enter a priority number for the queue service, or press **Enter** to accept the default.



16. Repeatedly press Escape to exit the PCONSOLE program.

17. Reset the print server to have the changes take effect.

NOTE: If the print server you have is with multiple printer connectors, you may create multiple print queues and printer objects.

Your print server should now be ready to use. You should be able to redirect printing to your print server using a CAPTURE command such as the one shown in the previous section.

6. UNIX System Network

6.1 Introduction

The print server is available for TCP/IP printing by Unix LPD (Line Printer Daemon) protocol. The LPD protocol originated with Unix release is based on the BSD version of Unix and supported under most versions of Unix.

This chapter explains how to configure the print server for TCP/IP operation, and how to modify configuration files on your Unix system to allow printing to the print server. The configuration examples in this manual follow the syntax for BSD based Unix systems. Please refer to the related system documentation for the correct syntax of your systems.

To configure the print server for LPD printing, perform the procedures below:

1. Enable Print Server's TCP/IP Support.
2. Set up Print Server's IP address.
3. Verify Print Server's IP Address.
4. Configure remote LPD printing on the host.
5. Print a test page.

In the next sections, we will describe these five procedures step by step.

6.2 Enable Print Server's TCP/IP Support

The default configuration of the print server is with TCP/IP support enabled. Anyway, you can configure the print server to enable TCP/IP support using the configuration program.

6.3 Setup Print Server's IP Address

The print server must have a unique IP address in order to be recognized by the network.

You can set up the IP address on the various Unix systems using any one of the following methods:

1. DHCP (Dynamic Host Configuration Protocol)
2. BOOTP (Bootstrap Protocol)

The print server will use the last three methods to obtain its IP address automatically if its IP address is configured as Auto (0.0.0.0).

6.3.1 DHCP

There are many Unix systems that support DHCP protocol, and the procedures to configure the DHCP server database are different. This manual does not describe the DHCP server configuration on the Unix systems. It is highly recommended that the DHCP server should be located on the same network as the print server.

6.3.2 BOOTP

If you have the BOOTP daemon, `bootpd`, running on your UNIX system that is accessible by the print server, you can use the BOOTP protocol to set up the IP address of the print server. We recommend that the BOOTP server should be located on the same subnet as the print server. If you use Network Information Services (NIS) in your system, you may need to rebuild the NIS map with the BOOTP

services before doing the following BOOTP configuration. To rebuild the NIS map, please refer to your system documentation.

To configure the IP address data for the BOOTP server, you will need to log in the host of BOOTP server as the superuser (root). Perform the following steps to add address entries,

1. Optionally, assign a name corresponding to the print server's IP address. You can add this address to the `/etc/hosts` file, by adding a line such as:

```
203.66.191.12      pserver
```

2. Add an entry to the host's `/etc/bootptab` file, similar to the following:

```
hostname:\  
  
:ht=1:\  
  
:ha=print_server_ethernet_address:\  
  
:ip=print_server_ip_address:
```

Lines should be indented with tabs.

Where `hostname` is the device name of a print server, the `ht=1` tag specifies the hardware type is Ethernet, the `ha=` tag specifies the Ethernet address of a print server, which is the Node ID located on the print server. The `ha` tag must be preceded by the `ht` tag. The `ip=` tag should correspond to the IP address you want to assign to the print server.

For example, a print server with the following configuration:

Node ID: 0000B4010101 (this implies Ethernet address is 0000B4010101),

IP address: 203.66.191.12

The entry for this print server in the `/etc/bootptab` file should be:

```
PS010101:\n\n      :ht=1:\n\n      :ha=0000B4010101:\n\n      :ip=203.66.191.12:
```

6.4 Verify Print Server's IP Address

To verify that your print server is responding to the newly assigned IP address using a PING command:

```
ping ip-address
```


6.5 Configure Remote LPD Printing on the Host

The procedure you use to configure your Unix host(s) to allow printing to your network remote print server varies between different varieties of Unix. The procedure below can be used for Unix variants that are related to BSD Unix, such as SunOS or Linux. For other versions of Unix, consult your system documentation, keeping in mind that:

1. The print server should be treated as a BSD networked print server host.
2. The host name should be the name (or IP address) that you have assigned to the print server.
3. The printer name (or queue name) on the remote host should be p1, p2 or p3, the name of the printer port on the print server.

You will need to perform the tasks below, logged in as the superuser (root). To configure your Unix host for printing,

1. Optionally, assign a name corresponding to the print server's IP address. You can add this address to the `/etc/hosts` file, by adding a line such as:

```
203.66.191.186      pserver
```

2. Create a spool directory for the printer in the same directory where spool directories are normally kept on the machine, such as `/var/spool` or `/var/spool/lpd`:

```
mkdir /var/spool/lpd/pserverd  
  
chown daemon /var/spool/lpd/pserverd  
  
chgrp daemon /var/spool/lpd/pserverd  
  
chmod 775 /var/spool/lpd/pserverd
```

3. Add an entry to the host's `/etc/printcap` file, similar to the following:

```
printer-name:\  
  
:lp=\  
  
:rm=203.66.191.186\  
  
:rp=p1\  
  
:lf=/var/spool/lpd/pserverd.log\  
  
:sd=/var/spool/lpd/pserverd\  
  
:mx#0:
```

Lines should be indented with tabs. More than one printer name can be used, with variants separated by vertical bars (name1|name2).

The `rm=` entry should correspond to the IP address you have assigned to the print server. You can also use a host name if you have assigned one in the `/etc/hosts` file.

The `sd=` entry should correspond to the spool directory you created in the previous step.

The `rp=` entry should correspond to the port name of the remote printer. The values should be one of `p1`, `p2` or `p3` depends on the printer port.

The print server should now be available for printing from your Unix host.

7. Configuration Utility

7.1 Introduction

This chapter introduces print server's system configuration utility in Windows environment. This utility is automatically installed during Windows Administrator Utility installation procedure - refer to section 3.2 and 3.3.

This utility provides the most complete management and configuration functions on the print server side. This utility only provides configuration functions for print server itself; it does not include configuration functions for client side or other file server or NetWare server in the network environment.

The Configuration Utility provides the following configuration and management functions:

Search Print Server: Search All Available Printer Servers on the Network.

Print Server Status: Display Print Server Network Status.

General Configuration: General Information of print server.

TCP/IP Configuration: IP Address and DHCP Server Configuration.

NetWare Configuration: NetWare Printing Configuration.

AppleTalk Configuration: AppleTalk Protocol Setting.

Bonjour Configuration: Mac OSX Protocol Setting.

SMB: Configure the SMB Group Name.

SNMP Configuration: SNMP Information Configuration.

Setup Wizard: Guide You Through All the Settings.


System Configuration: Print Server Network Ability Setting, Firmware Upgrade and Language setting.


Wireless Configuration: Wireless LAN Configuration.

Report: List the Status of All Available Print Servers on the Network.

We will explain each function separately in the following section.


7.2 Search for All Available Print Server

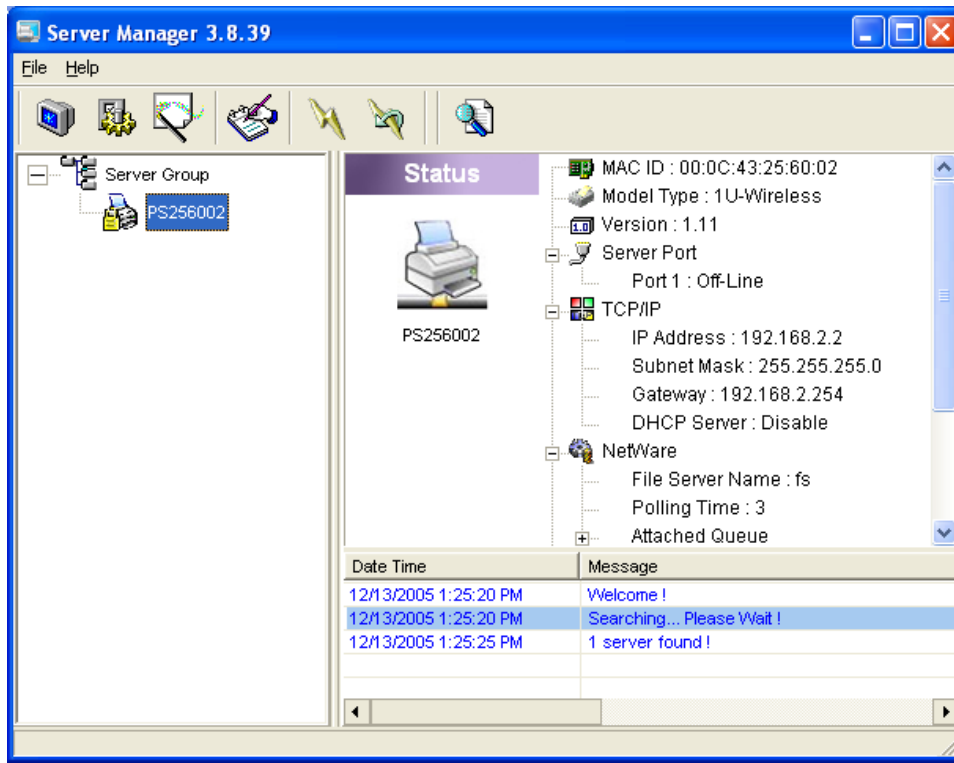


Every time when you run print server's configuration utility, click the "Search" icon  on the tool bar. The configuration utility will delay for several seconds because the utility is using system's available network protocols to search for all print servers on the network. All available print servers will be listed under "Server Group" on the left side of the window.


You must select the print server you would like to configure from the list. The system will, at the same time, display the selected print server's status on the right side of the window.


7.3 Status of Print Server

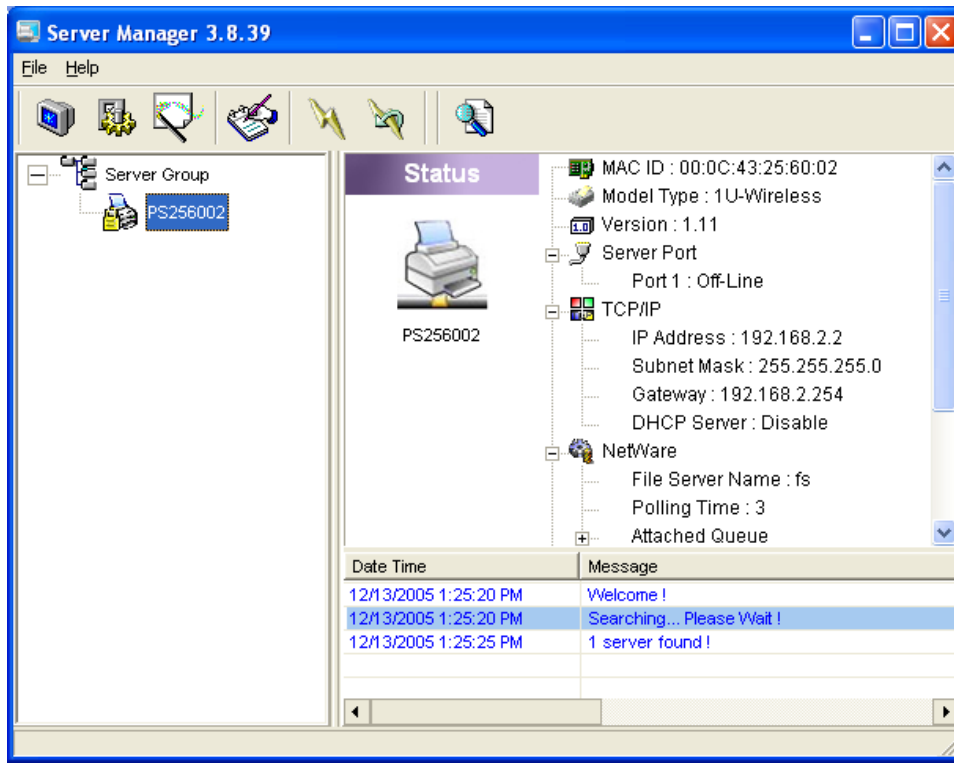


Click “Status” icon  on the tool bar, the status of the current selected print server will be showed on the right side of the window.


The information of the print server displayed are MAC ID, Model Type, Firmware Version, status of each printer port, NetWare file server name, NetWare file server polling interval, NetWare printer queue names, IP address, subnet mask, default gateway, AppleTalk printer type, AppleTalk zone and print server printing ability...etc.

You can refresh the print server’s status by pressing the “Refresh” button .

You can restart the print server by pressing the “Reboot” button .


7.4 Setup the Print Server

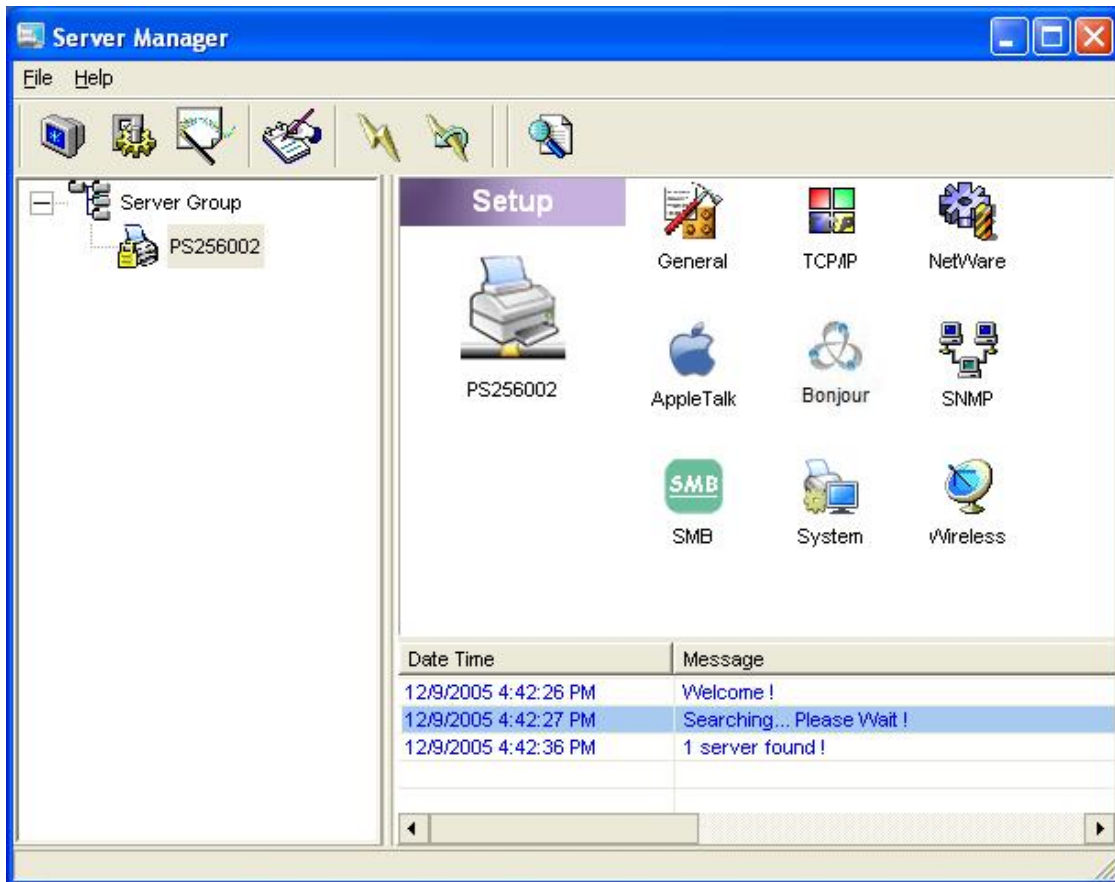

Click “Setup” icon  on the tool bar, the setup items of the current selected print server will be showed on the right side of the window.


Double click one of the icons to set up the selected print server. A screen will pop up to verify “User Name” and “Password” of the print server. The default values are as follows.

- User Name: admin
- Password: 1234

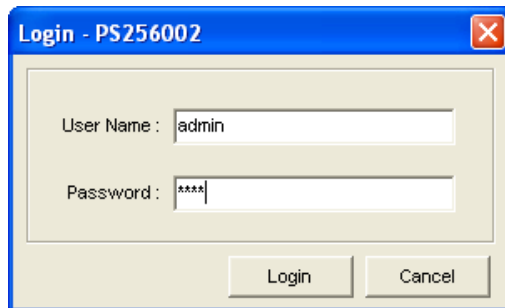

The image shows a Windows-style dialog box titled "Login - PS256002". It has a blue title bar with a close button (X) on the right. The main area is light beige and contains two text input fields. The first field is labeled "User Name:" and contains the text "admin". The second field is labeled "Password:" and contains four asterisks "****". At the bottom of the dialog, there are two buttons: "Login" on the left and "Cancel" on the right.

7.5 General Configuration

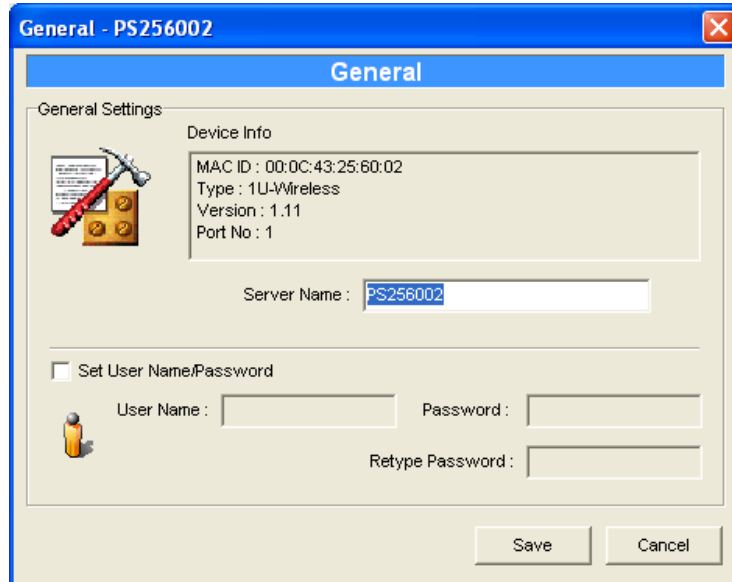



Double Click “General” icon and the General configuration window will pop-up.

You can see basic print server information in this page. You also can configure the “Server Name”, “User Name” and “Password” here.

Server Name, the name of the print server. You can use this name to identify the print server when you are searching for the print server by the administration and client utilities.

User Name / Password is used to authenticate the administrator by the Web administration tool.

7.6 TCP/IP Configuration

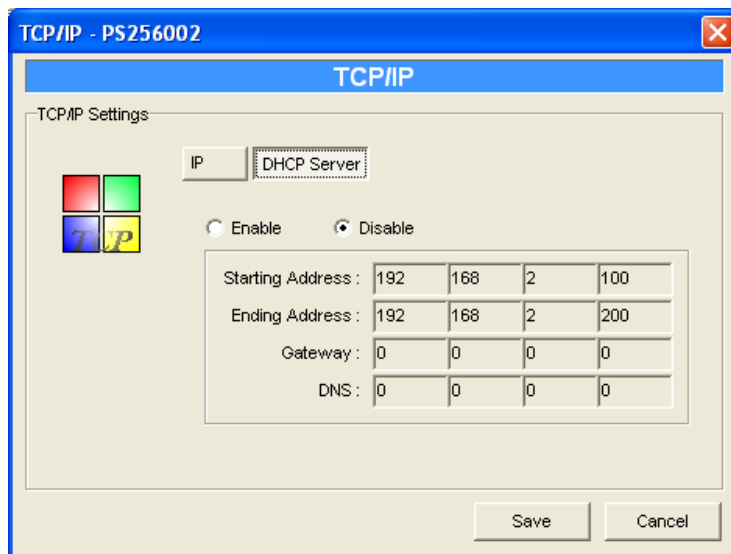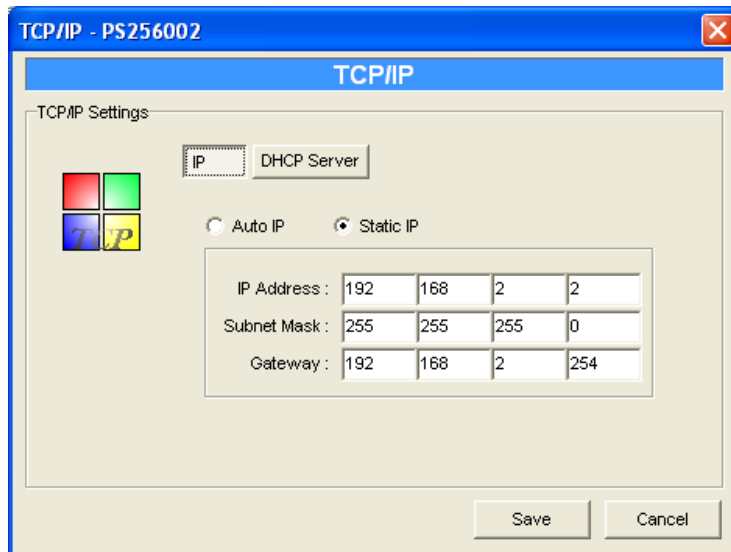


Double Click “TCP/IP” icon and the TCP/IP configuration window will pop-up.

You can configure the print server to automatically get IP from DHCP server or manually specify static IP. The print server also has a built-in DHCP server. You can enable this DHCP server and let it manages IP for you.

Click the “IP” button to enter the IP setting page. If you need the print server to automatically get an IP from DHCP server, select “Auto IP”. You also can select “Static IP” to manually assign “IP Address”, “Subnet Mask” and “Gateway” for the print server.

Click the “DHCP Server” button to enter the DHCP server’s setting page. You can “Enable/Disable” the DHCP server or set “Auto” and assign a range of IP addresses here. The DHCP server is disabled by default. If Auto is selected, the DHCP Server of print server will be enabled only when there is no other DHCP Server within the network. When “Enable” or “Auto” is selected, you have to configure “Starting Address”, “Range”, “Subnet Mask”, “Gateway” and “DNS”. The print server will assign a unique IP for each client.

7.7 Netware Print Server Configuration

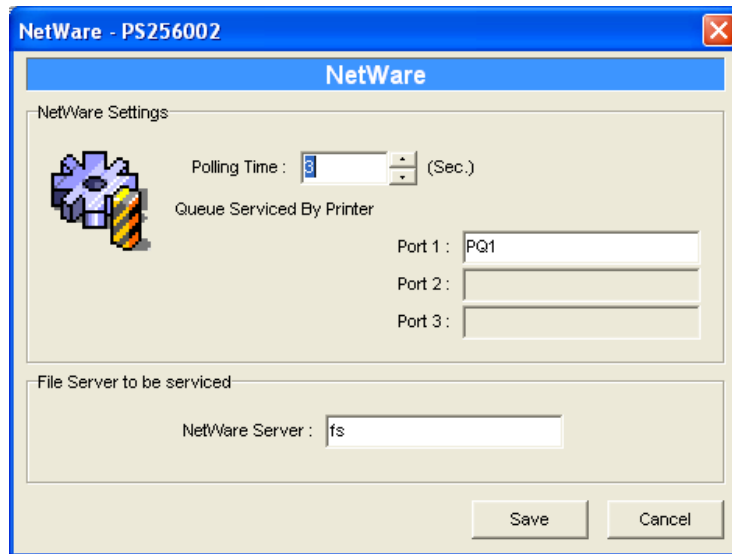

Double Click “NetWare” icon and the NetWare configuration window will pop-up.

This print server supports NetWare Bindery Printing method. The print server periodically polls the NetWare server printer queues for printing jobs. You have to assign the NetWare server name, print server polling interval and the name of queue on the NetWare server for each printer port.

Polling Time is the polling interval of the print server for waiting printing jobs on the NetWare server.

Queue Serviced by Printer is the name of the printer queue on the NetWare server. The printer queue keeps all printing jobs waiting on the NetWare server. You have to assign a printer queue for each printer port of this print server.

NetWare Server is the name of the NetWare file server that provides printer queues.

7.8 AppleTalk Configuration




Double Click “AppleTalk” icon and the AppleTalk configuration window will pop-up.

AppleTalk is a data communication protocol often used by Macintoshes. The print server can use these parameters to join the AppleTalk network and share the printer to other AppleTalk workstations. You have to setup the “Zone Name” and “Printer Type” for each printer port of this print server.

Zone Name: Print server has to join zones of AppleTalk before it can be shared to other workstations. Only workstations in the same zone can share the printer. If you want to share the printer to all workstations in all Zones, you should enter only “*” in the “Zone Name” field.


Printer Type, the type of printer attached to each printer port. You can get the printer type from the manufacturer of the printer.

7.9 Bonjour Configuration

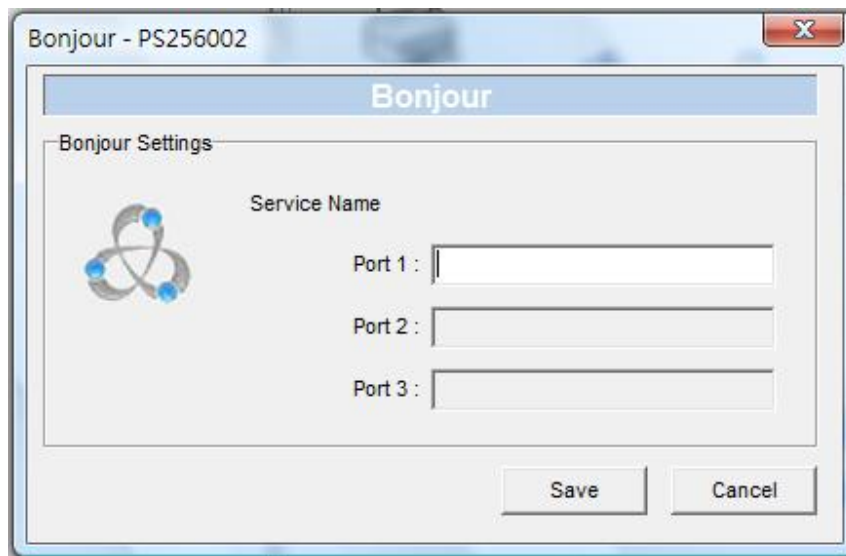

Bonjour enables automatic discovery of computers, devices and services on IP network. The service name will be seen by users on IP network, you have to designate the unique and friendly name to describe the device.

7.10 SNMP Configuration

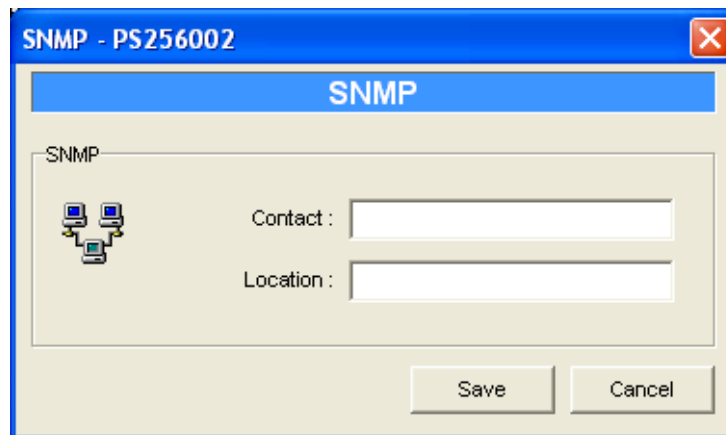


Double Click “SNMP” icon and the SNMP configuration window will pop up.

Contact: You can enter the print server administrator’s contact information here. This information will be displayed in the SNMP management tool.


Location: You can enter the installed location of the print server here. This information will be displayed in the SNMP management tool.

7.11 SMB Configuration

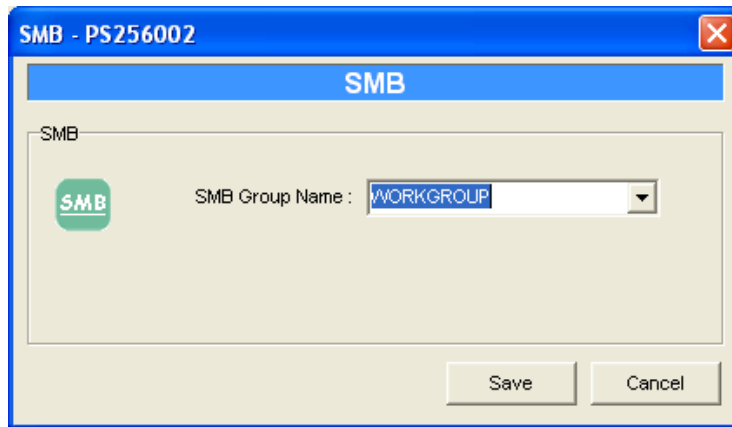

SMB Group Name, the name of SMB group that this print server belongs to. All PC should join the same group before they can use this print server by SMB protocol.

7.12 System Configuration

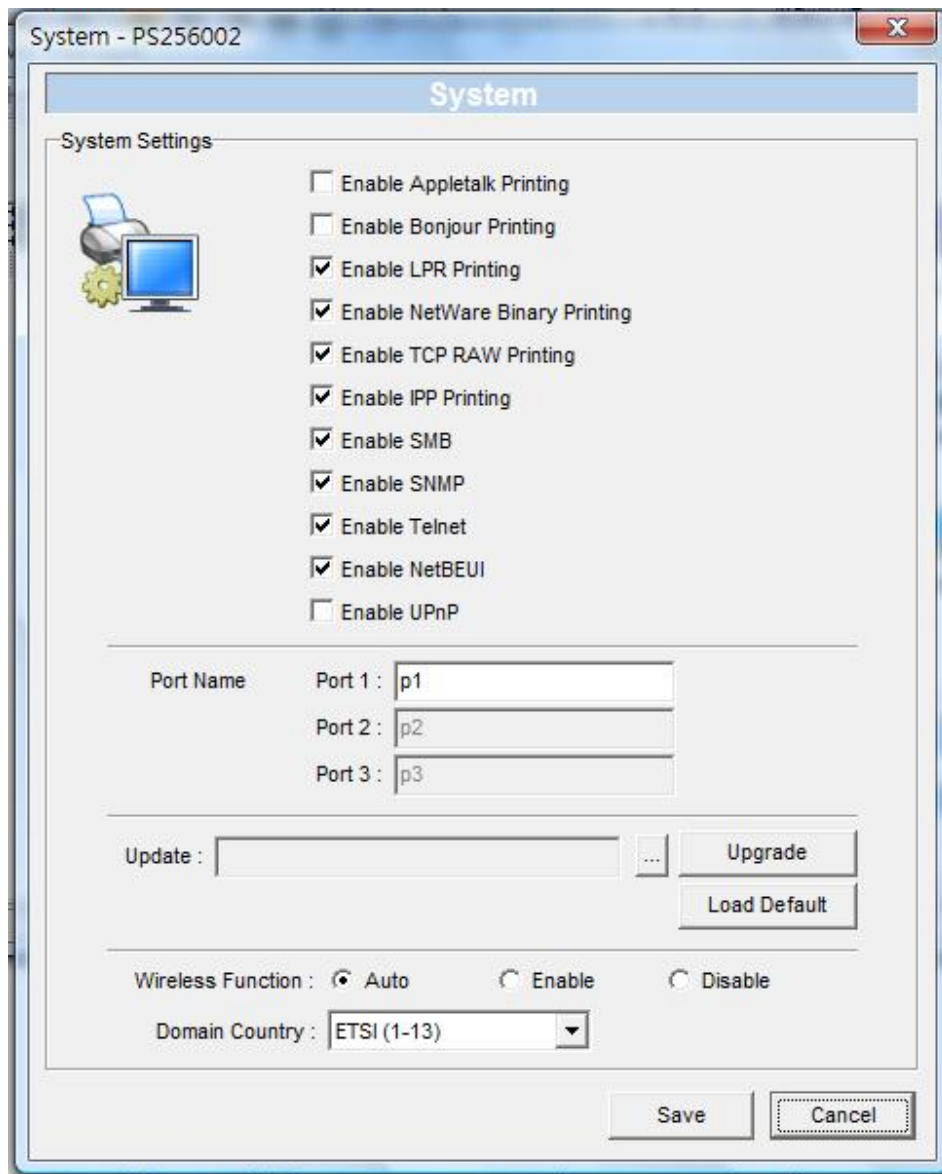


Double Click “System” icon and the System configuration window will pop-up.

In the System configuration page, you can select to enable/disable each printing or management protocol, assign name for each printer port of this print server,

upgrade the new firmware for this print server, and enable/disable wireless function.

Port Name is the name of the printer port. Each printer port has to be assigned a name. The client utility uses this name to access the printer port.

Upgrade Firmware: You can use this “Upgrade Firmware” tool to update the newest firmware of the print server. Click “

Wireless Function: You can select “Enable” or “Disable” to manually enable or disable the wireless function. If you manually enable wireless function, the print server’s wireless LAN will be always enabled and Ethernet will be always disabled. If you manually disable the wireless function, the print server’s wireless LAN will be always disabled and Ethernet will be always enabled. You also can select “Auto” to let the print server automatically decide to enable or disable the wireless function. The print server only can work in either Ethernet or wireless LAN mode. It cannot work in both Ethernet and wireless LAN mode at the same time. When the print server starts up, it will auto-detect if the LAN port is connected to an active network by an Ethernet cable. If the print server is connected to an active network by Ethernet cable when starting up, the print server will run in Ethernet mode. If the print server is not connected to an active network by Ethernet cable when starting up, the print server will run in

wireless LAN mode. The print server default is in “Auto” mode.

Domain Country: The wireless channels are different from country to country. Generally, the channels are from 1 to 11 in USA and from 1 to 13 in Europe. The operating channel will be set to the print server before importing. If you are in different country, please make sure that you have set the available channels according to your location.

7.13 Wireless Configuration

If you want to use the print server through wireless LAN, please set up the print server through Ethernet first and make sure your wireless LAN setting is correct. After setting the wireless LAN, unplug the Ethernet cable and restart the print server, then you can start to use the print server through wireless LAN. If the wireless configuration does not work, please plug the Ethernet cable again, restart the print server and configure the print server through Ethernet until the wireless LAN settings are correct.

The default settings of the print server wireless function are as follows.

- Mode: Infrastructure
- SSID: Default
- Channel: 11



Double Click “Wireless” icon and the wireless configuration window will pop-up.

You use access point to build up wireless network, if will be “Infrastructure Mode”.


After selecting the operation modes of the wireless function, click “Next” to go to further detailed configuration.

Infrastructure Mode:



In the Infrastructure mode, you have to let the print server associate with an access point. You let the print server scan for an available access point automatically or manually assign the SSID of the access point you want to use.

If you select to let the print server scan for an available access point, the following window will pop up.

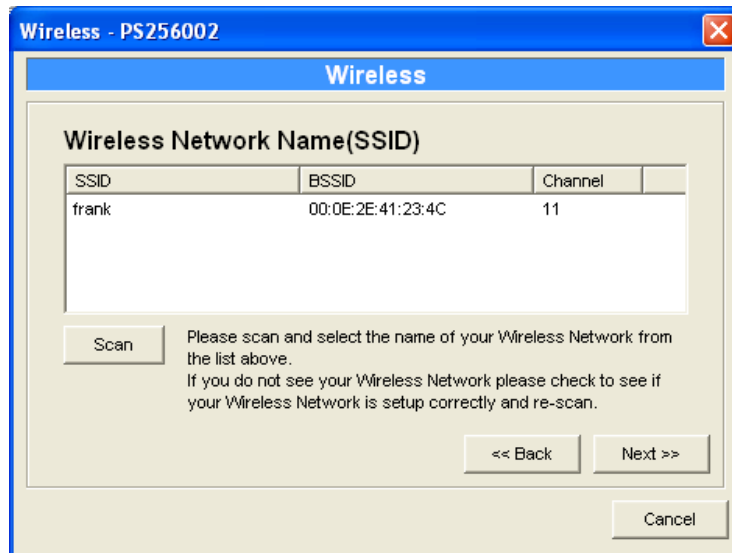


The list is the scanned available access points. Select an access point in the list and click "Next". If you cannot find the access point that you want to use, click "Scan" to let the print server scan again.

"Infrastructure" mode has to go through the following procedure:



This print server supports WEP, WPA-PSK and WPA2-PSK security mode. If you want to use WEP encryption to protect your wireless network, you have to select “WEP(ASCII)” or “WEP(HEX)”. If you want to use WPA-PSK, you have to select “WPA-PSK”. If you want to use WPA2-PSK, you have to select “WPA2-PSK”. The wireless security setting should be the same with other wireless devices in the same network.

WEP Security Mode:

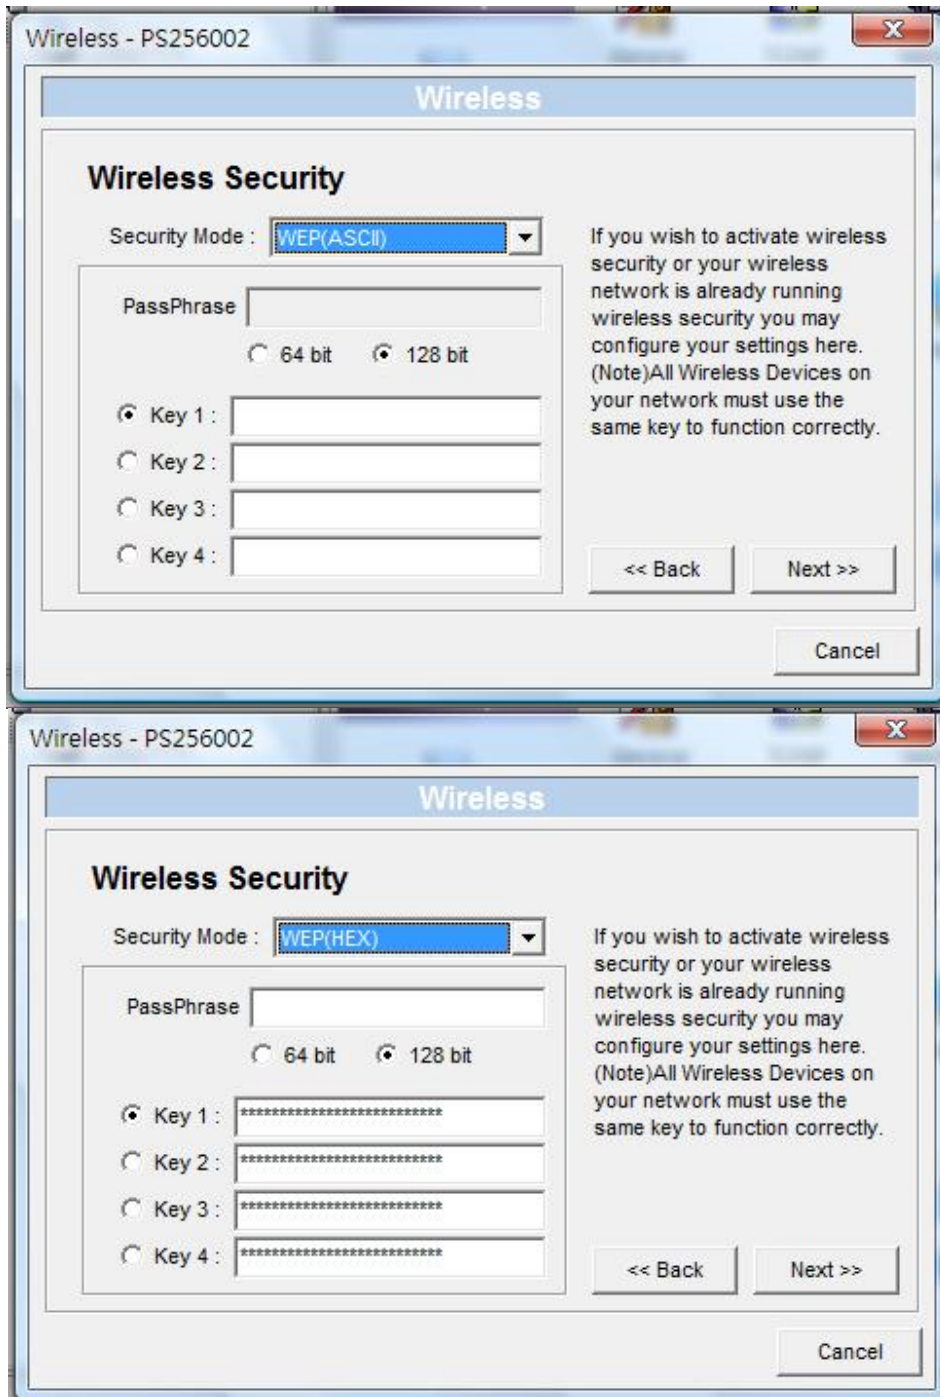

You can select “64 bit” or “128 bit” length and “Hexadecimal” or “ASCII” format for the encryption key. Longer key length can provide stronger security but worth communication performance.

Enter four key values by following the rules below and select one key as the default key.

- PassPhrase – A passphrase simplifies the WEP encryption process by automatically generating the WEP encryption keys for the print server. This setting is only valid when the security mode is in “WEP(HEX)”.
- Key 1 to Key 4 – If the key length is 64-bit, enter 10-digit Hex values or 5-digit ASCII values as the encryption keys. For example: “0123456aef” or “Guest”.

If the key length is 128-bit, enter 26-digit Hex values or 13-digit ASCII values as the encryption keys. For example: “01234567890123456789abcdef” or “administrator”.

WPA-PSK Mode:



“WPA-PSK” requires users to select the advanced encryption methods, i.e. TKIP or AES and enter a set of shared key.

- TKIP – TKIP (Temporal Key Integrity Protocol) changes the temporal key every 10,000 packets. This insures much greater security than the standard WEP security.
- AES – AES has been developed to ensure the highest degree of security and authenticity for digital information and it is the most advanced solution defined by IEEE 802.11i for the security in the wireless network.
- Pre-shared Key Format – Select “Passphrase” or “Hex” key format. If “Passphrase” is selected, please enter 8 to 63 digits

of ASCII format to be the key for the authentication within the network. If “Hex” is selected, please enter 64 digits of Hex code which should be “0-9” and “A-F”.


WPA2-PSK Mode:



“WPA2-PSK” requires users to select the advanced encryption methods, i.e. TKIP or AES and enter a set of shared key.

- AES – AES has been developed to ensure the highest degree of security and authenticity for digital information and it is the most advanced solution defined by IEEE 802.11i for the security in the wireless network.
- Key – Enter 8 to 63 digits of ASCII format to be the key for the authentication within the network.


When you finish configuring the wireless security, click “Next” to go to next step.

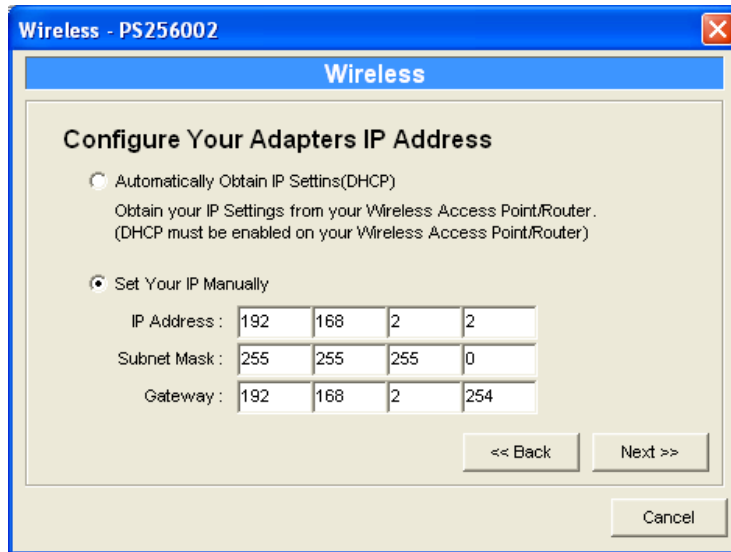

You can select to let the print server automatically obtain IP settings with DHCP client or manually assign the IP settings.


If you manually assign the IP settings, you have to enter IP address, subnet mask and default gateway address.


When you finish configuring the IP settings, click "Next" to confirm the IP Address configuration.

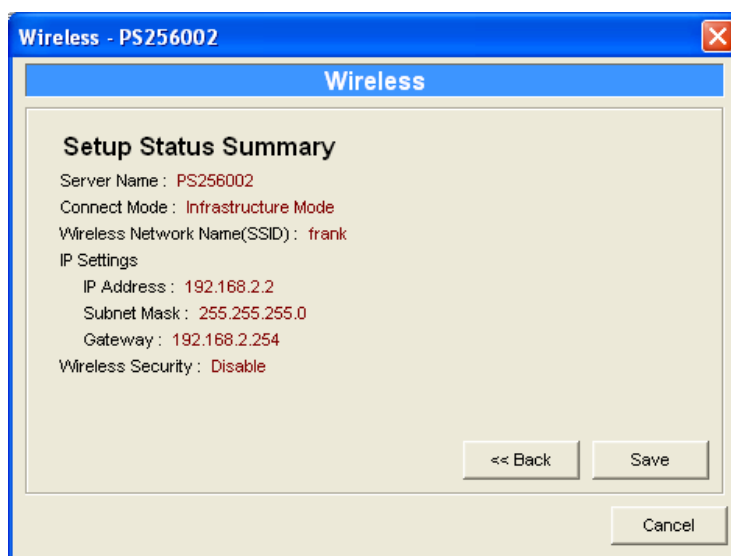

Click “Save” to save the wireless configuration.


7.14 Wizard

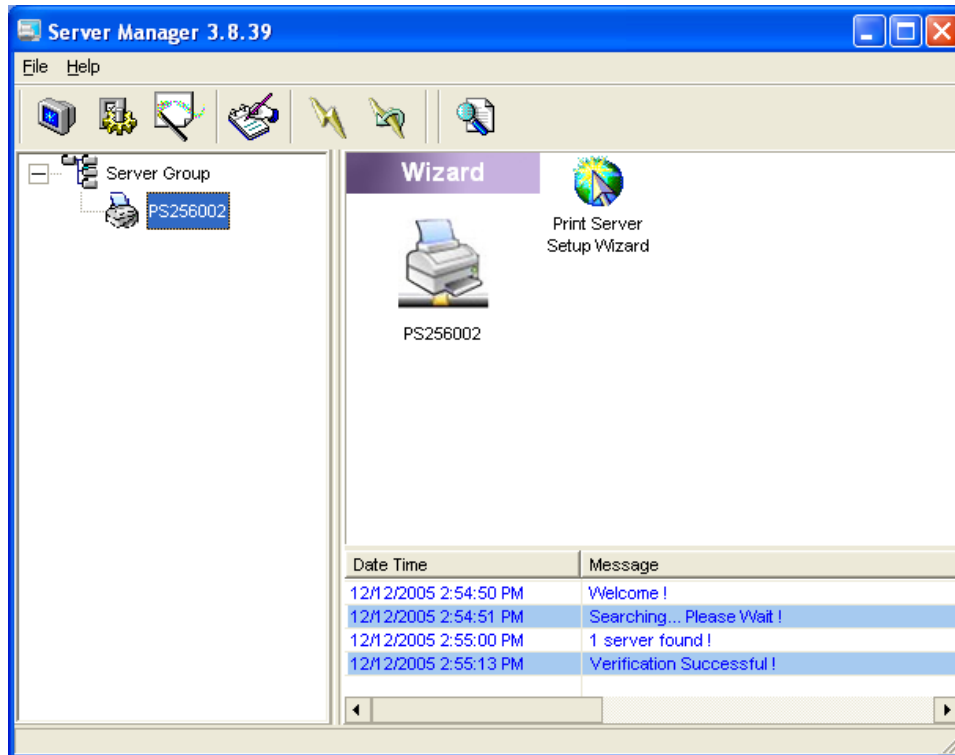


Click “Wizard” icon  on the tool bar, the setup wizard item of the current selected print server will be showed on the right side of the window.

Double click the “Print Server Setup Wizard” the setup wizard will guide you through all the setup process.


Step 1: Set up the name of this print server, the port name for the print server and select to enable or disable the wireless function.

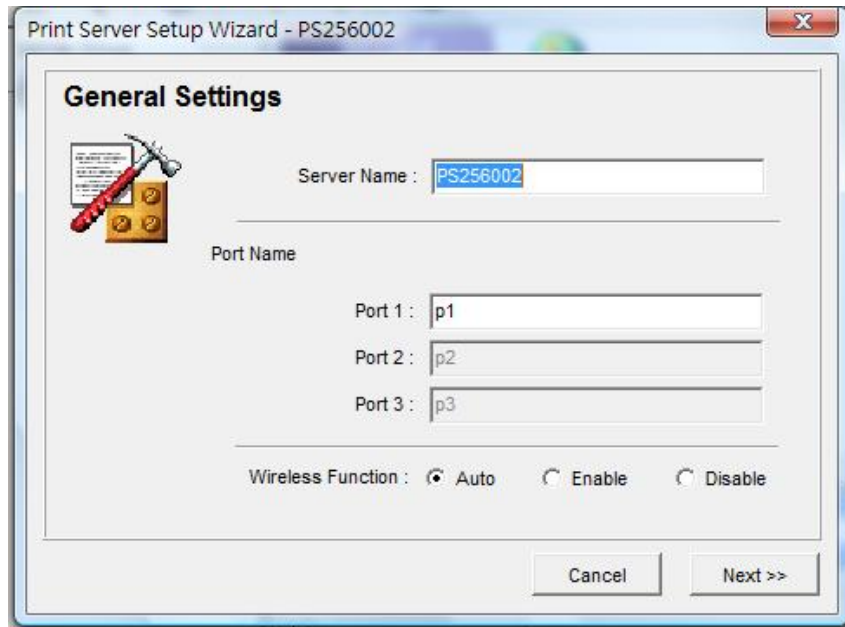

Step 2: Select to enable required printing protocol. Please refer to section 7.12 for detail information.

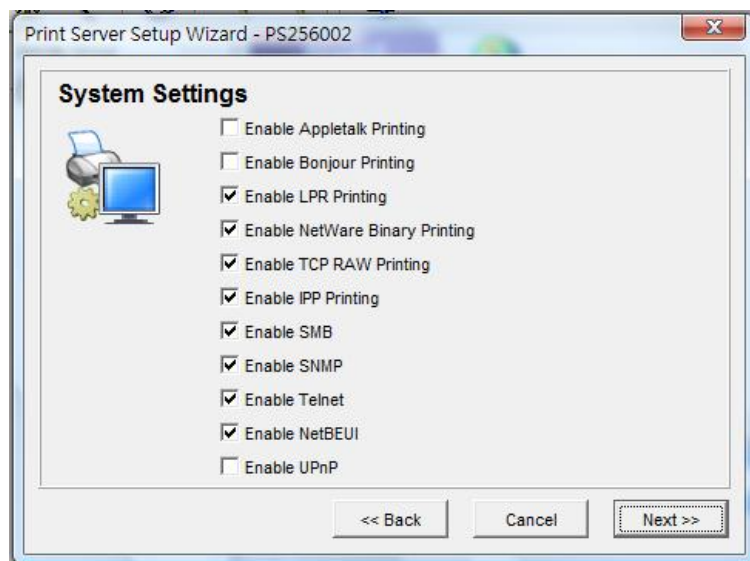

Step 3: Setup the IP of this print server and the DHCP server. Please refer to section 7.6 for detail information.

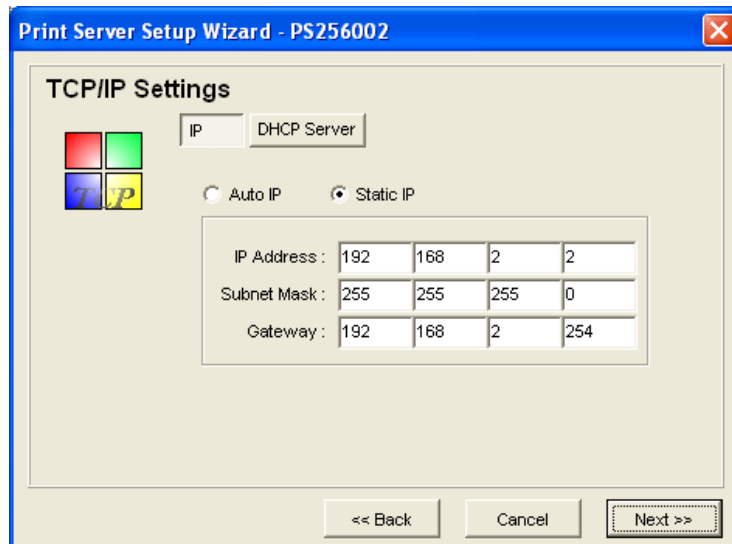


Step 4: Setup the NetWare printing. Please refer to section 7.7 for detail information.




Step 5: Select the Wireless Adapter mode and complete wireless LAN settings. The other procedures are the same with “Wireless” Setting in “Setup” screen. Please refer to section 7.13 for detail information.



Step 6: Click “Save” to finish setting.

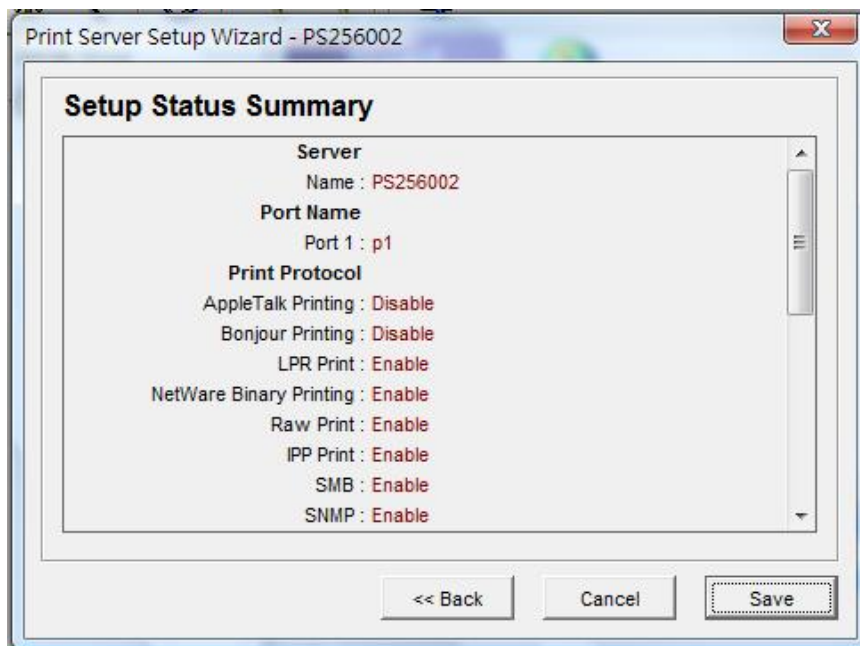


7.15 Report

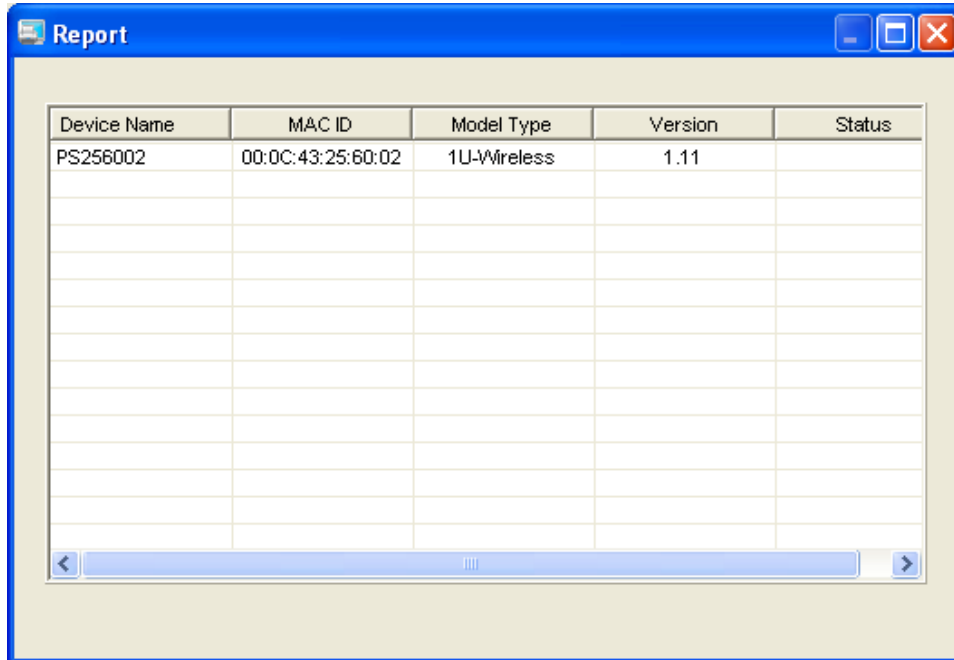

The screenshot shows a window titled "Report" with a blue title bar and standard Windows window controls (minimize, maximize, close). The main content is a table with five columns: "Device Name", "MAC ID", "Model Type", "Version", and "Status". The first row contains the following data: "PS256002", "00:0C:43:25:60:02", "1U-Wireless", "1.11", and an empty "Status" cell. The table has several empty rows below the first one. A horizontal scrollbar is visible at the bottom of the table area.

Device Name	MAC ID	Model Type	Version	Status
PS256002	00:0C:43:25:60:02	1U-Wireless	1.11	

Click “Report” icon  on the tool bar, the Report window will pop up.

The report lists basic information of all available print servers on the network. The information includes Device Name, MAC ID, Model Type, Firmware Version and Status of print server.

8. Web Management

8.1 Introduction

Print server can be configured and managed on the Web. Through Local Area Network, or even Internet, administrator can easily configure and manage print server's various main functions in browsers. Simply enter print server's IP address into your browser's address field to manage a print server by print server's built-in Web Server.

The default IP Address, User Name and Password settings of the Print server are as follows.

IP Address: 192.168.2.2

User Name: Admin

Password: 1234

8.2 Login

You may use any Web Browser to review the status or configure the settings of the print server. After entering the IP address of the print server, a login page display. You have to enter correct “User Name” and “Password” before going to the Web Management pages.

Notes: Default User Name is “admin”, default password is “1234”.



The image shows a Windows-style dialog box titled "Connect to 192.168.2.2". The dialog has a blue header bar with a question mark icon and a close button (X). Below the header is a yellow background area with a key icon. The main content area is white and contains the following elements:

- Text: "Default password:1234"
- Label: "User name:" followed by a dropdown menu showing "admin".
- Label: "Password:" followed by a text input field containing five dots.
- Checkbox: "Remember my password" (unchecked).
- Buttons: "OK" and "Cancel" at the bottom.

8.3 Device Status

8.3.1 System

Print Server			
Device Setup Setup Wizard System Tools			
STATUS SYSTEM			
Current system settings of the print server.			
System Information			
SYSTEM	Device Name:	PS4481c7	Raw Printing: Enabled
Printer	Print Server Name:	PS256002	IPP Printing: Enabled
TCP/IP	Model Type:	1UWG	LPR Printing: Enabled
SMB	System up time:	0day:00h:32m:51s	Bonjour: Disabled
SNMP	Firmware Version:	1.08	AppleTalk Printing: Disabled
NetWare	MAC Address:	00:0e:2e:44:81:c7	NetWare Printing: Enabled
AppleTalk	USB Port Number:	1	SMB Printing: Enabled
Bonjour	LPT Port Number:	0	SNMP: Enabled
	Wireless Lan Status:	Disabled	Telnet: Enabled
			NetBEUI Printing: Enabled
			UPnP: Disabled

System Information includes “Device Name”, “Print Server Name”, “Model Type”, “System Up Time”, “Firmware Version”, “MAC Address”, and the protocols enabled status, etc.

8.3.2 Printer

The screenshot displays the 'Print Server' configuration interface. At the top, there are navigation links: 'Device Setup', 'Setup Wizard', and 'System Tools'. Below this, a status bar indicates 'Connected printer on the print server.' A sidebar on the left contains a 'STATUS Printer' section with a list of protocols: SYSTEM, Printer, TCP/IP, SMB, SNMP, NetWare, AppleTalk, and Bonjour. The main content area is titled 'Printer 1' and lists the following details: Manufacturer, Model Number, Printing Language Supported, and Current Status: Off-Line.

Print Server	
Device Setup Setup Wizard System Tools	
Connected printer on the print server.	
STATUS Printer	
SYSTEM	
Printer	
TCP/IP	
SMB	
SNMP	
NetWare	
AppleTalk	
Bonjour	
Printer 1	
	Manufacturer:
	Model Number:
	Printing Language Supported:
	Current Status: Off-Line

This page lists information of printer connected to the printer port.

8.3.3 TCP/IP

The screenshot displays the 'Print Server' configuration interface. At the top, there is a navigation bar with links for 'Device Setup', 'Setup Wizard', and 'System Tools'. Below this, a 'STATUS' section is visible, with 'TCP/IP' selected. The main content area is titled 'Current TCP/IP settings of the print server.' and contains a table of settings:

TCP/IP Settings	
DHCP/BOOTP:	Enabled
IP Address:	10.0.11.110
Subnet Mask:	255.255.255.0
Gateway:	10.0.11.1
Use DHCP Server:	Disabled

On the left side of the interface, a vertical menu lists various system components: SYSTEM, Printer, TCP/IP (highlighted), SMB, SNMP, NetWare, AppleTalk, and Bonjour.

This page lists all TCP/IP settings of the print server including “IP Address”, “Subnet Mask” and “Gateway”. It also lists DHCP server setting.


8.3.4 SMB

The screenshot shows a web interface for a Print Server. At the top, there is a header "Print Server" in a dark grey bar. Below the header, there are navigation links: "Device Setup", "Setup Wizard", and "System Tools". The main content area is divided into a left sidebar and a main panel. The sidebar contains a "STATUS" section with "SMB" highlighted in orange, and a "SYSTEM" section with links for "Printer", "TCP/IP", "SMB", "SNMP", "NetWare", "AppleTalk", and "Bonjour". The main panel displays the "Current SMB settings of the print server." and a section titled "SMB Settings" with the following values: "SMB Group Name: WORKGROUP", "Pass Job When Error Occured: Disabled", and "Waiting time to pass job: Disabled".

Print Server	
Device Setup Setup Wizard System Tools	
STATUS SMB	Current SMB settings of the print server.
SYSTEM	SMB Settings
Printer	SMB Group Name: WORKGROUP
TCP/IP	Pass Job When Error Occured: Disabled
SMB	Waiting time to pass job: Disabled
SNMP	
NetWare	
AppleTalk	
Bonjour	

This page lists the SMB group setting of the print server.

8.3.5 SNMP

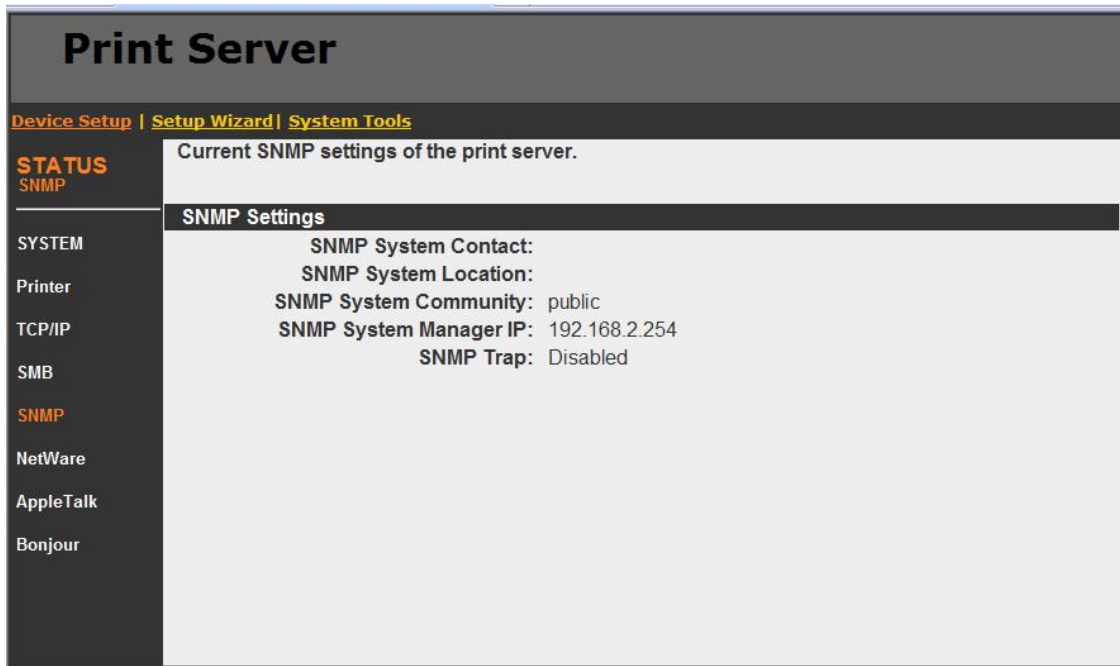

The screenshot shows a web interface for a Print Server. At the top, there is a navigation bar with links for "Device Setup", "Setup Wizard", and "System Tools". Below this is a sidebar menu with categories: "STATUS", "SYSTEM", "Printer", "TCP/IP", "SMB", "SNMP", "NetWare", "AppleTalk", and "Bonjour". The "SNMP" category is selected and highlighted in orange. The main content area displays the "Current SNMP settings of the print server." and a table of settings:

SNMP Settings	
SNMP System Contact:	
SNMP System Location:	
SNMP System Community:	public
SNMP System Manager IP:	192.168.2.254
SNMP Trap:	Disabled

This page lists the SNMP settings of the print server. It includes the settings of “SNMP System Contact” and “SNMP System Location”.

SNMP System Community: To enter the name of system group. Default name is “Public”.

SNMP System Manager IP: The IP address will get trap alarm.

SNMP Trap: There are 2 levels to choose, v1 and v2.

8.3.6 NetWare

The screenshot shows a web interface for a Print Server. At the top, there is a navigation bar with links for "Device Setup", "Setup Wizard", and "System Tools". Below this is a sidebar menu with categories: "STATUS NetWare", "SYSTEM", "Printer", "TCP/IP", "SMB", "SNMP", "NetWare", "AppleTalk", and "Bonjour". The main content area displays the "Current NetWare settings of the print server." and is organized into sections: "General Settings" (Polling Time: 3 seconds), "NetWare Bindery Settings" (Use Bindery Mode: Enabled, Name of the File Server: fs), and "NetWare Port Settings" (Port1 Attached Queue: Off Line).

Print Server	
Device Setup Setup Wizard System Tools	
STATUS NetWare	Current NetWare settings of the print server.
	General Settings
SYSTEM	Polling Time: 3 seconds
Printer	NetWare Bindery Settings
TCP/IP	Use Bindery Mode: Enabled
	Name of the File Server: fs
SMB	NetWare Port Settings
SNMP	Port1 Attached Queue: Off Line
NetWare	
AppleTalk	
Bonjour	

This page lists NetWare settings, including “Polling Time”, “Use Bindery Mode”, “Name of the File Server” and “Port Attached Queue”.

8.3.7 AppleTalk

The screenshot shows the 'Print Server' configuration window. At the top, there is a navigation bar with 'Device Setup', 'Setup Wizard', and 'System Tools'. Below this is a 'STATUS' section for 'AppleTalk' with a sub-section 'AppleTalk Settings'. A table lists the settings for 'Printer 1', showing 'Printer Type' as 'LaserWriter'. A sidebar on the left contains a list of system services: SYSTEM, Printer, TCP/IP, SMB, SNMP, NetWare, AppleTalk (highlighted), and Bonjour.

Printer	AppleTalk Zone Name: *
Printer 1	Printer Type: LaserWriter

This page lists AppleTalk settings, including “AppleTalk Zone Name” and “Printer Type” of printers connected to all print ports.

8.3.8 Bonjour

The screenshot shows a web interface for a Print Server. At the top, there is a dark grey header with the text "Print Server". Below the header is a navigation bar with links for "Device Setup", "Setup Wizard", and "System Tools". On the left side, there is a vertical menu with the following items: "STATUS Bonjour", "SYSTEM", "Printer", "TCP/IP", "SMB", "SNMP", "NetWare", "AppleTalk", and "Bonjour". The "Bonjour" item is highlighted in orange. The main content area is titled "Current Bonjour settings of the print server." and contains a sub-section "Bonjour Settings" with the label "Printer 1 Service Name:".

This page lists Bonjour settings, including “Port Service Name” of each port.

8.4 Setup Wizard

8.4.1 System



The screenshot shows the 'Print Server' configuration interface. At the top, there is a navigation bar with 'Device Setup | Setup Wizard | System Tools'. Below this, a sidebar on the left contains a 'SETUP System' menu with options: System, Wireless Setting, TCP / IP, SMB, SNMP, NetWare, AppleTalk, Bonjour, and Save Setting. The main content area is titled 'System Settings' and contains the following text: 'Configure general settings of the print server.' followed by 'Click Save and Next to continue.' Below this, there are two input fields: 'Print server Name: PS256002' and 'PORT1 Name: p1'. A 'Save & Next' button is positioned below the input fields.

You can change the print server name and port name of the print server from here.

Print Server Name, the name of the print server. You can use this name to identify the print server when you are searching for the print server by the administration and client utilities.

Port Name is the name of the printer port. Each printer port has to be assigned a name. Then you can use this name to access the printer port.

8.4.1.1 Admin Password

The screenshot shows a web interface for configuring a print server. The main heading is "Print Server". Below it, there are navigation links: "Device Setup", "Setup Wizard", and "System Tools". The "Setup Wizard" is active, showing a progress bar with "System" selected. The main content area is titled "Administrator's Password" and contains the following text: "Configure administrator settings of the print server." and "Click Save and Next to continue." Below this, there are three input fields: "Name:" with the value "admin", "Password:" with four dots, and "Re-type Password:" with four dots. A "Save & Next" button is located below the input fields. On the left side, there is a sidebar menu with the following items: "System", "-Admin Password", "-Advance Setting", "Wireless Setting", "TCP / IP", "SMB", "SNMP", "NetWare", "AppleTalk", "Bonjour", and "Save Setting".

It allows you to change the password of the print server.

USER Name, the administrator name of the print server. If you change the user name, you have to login to the print server from administrator utility or web management with the new name. The default user name is "admin".

Password, enter the password you want to change to the print server. The password can be up to 8-digit alphanumeric format. The default password is "1234".

Re-type Password, enter the password you want to change to the print server again.

8.4.1.2 Advanced Settings

The screenshot displays the 'Print Server' configuration page. At the top, there is a navigation bar with 'Device Setup | Setup Wizard | System Tools'. Below this, the main content area is titled 'System Configure' and contains the following text: 'Configure Advance settings for the Print Server.' and 'Click Save and Next to continue.' The settings are listed as follows:

IPX:	Enabled
LPR:	Enabled
IPP:	Enabled
Raw Printing:	Enabled
Telnet:	Enabled
NetBEUI:	Enabled
UPnP:	Disabled

At the bottom of the settings area, there is a 'Save & Next' button. On the left side, there is a sidebar menu with the following items: 'System', '-Admin Password', '-Advance Setting', 'Wireless Setting', 'TCP / IP', 'SMB', 'SNMP', 'NetWare', 'AppleTalk', 'Bonjour', and 'Save Setting'.

You can enable/disable the printing protocols from the screen. To enable the function, please select “Enable”; to disable the function, please select “Disable”.

8.4.2 Wireless

The screenshot shows the 'Print Server' configuration interface. At the top, there is a navigation bar with 'Device Setup | Setup Wizard | System Tools'. Below this, the 'SETUP' section is active, with 'Wireless Setting' selected. The main content area is titled 'Wireless Setting' and contains the following instructions and fields:

- Define your ESSID, wireless mode channel no.
- Click Save and Next to continue.

The configuration fields are:

- Function: Auto (dropdown menu)
- Mode: Infrastructure (dropdown menu)
- ESSID: 6F (text input field)
- Channel: 11 (dropdown menu)

A 'Save & Next' button is located below the fields. On the left side, there is a sidebar menu with the following items: System, Wireless Setting (highlighted), -Site Survey, -Encryption, TCP / IP, SMB, SNMP, NetWare, AppleTalk, Bonjour, and Save Setting.

If you want to use the print server through wireless LAN, please set up the print server through Ethernet first and make sure your wireless LAN setting is correct. After setting the wireless LAN, unplug the Ethernet cable and restart the print server, then you can start to use the print server through wireless LAN. If the wireless configuration does not work, please plug the Ethernet cable again, restart the print server and configure the print server through Ethernet until the wireless LAN settings are correct.

You can set parameters that are used for the wireless stations to connect to this print server. The parameters include “Function” and “ESSID”. You can manually set the parameters of wireless LAN in this page or use the “Site Survey” function to automatically search for an available access point and associate with it.

Mode is the operation mode of wireless station. You need to have an access point as the wireless LAN infrastructure, the wireless mode is “Infrastructure” mode.

ESSID is the unique name identified by in a wireless LAN. The ID prevents the unintentional merging of two co-located WLANs. Please make sure that the ESSID of all stations and access points in the same WLAN network are the same.

Channel Number is the channel number of your wireless LAN. The channel number is fixed to number ‘11’.

8.4.2.1 Site Survey

The screenshot shows the 'Print Server' configuration page. The main heading is 'Print Server'. Below it, there are navigation links: 'Device Setup | Setup Wizard | System Tools'. The current page is 'Wireless Setting', which is part of the 'SETUP' section. The main content area is titled 'Wireless Site Survey' and contains the following text: 'Scan wireless network for print server or IBSS' and 'Click Select then Submit to continue.' Below this is a table with the following data:

ESSID	BSSID	Channel	Mode	Encryption	Signal	Select
FAE	00:1C:10:AA:FE:0D	1	Infrastructure	WPA2-AES	25	<input type="radio"/>
6F	00:0E:2E:91:51:D4	3	Infrastructure	WPA-TKIP	30	<input checked="" type="radio"/>

Below the table are three buttons: 'Refresh', 'Next Page', and 'Submit'. On the left side, there is a sidebar menu with the following items: 'System', 'Wireless Setting', '-Site Survey', '-Encryption', 'TCP / IP', 'SMB', 'SNMP', 'NetWare', 'AppleTalk', 'Bonjour', and 'Save Setting'.

You can use this “Site Survey” function to search for available access points in your location. In the list is the information of all available access points or wireless stations, including SSID, BSSID, Channel, Type, Encryption, and Signal Strength. You can select one wireless device in the list for this print server to associate with.

8.4.2.2 Encryption

This print server supports WEP, WPA-PSK and WPA2-PSK security mode. If you want to use WEP encryption to protect your wireless network, you have to select “WEP”. If you want to use WPA-PSK, you have to select “WPA-PSK”. If you want to use WPA2-PSK, you have to select “WPA2-PSK”. The wireless security setting should be the same with other wireless devices in the same network.

WEP Security Mode:

Print Server

Device Setup | Setup Wizard | System Tools

SETUP
Wireless Setting

Encryption your data over the wireless network.
Click Save and Next to continue.

Encryption Setting

Encryption mode: WEP
Key length: 64-bit
Key format: Hex (10 characters)
Passphrase:

Enter a key into the table

Default key: Key1
Key 1:
Key 2:
Key 3:
Key 4:

- Key Length – You can choose “64-bit” to use WEP with 64-bit key length encryption or choose “128-bit” to use WEP with 128-bit key length encryption. The longer key length can provide better security but worse transmission throughput.

- **Key Format** – You may select to use ASCII Characters (alphanumeric format) or Hexadecimal digits (in the "A-F", "a-f" and "0-9" range) to be the WEP Key.
- **PassPhrase** – A passphrase simplifies the WEP encryption process by automatically generating the WEP encryption keys for the print server.
- **Default Key** – Select one of the four keys to encrypt your data. Only the key you select it in the “Default key” will take effect.
- **Key 1 – Key 4** – The WEP keys are used to encrypt data transmitted within the wireless network. Fill the text box by following the rules below.

64-bit WEP: input 10-digit Hex values (in the "A-F", "a-f" and "0-9" range) or 5-digit ASCII character as the encryption keys. For example: “0123456aef“ or “Guest“.

128-bit WEP: input 26-digit Hex values (in the "A-F", "a-f" and "0-9" range) or 10-digit ASCII characters as the encryption keys. For example: “01234567890123456789abcdef“ or “administrator“.

WPA-PSK Security Mode:

The screenshot displays the 'Print Server' configuration interface. At the top, there is a navigation bar with 'Device Setup | Setup Wizard | System Tools'. Below this, a sidebar on the left lists various setup categories: 'System', 'Wireless Setting', 'Site Survey', 'Encryption', 'TCP / IP', 'SMB', 'SNMP', 'NetWare', 'AppleTalk', 'Bonjour', and 'Save Setting'. The 'Wireless Setting' section is expanded to show 'Encryption Setting'. The main content area contains the following configuration options:

- Encryption your data over the wireless network.
- Click Save and Next to continue.
- Encryption mode: WPA-PSK (selected from a dropdown menu)
- WPA algorithms: AES (selected from a dropdown menu)
- Pre-shared Key Format: Passphrase (selected from a dropdown menu)
- Pre-shared Key: 1234564321 (entered in a text field)
- A 'Save & Next' button is located below the key field.


“WPA-PSK” requires users to select one of the advanced encryption methods, i.e. TKIP or AES and enter a set of shared key.

- TKIP – TKIP (Temporal Key Integrity Protocol) changes the temporal key every 10,000 packets. This insures much greater security than the standard WEP security.
- AES – AES has been developed to ensure the highest degree of security and authenticity for digital information and it is the most advanced solution defined by IEEE 802.11i for the security in the wireless network.
- Pre-shared Key Format – Select “Passphrase” or “Hex” key format. If “Passphrase” is selected, please enter 8 to 63 digits of ASCII format to be the key for the authentication within the

network. If “Hex” is selected, please enter 64 digits of Hex code which should be “0-9” and “A-F”.

- Pre-Shared Key – The “Pre-Shared Key” is different from the key format selection. Please see above description.

WPA2-PSK Security Mode:

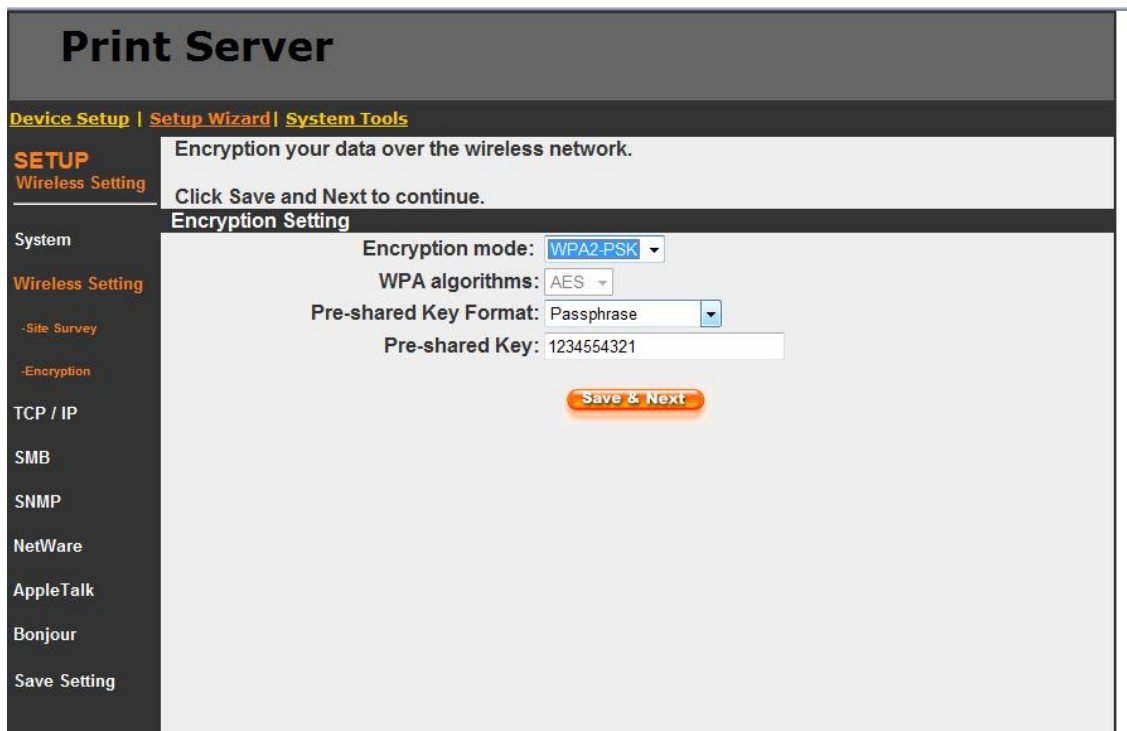

The screenshot displays the 'Print Server' configuration interface. The main heading is 'Print Server'. Below it, there are navigation links: 'Device Setup | Setup Wizard | System Tools'. The left sidebar contains a 'SETUP' menu with 'Wireless Setting' highlighted. The main content area is titled 'Encryption your data over the wireless network.' and includes the instruction 'Click Save and Next to continue.' The 'Encryption Setting' section shows the following configuration: 'Encryption mode: WPA2-PSK', 'WPA algorithms: AES', 'Pre-shared Key Format: Passphrase', and 'Pre-shared Key: 1234554321'. A 'Save & Next' button is located at the bottom of the form.

“WPA2-PSK” requires users to enter shared key with AES algorithms only.

- AES – AES has been developed to ensure the highest degree of security and authenticity for digital information and it is the most advanced solution defined by IEEE 802.11i for the security in the wireless network.

- Pre-shared Key Format – Select “Passphrase” or “Hex” key format. If “Passphrase” is selected, please enter 8 to 63 digits of ASCII format to be the key for the authentication within the network. If “Hex” is selected, please enter 64 digits of Hex code which should be “0-9” and “A-F”.

When you finish configuring the wireless security, click “Save & Next” to confirm the configuration.

8.4.3 TCP/IP

The screenshot shows the 'Print Server' configuration window, specifically the 'TCP/IP Settings' section. The window has a dark header with the title 'Print Server' and a navigation bar with 'Device Setup', 'Setup Wizard', and 'System Tools'. On the left is a sidebar with 'SETUP TCP / IP' highlighted, and other options like System, Wireless Setting, SMB, SNMP, NetWare, AppleTalk, Bonjour, and Save Setting. The main content area is titled 'Configure TCP/IP settings for the print server.' and includes the instruction 'Click Save and Next to continue.' Below this, the 'TCP/IP Settings' section has two radio button options: 'Enable Obtain TCP/IP settings automatically (use DHCP/BOOTP)' (which is unselected) and 'Disable Use the following TCP/IP settings' (which is selected). Under the selected option, there are input fields for 'IP Address: 192.168.2.2', 'Subnet Mask: 255.255.255.0', and 'Gateway: 192.168.2.2'. Below these is a 'Print Server DHCP Server' dropdown menu set to 'Enabled'. Further down are input fields for 'Start IP: 192.168.2.100', 'Range: 192.168.2.200', 'Gateway: 0.0.0.0', 'DNS: 0.0.0.0', and 'Domain:'. At the bottom center is a 'Save & Next' button.

You can configure the print server to automatically get IP from DHCP server or manually specify static IP. The print server also has a built-in DHCP server. You can enable this DHCP server and let it manages IP for you.

If you need the print server to automatically get an IP from DHCP server, select “Enable Obtain TCP/IP Settings Automatically (Use DHCP/ BOOTP)”. You also can select “Disable Use the following TCP/IP Settings” to manually assign “IP Address”, “Subnet Mask” and “Gateway” for the print server.

You can enable/disable or set auto for the print server’s DHCP server. The DHCP server is disabled by default. If the DHCP Server is enabled or set Auto, you have to assign a range of IP addresses here. Fill in the

“Start IP”, “Range”, “DNS”, “Subnet Mask” and “Gateway”, and the print server will assign a unique IP for each client. Note that when “Auto” is selected, the DHCP Server of the print server will be enabled only when there is no other DHCP Server within the network.

8.4.4 SMB

The screenshot shows a web-based configuration interface for a print server. The main heading is "Print Server". Below it, there are navigation links: "Device Setup", "Setup Wizard", and "System Tools". The current step is "SETUP SMB". The instructions state: "Configure SMB settings for the print server. Click Save and Next to continue." The "SMB Settings" section includes the following fields:

- SMB Function: Enabled (dropdown menu)
- SMB Group Name: WORKGROUP (text input field)
- Pass Job When Error Occured: Enabled (dropdown menu)
- Waiting time to pass job: 0 seconds(1~60) (text input field)

A "Save & Next" button is located at the bottom of the settings area. On the left side, there is a vertical menu with the following options: System, Wireless Setting, TCP / IP, SMB (highlighted), SNMP, NetWare, AppleTalk, Bonjour, and Save Setting.

You can enable/disable the SMB protocol from here. If SMB is enabled, enter the “SMB Group Name” to specify the SMB group that this print server belongs to. All PC should join the same group before they can use this print server by SMB protocol. Further more you can enable “Pass Job When Error Occurred” function and enter time length 1-60 seconds in “Waiting time to pass job”.

8.4.5 SNMP

The screenshot shows the 'Print Server' configuration utility. At the top, there's a navigation bar with 'Device Setup', 'Setup Wizard', and 'System Tools'. Below this, a 'SETUP' sidebar lists various configuration categories: System, Wireless Setting, TCP / IP, SMB, SNMP (highlighted in orange), NetWare, AppleTalk, Bonjour, and Save Setting. The main content area is titled 'SNMP Settings' and contains the following fields:

- SNMP Function: Enabled (dropdown menu)
- SNMP System Contact: [Empty text box]
- SNMP System Location: [Empty text box]
- SNMP System Community: public
- SNMP System Manager IP: 192.168.2.254
- SNMP Trap: Disabled (dropdown menu)

A 'Save & Next' button is located at the bottom right of the settings area.

The print server supports SNMP configuration. If it is enabled, please set up the following parameters.

SNMP System Contact: You can enter the print server administrator's contact information here. This information will be displayed in the SNMP management tool.

SNMP System Location: You can enter the installed location of the print server here. This information will be displayed in the SNMP management tool.

SNMP System Community:

SNMP System Manager IP:

SNMP Trap: Trap v1, Trap v2

8.4.6 NetWare

The screenshot shows a web-based configuration interface for a Print Server. The main heading is "Print Server". Below it, there are navigation links: "Device Setup", "Setup Wizard", and "System Tools". The current page is titled "SETUP NetWare". The main content area is divided into sections: "General Settings" and "NetWare Bindery Settings". In the "General Settings" section, there is a "Polling Time" field set to "3" seconds, with a note "(min: 3, max: 29 seconds)". In the "NetWare Bindery Settings" section, there are two input fields: "Name of the File Server" with the value "fs" and "Port1 Attached Queue" with the value "PQ1". A "Save & Next" button is located at the bottom of the settings area. On the left side, there is a vertical menu with options: "System", "Wireless Setting", "TCP / IP", "SMB", "SNMP", "NetWare", "AppleTalk", "Bonjour", and "Save Setting".

This print server supports NetWare Bindery Printing method. The print server periodically polls the NetWare server printer queues for printing jobs. You have to assign the NetWare server name, print server polling interval and the name of queue on the NetWare server for each printer port.

Polling Time is the polling interval of the print server for waiting printing jobs on the NetWare server.

Name of the File Server is the name of the NetWare file server that provides printer queues.

Attached Queue is the name of the printer queue on the NetWare server. The printer queue keeps all printing jobs waiting on the NetWare server. You have to assign a printer queue for each printer port of this print server.

8.4.7 AppleTalk

The screenshot shows a web-based configuration interface for a print server. The main heading is "Print Server". Below it, there are navigation links: "Device Setup", "Setup Wizard", and "System Tools". The left sidebar contains a "SETUP" menu with "AppleTalk" selected, and other options like "System", "Wireless Setting", "TCP / IP", "SMB", "SNMP", "NetWare", "Bonjour", and "Save Setting". The main content area is titled "Configure AppleTalk settings for the print server." and includes the instruction "Click Save and Next to continue." Below this, there are two sections: "AppleTalk Settings" and "Printer 1". In the "AppleTalk Settings" section, "AppleTalk Function" is set to "Enabled" and "AppleTalk Zone Name" is set to "*". In the "Printer 1" section, "Printer Type" is set to "LaserWriter". A "Save & Next" button is located at the bottom of the configuration area.

AppleTalk is a data communication protocol often used by Macintoshes. The print server can use these parameters to join the AppleTalk network and share the printer to other AppleTalk workstations. You have to select to enable or disable AppleTalk, and setup the “Zone Name” and “Printer Type” for each printer port of this print server.

AppleTalk Enable: Enable or disable “AppleTalk”.

AppleTalk Zone Name: Print server has to join zones of AppleTalk before it can be shared to other workstations. Only workstations in the same zone can share the printer. If you want to share the printer to all workstations in all Zones, you should enter only “*” in the “Zone Name” field.

Printer Type, the type of printer attached to each printer port. You can get the printer type from the manufacturer of the printer.


8.4.8 Bonjour

The screenshot shows a web-based configuration interface for a Print Server. The main heading is "Print Server". Below it, there are navigation links: "Device Setup", "Setup Wizard", and "System Tools". The left sidebar contains a "SETUP" menu with "Bonjour" selected. The main content area is titled "Bonjour Settings" and contains the following text and controls:

- Configure Bonjour settings for the print server.
- Click Save and Next to continue.
- Bonjour Function:
- Printer 1 Service Name:
-

Bonjour enables automatic discovery of computers, devices and services on IP network. The service name will be seen by users on IP network, you have to designate the unique and friendly name to describe the device.


8.4.9 Save Settings

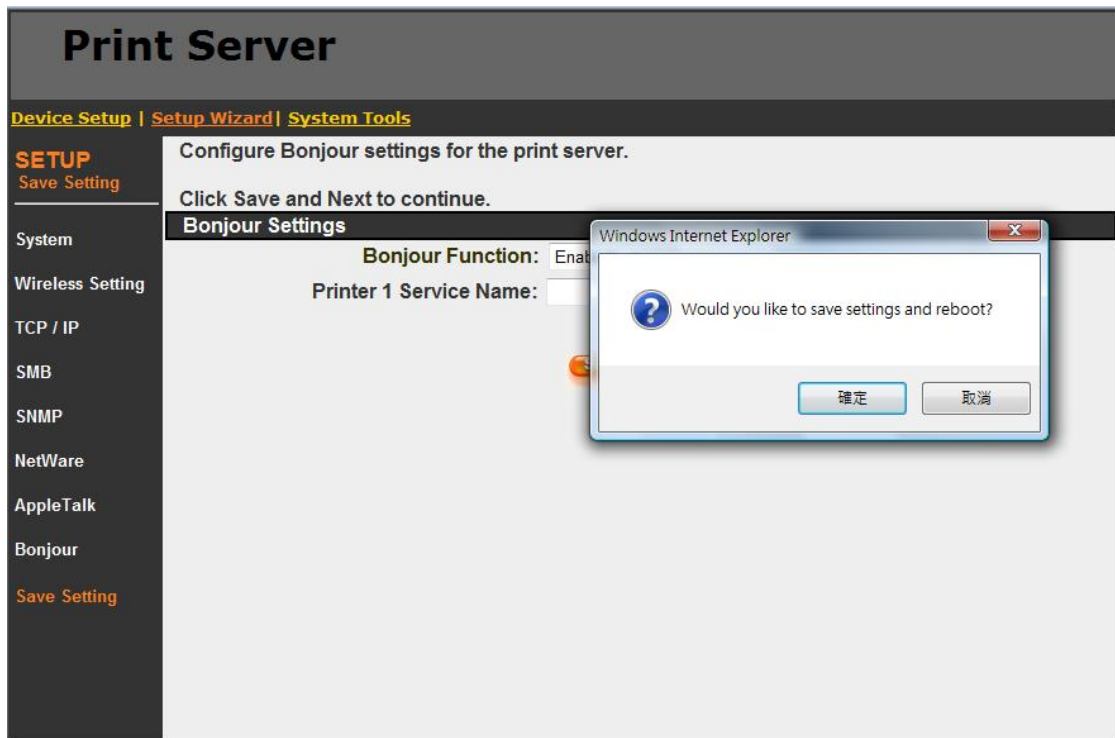

You can click the “Save Settings” to save the settings and restart the system.


8.5 System Tools

8.5.1 Load Default

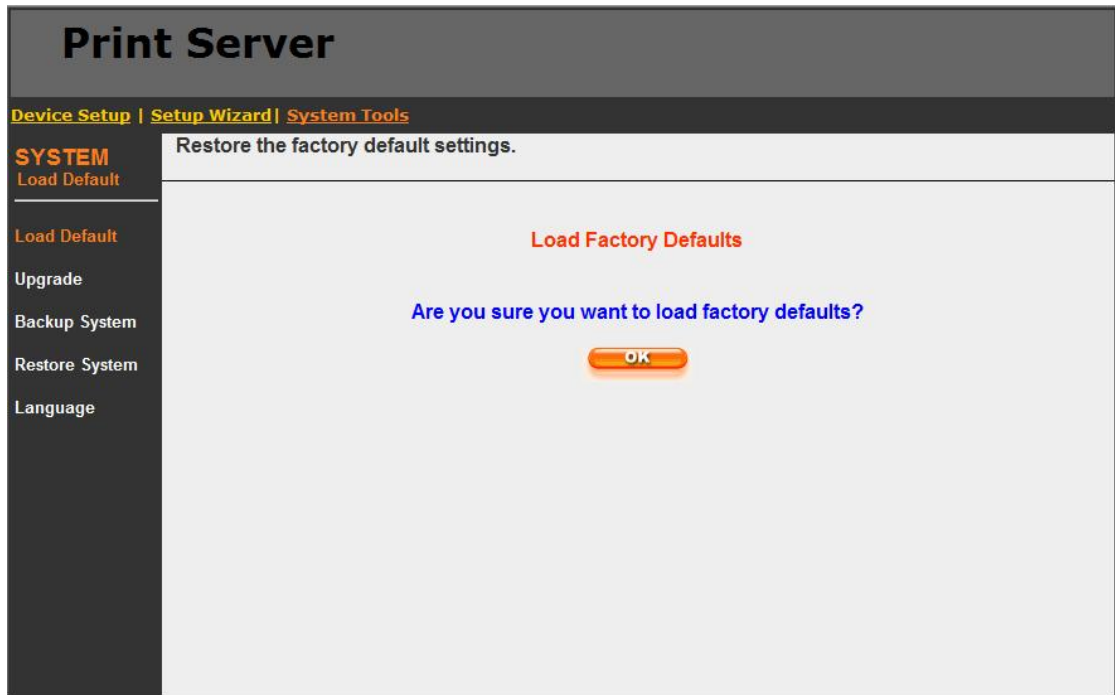

You can use this page to restore the factory default settings. All of your previous setup will be cleared.


8.5.2 Upgrade Firmware from Browser

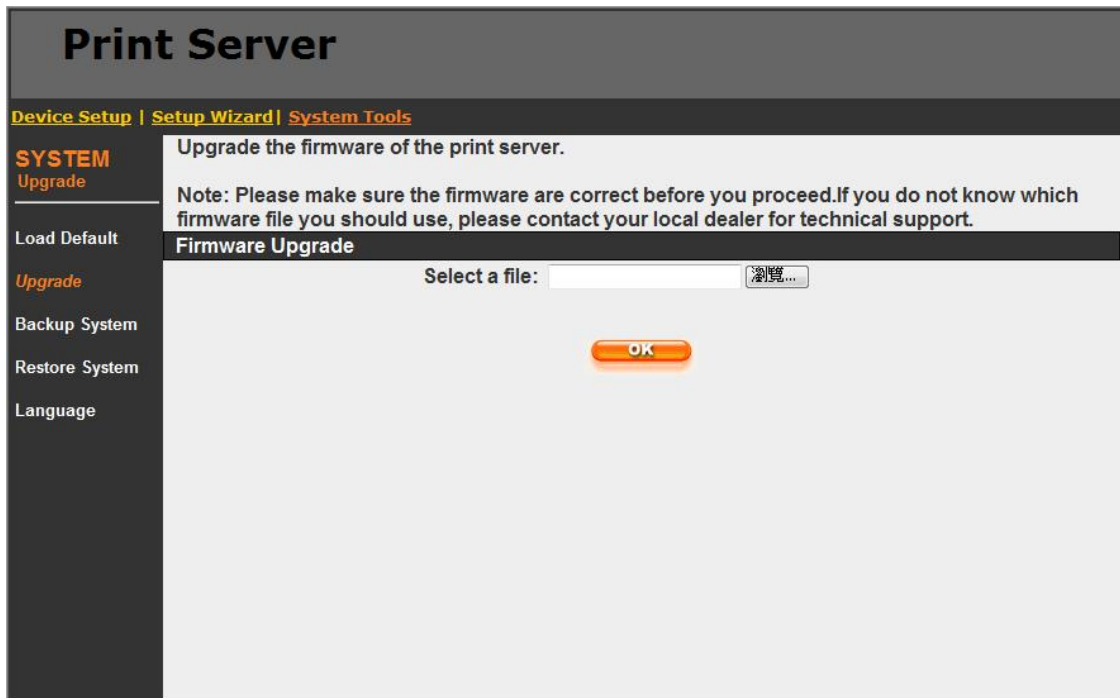

You can upgrade new firmware for this print server in this page. Click “Browse” to select the new firmware in your storage and then click “OK”, the firmware will be updated in several minutes.


Be aware that if you have started upgrading firmware, you have to follow all the upgrading steps or the print server can't turn back to normal configuration.

8.5.3 Backup Setting

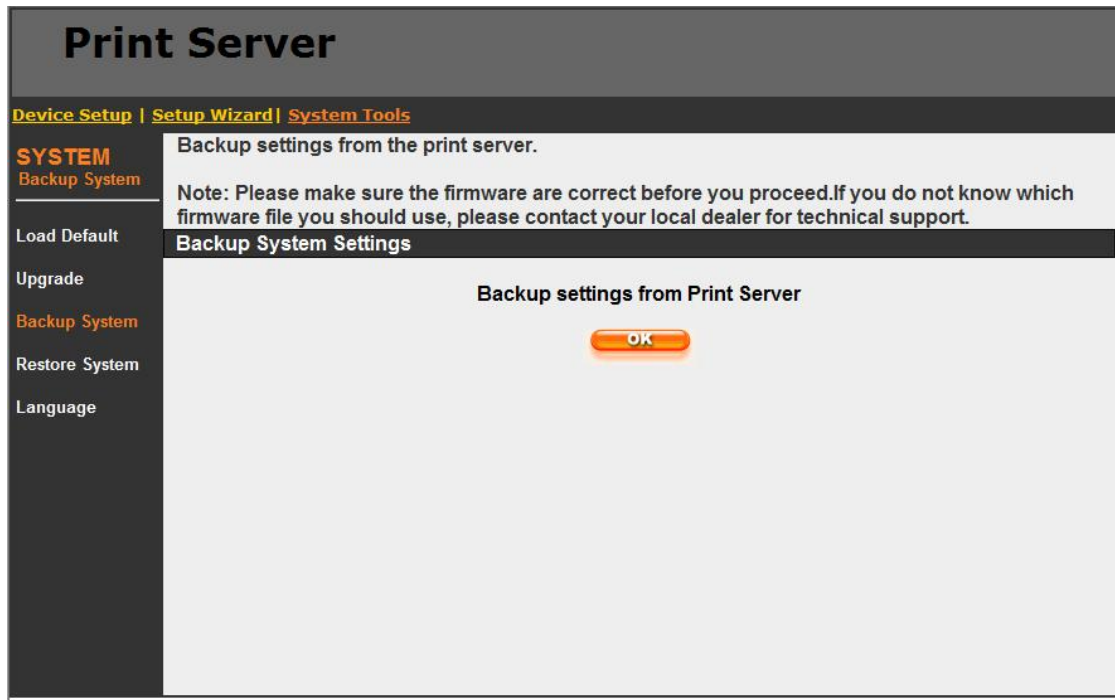


To backup the print server setting to a “config.bin” file, select “Backup settings from Print Server”.

8.5.4 Restore System

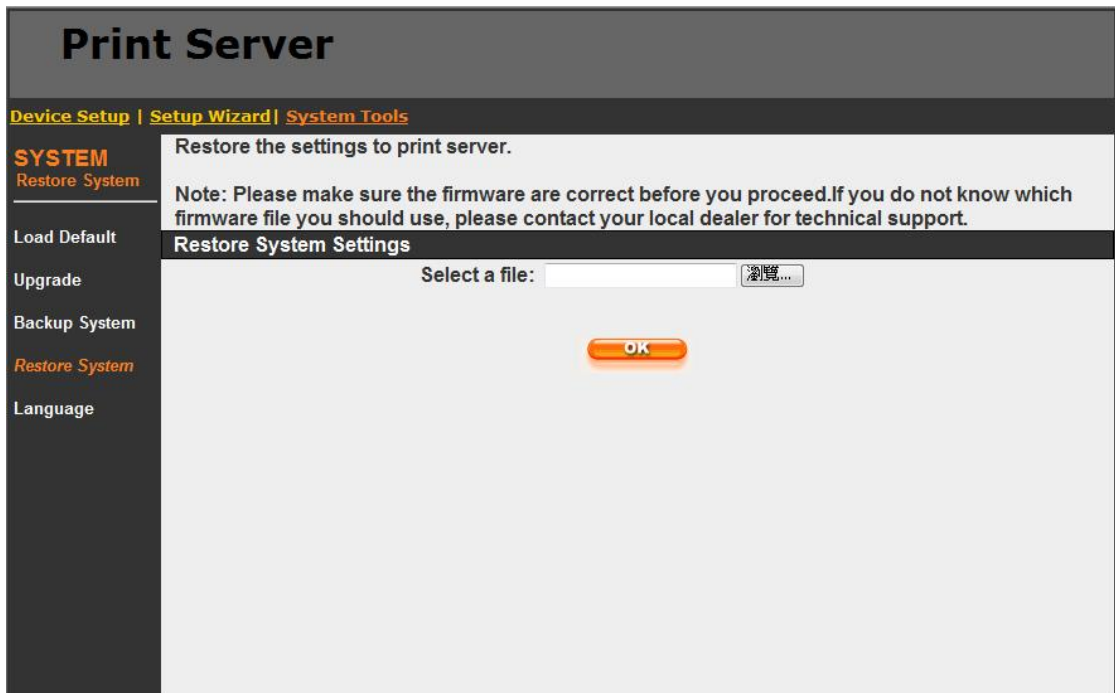

To apply the setting from the backup file, select “Restore settings from file” and specify a file to restore.

8.5.5 Language

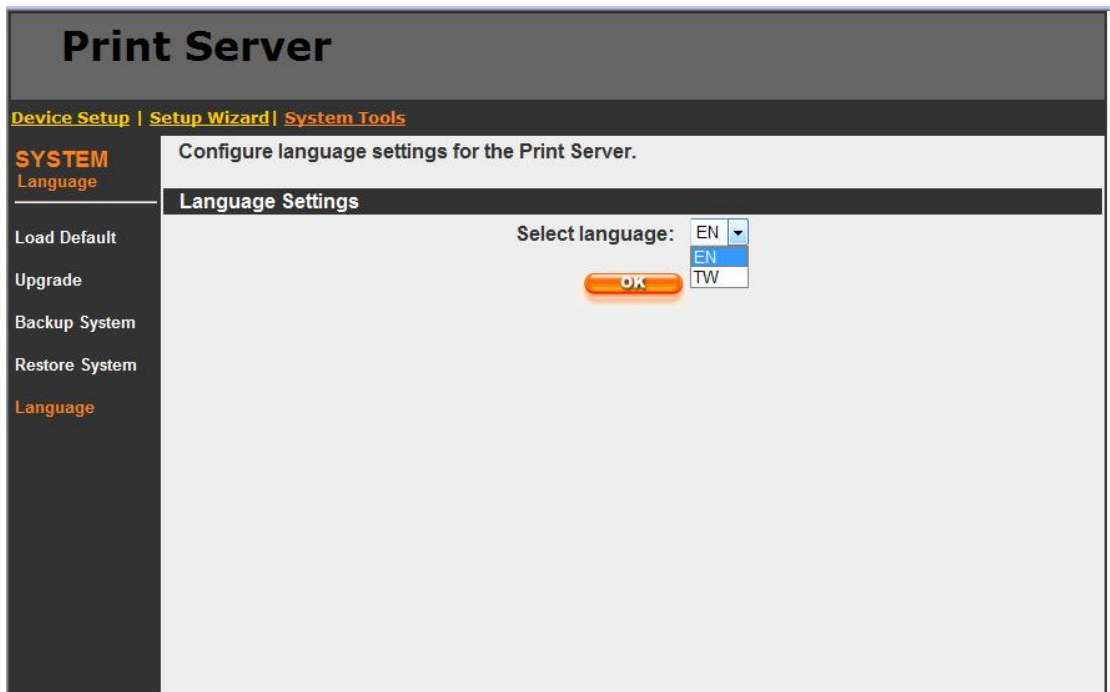

To apply the language you want to use, select “TW” for Chinese and “EN” for English then click ok.

9. Telnet Management

9.1 Introduction


Print server can be configured and managed by Telnet. Through Local Area Network, or even Internet, administrator can easily configure and manage print server's various main functions by a telnet client.

9.2 Login

Execute the Telnet client tool and connect to the print server IP.

```
telnet 192.168.2.2
```

Then you will be prompted to enter the username and password.

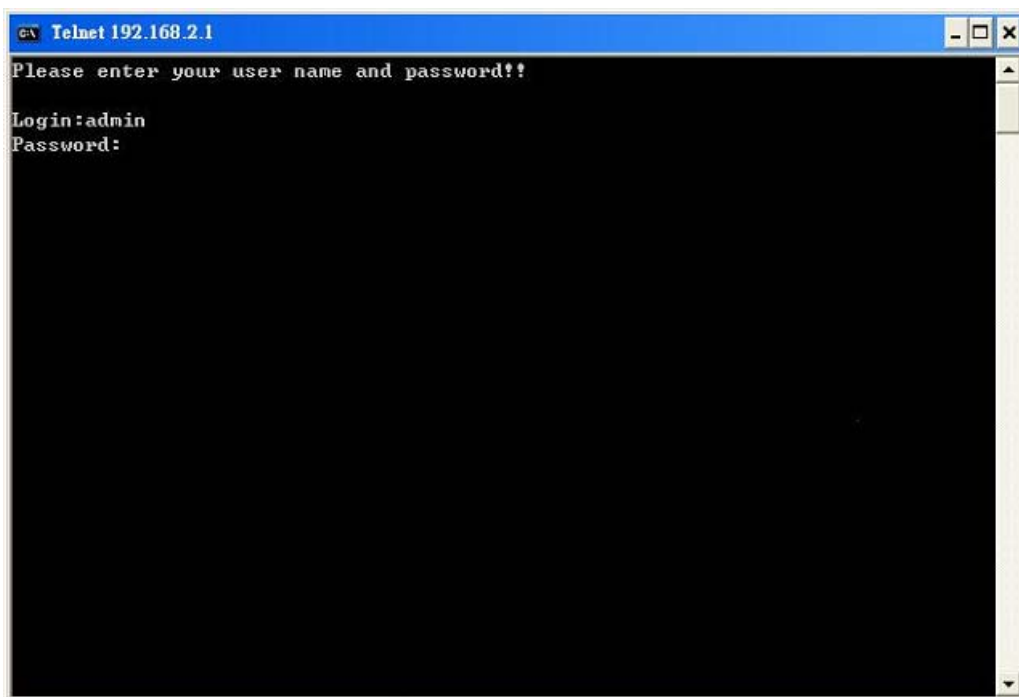

After you successfully enter the correct username and password, the following prompt will be displayed and you can start to manage this print server by command.

```
admin#
```


9.3 Get Setting Values – “get” Command

“get” command is used to get the setting values of this print server. The format of “get” command is as following:

```
get argument
```

Then the argument value will be displayed after the command. For example, if I want to get IP address of the print server, I type “get ip” command and the IP value “IP_ADDR='192.168.2.2'” is displayed:

```
admin# get ip
```

```
IP_ADDR='192.168.2.2'
```

If you enter “get” only, the system will list all available arguments of “get” command.

The following table lists all the arguments whose value can be got by “get” command:

Argument	Description	Example
psname	Print server name	admin# get psname PORT1_PS='PS254896'
password	Login password	admin# get password USER_PASSWORD='1234'
username	Login username	admin# get username USER_NAME='admin'
wlfunc	Wireless LAN function is enabled or disabled 0: disabled 1: enabled 2: auto	admin# get wlfunc WIRELESS_FUNCTION=2
wlmode	Wireless LAN mode is Infrastructure 0: Infrastructure	admin# get wlmode AP_MODE=1
ESSID	ESSID of the wireless LAN	admin# get ESSID SSID='default'

Argument	Description	Example
channel	Channel number used by wireless LAN	admin# get channel CHANNEL=11
wep	The mode of WEP 0: disable 1: 64 bit WEP enabled 2: 128 bit WEP enabled	admin# get wep WEP=0
defkey	Default WEP key number 0: key 1 1: key 2 2: key 3 3: key 4	admin# get defkey WEP_DEFAULT_KEY=0
key641	64 bit WEP key 1	admin# get key641 WEP64_KEY1=0123456789
key642	64 bit WEP key 2	admin# get key641 WEP64_KEY2=0123456789
key643	64 bit WEP key 3	admin# get key641 WEP64_KEY3=0123456789
key644	64 bit WEP key 4	admin# get key641 WEP64_KEY4=0123456789
key1281	128 bit WEP key 1	admin# get key1281 WEP128_KEY1=0123456789 abcdef0123456789a
key1282	128 bit WEP key 2	admin# get key1282 WEP128_KEY2=0123456789 abcdef0123456789a
key1283	128 bit WEP key 3	admin# get key1283 WEP128_KEY3=0123456789 abcdef0123456789a
key1284	128 bit WEP key 4	admin# get key1284 WEP128_KEY4=0123456789 abcdef0123456789a
ip	IP of the print server	admin# get ip AP_ADDR='192.168.2.2'
gateway	Default gateway of the print server	admin# get gateway DEFAULT_GATEWAY='192.168.2.254'
submask	Subnet mask of the print server	admin# get submask SUBNET_MASK='255.255.255.0'
polling	Polling interval (in second) of the print server for waiting printing jobs on the NetWare server	admin# get polling PORT1_POLLTIME=3
aq1	Name of the printer queue on the NetWare server	admin# get aq1 PORT1_QNAME='PQ1'
applezone	The name of AppleTalk zone that this print server joins to	admin# get applezone PORT1_APPLEAONE='*'
printertype1	The type of the printer attached to this print server	admin# get printertype1 PORT1_PRINTTYPE='LaserWriter'

Argument	Description	Example
SMBDG	The name of the SMB group name that this print server joins to	admin# get SMBDG SMBD_NAME='default'
SNMPC	The administrator contact information of this print server for SNMP	admin# get SNMPC SNMP_CONTACT='sbdjohn@hotmail.com'
SNMPL	The installed location of this print server for SNMP	admin# get SNMPL SNMP_LOCATION='Room 301'
port1	The port name of this print server	admin# get port1 PORT1_LPTNAME='p1'
DHCPS	The DHCP server is enabled or disabled 0: disable 1: enable	admin# get DHCPS DHCPD=0
DHCP	Get dynamic IP by DHCP is enabled or disabled 0: disable 1: enable	admin# get DHCP DYNAMIC_IP=0
appletalk	AppleTalk printing is enabled or disabled 0: disable 1: enable	admin# get appletalk APPLE_ENABLE=0
SMBD	SMB printing is enabled or disabled 0: disable 1: enable	admin# get SMBD SMBD_ENABLE=1
SNMP	SNMP management protocol is enabled or disabled 0: disable 1: enable	admin# get SNMP SNMP_ENABLE=1
IPX	NetWare Bindery printing is enabled or disabled 0: disable 1: enable	admin# get IPX IPX_ENABLE=1
LPD	LPR printing is enabled or disabled 0: disable 1: enable	admin# get LPD LPD_ENABLE=1
IPP	IPP printing is enabled or disabled 0: disable 1: enable	admin# get IPP IPP_ENABLE=1
RAW	RAW printing is enabled or disabled 0: disable 1: enable	admin# get RAW RAW_ENABLE=1

9.4 Modify Setting Values – “set” Command

“set” command is used to modify the setting values of this print server. The format of “set” command is as following:

```
set argument_name value
```

Then the value will be written into the system configuration. For example, if you want to set IP address of the print server to 192.168.2.2, type “set ip 192.168.2.2” command and the IP of the print server will be changed. After the setting is finished, please reboot the print server.

```
admin# set ip 192.168.2.2
```

```
admin# reboot
```

If you enter only “set”, the system will list all arguments of “set” command and the command format.

The following table lists all the arguments whose value can be modified by “set” command:

Argument	Description	Example
psname	Print server name	set psname PS001
password	Login password	set password 1234
username	Login username	set username admin
wlfunc	Enable or disable the wireless LAN function. The value should be “disabled”, “enabled” or “auto”	set wlfunc auto
wlmode	Wireless LAN mode is Infrastructure. The value should be “inf”	set wlmode infrastructure
ESSID	ESSID of the wireless LAN	set ESSID default

Argument	Description	Example
channel	Channel number used by wireless LAN.	set channel 11
wep	The mode of WEP. The value should be "disable", "wep64" or "wep128"	set wep disable
defkey	Default WEP key number. The value should be 0~3. 0: key 1 1: key 2 2: key 3 3: key 4	set defkey 0
key641	64 bit WEP key 1. The value should be 10 digit Hex value	set key641 0123456789
key642	64 bit WEP key 2. The value should be 10 digit Hex value	set key641 0123456789
key643	64 bit WEP key 3. The value should be 10 digit Hex value	set key641 0123456789
key644	64 bit WEP key 4. The value should be 10 digit Hex value	set key641 0123456789
key1281	128 bit WEP key 1. The value should be 26 digit Hex value	set key1281 0123456789ab cdef0123456789a
key1282	128 bit WEP key 2. The value should be 26 digit Hex value	set key1282 0123456789ab cdef0123456789a
key1283	128 bit WEP key 3. The value should be 26 digit Hex value	set key1283 0123456789ab cdef0123456789a
key1284	128 bit WEP key 4. The value should be 26 digit Hex value	set key1284 0123456789ab cdef0123456789a
ip	IP of the print server	set ip 192.168.2.2
gateway	Default gateway of the print server	set gateway 192.168.2. 254
submask	Subnet mask of the print server	set submask 255.255. 255.0
polling	Polling interval (in second) of the print server for waiting printing jobs on the NetWare server	set polling 3
aq1	Name of the printer queue on the NetWare server	set aq1 PQ1
applezone	The name of AppleTalk zone that this print server joins to	set applezone *

Argument	Description	Example
printertype1	The type of the printer attached to this print server	set printertype1 LaserWriter
SMBDG	The name of the SMB group name that this print server joins to	set SMBDG default
SNMPC	The administrator contact information of this print server for SNMP	set SNMPC sbdjohn@hotmail.com
SNMPL	The installed location of this print server for SNMP	set SNMPL Room 301
port1	The port name of this print server	set port1 p1
DHCPS	Enable or disable the DHCP server. The value should be "disabled" or "enabled".	set DHCPS disable
DHCP	Enable or disable to get dynamic IP by DHCP. The value should be "disabled" or "enabled".	set DHCP disable
appletalk	Enable or disable AppleTalk printing The value should be "disabled" or "enabled".	set appletalk disable
SMBD	Enable or disable SMB printing The value should be "disabled" or "enabled".	set SMBD enable
SNMP	Enable or disable SNMP management protocol The value should be "disabled" or "enabled".	set SNMP enable
IPX	Enable or disable NetWare Bindery printing The value should be "disabled" or "enabled".	set IPX enable
LPD	Enable or disable LPR printing The value should be "disabled" or "enabled".	set LPD enable
IPP	Enable or disable IPP printing The value should be "disabled" or "enabled".	set IPP enable
RAW	Enable or disable RAW printing The value should be "disabled" or "enabled".	set RAW enable

9.5 Other Commands

9.5.1 ipconfig

“ipconfig” command is used to quickly get the IP settings (IP, subnet mask, default gateway) of the print server:

```
admin# ipconfig
```

```
IP_ADDR=192.168.2.2
```

```
SUBNET_MASK=255.255.255.0
```

```
DEFAULT_GATEWAY=192.168.2.254
```

9.5.2 reboot

“reboot” command is used to restart the print server:

```
admin# reboot
```

9.5.3 exit

“exit” command is used to leave the print server telnet management:

```
admin# exit
```

9.5.4 help

“help” command is used to list all telnet management commands of the print server:

```
admin# help
```

set argument value

get argument

ipconfig

reboot

exit

10. IPP Printing

10.1 Introduction

IPP (Internet Printing Protocol) Printing provides a convenient way of remote printing service by TCP/IP. The print server can support IPP printing by default. It is needless to do any setting. Any PC that can support IPP printing, for example Windows 2000/XP, can directly uses the print server by IP. By using the IPP printing, you can share the printer to all the PC's that can access the print server by IP. You can even share your printer to Internet users.

10.2 System Setup

10.2.1 Print Server Side

It is needless to do any setting on the print server side. Make sure the print server has correct IP settings. If you want to share the printers to Internet users, you have to set a real IP to the print server. You also have to make sure that any gateway; router or firewall does not block IPP protocol if you have these gateway devices installed in your network.


10.2.2 Client Side

You only need to perform Window's standard *Add New Printer* procedure.


Step1. Click "Start", choose "Settings" and select "Printers and Faxes".

Step2. Click "Add a Printer".


Step3. The “Add Printer Wizard” is displayed. Click “Next”.

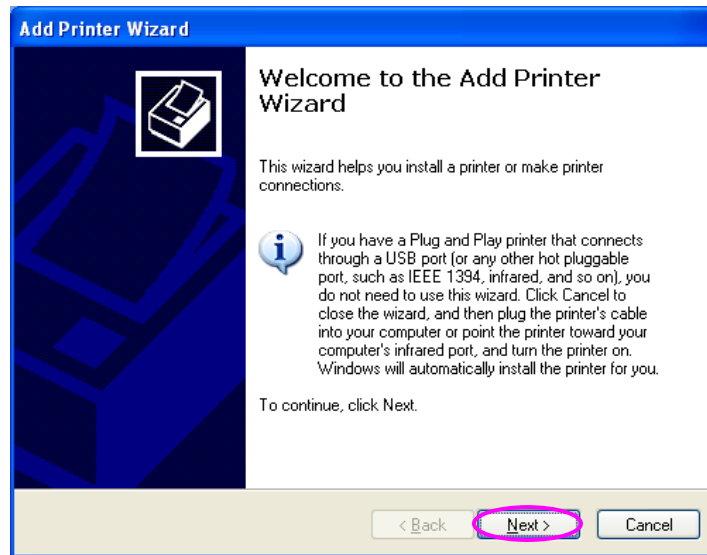

Step4. Select “A network printer, or a printer attached to another computer”. Click “Next”.

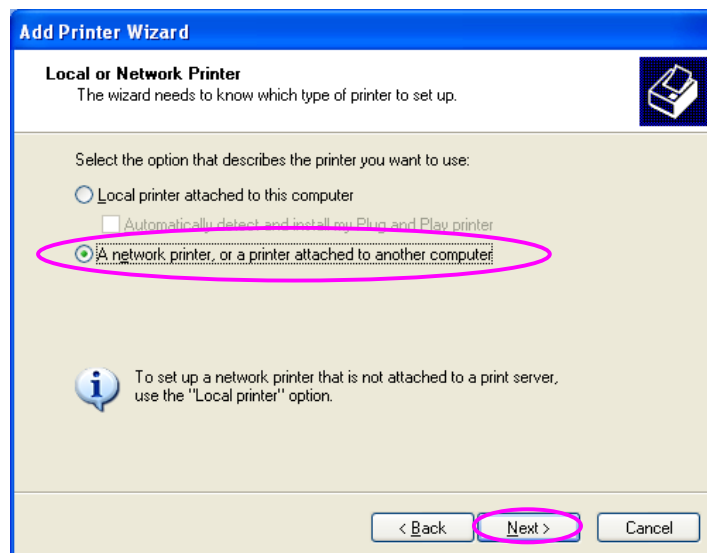


Step5. Select “Connect to a printer on the Internet or on a home or office network” and enter the URL of print server. The URL format is “http://IP:631/Port Name”. The IP should be the print server’s IP. The number 631 is IPP standard port number. Port Name is the port name of print server that your printer is connected to. The default port name is “p1”. One example of the URL is http://192.168.3.66:631/p1. After entering the URL of print server, click “Next”.

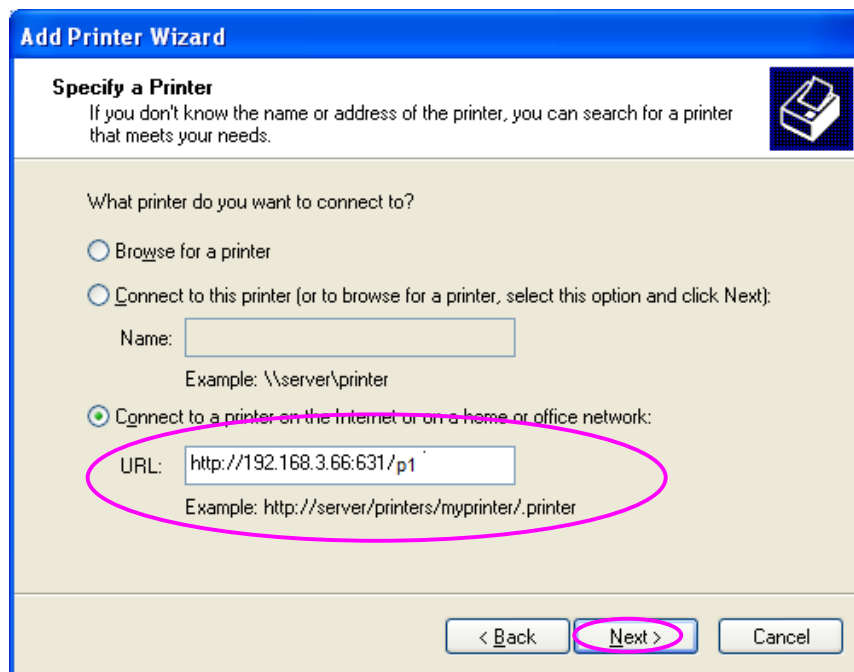


Step6. Select a suitable printer manufacturer and the printer model and click “Next”. If your printer is not in the


list, click “Have Disk...” to install the driver of the printer. After installation, the printer model will be added to the list.

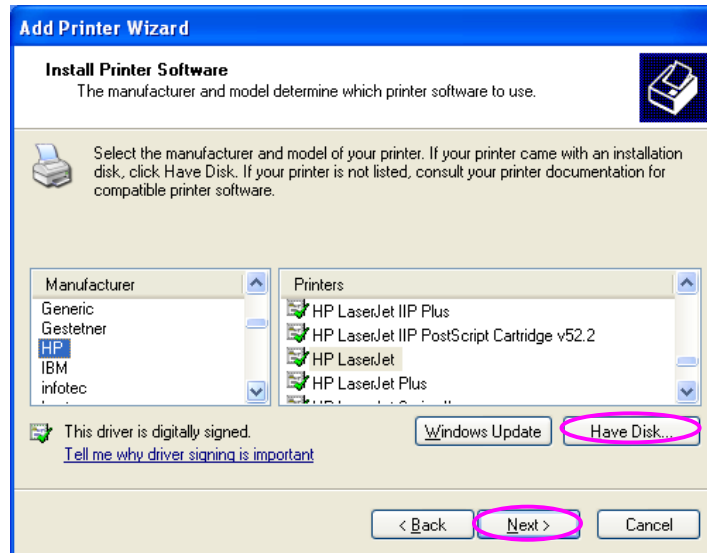

Step7. Choose to set the print whether as a default printer or not. Click “Next”.

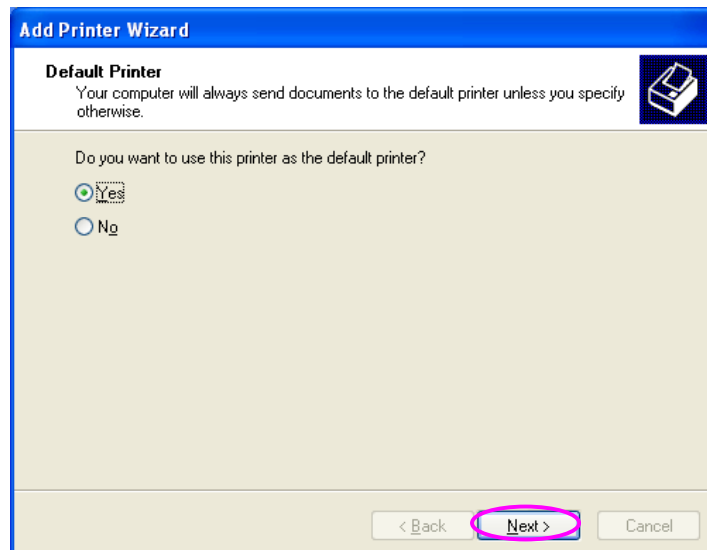

Step8. You have added the network printer to the PC successfully. The information of the printer is displayed in the windows. Click “Finish”.

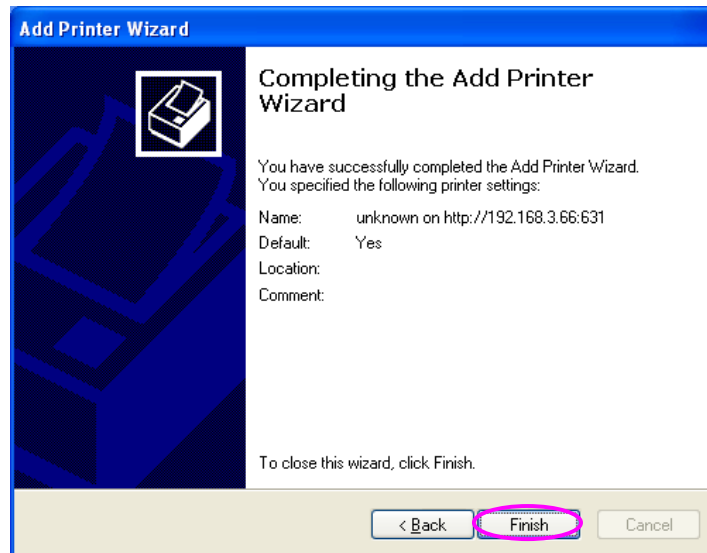


11. Windows XP SP2 Setup

In Windows XP SP2, XP SP2's firewall would block the unknown communications. This print server has allowed the communications data passed through the XP SP2's firewall.


In case that you do not find any print server listed on the "Available Ports" in "Network Ports Quick Setup", please follow the steps below.

Step1. Click "Start", choose "Settings" and select "Network Connections".


Step2. Right click "Local Area Connection" and select "Properties".

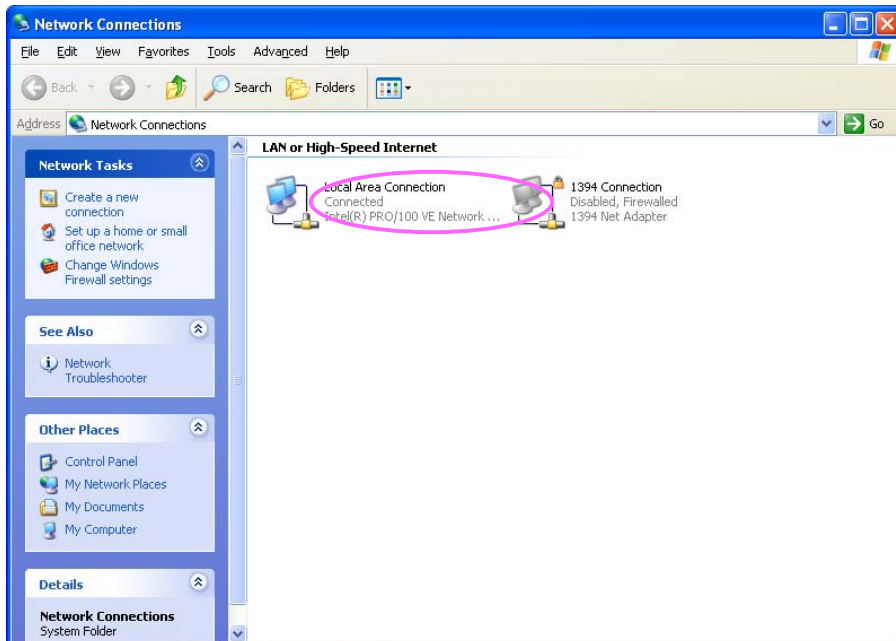


Step3. Select “Advanced” tab and click “Settings...”.

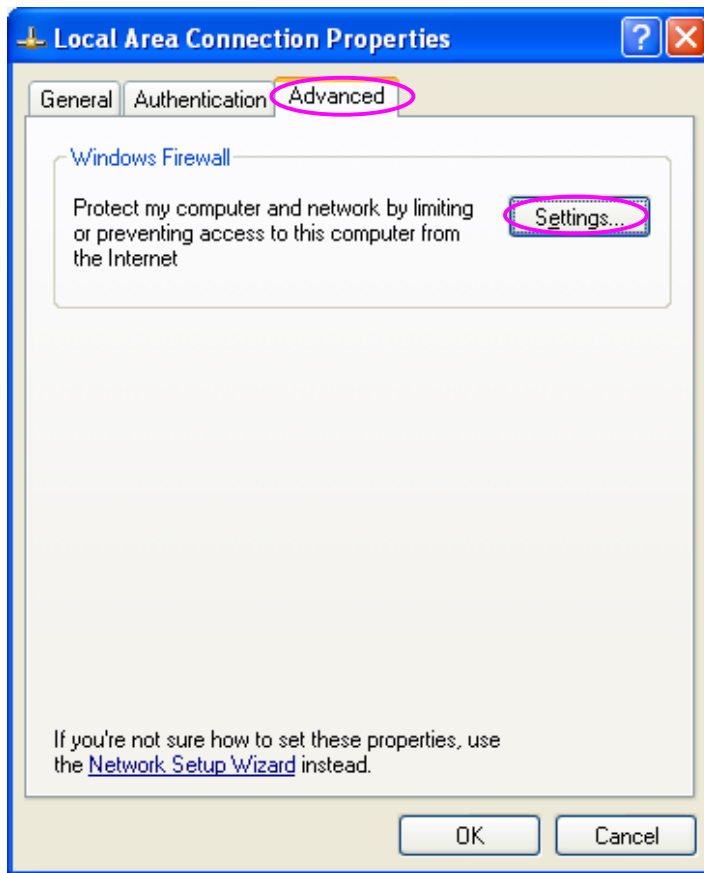


Step4. Select “Exceptions” tab and click “Add Program...”.

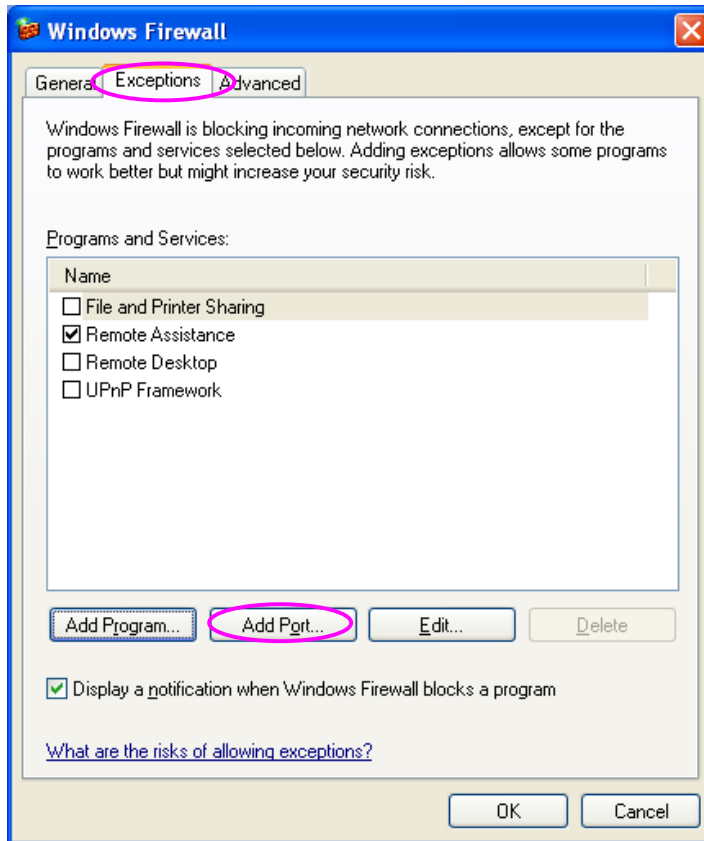


Step5. Click “Browse” to add a new program.

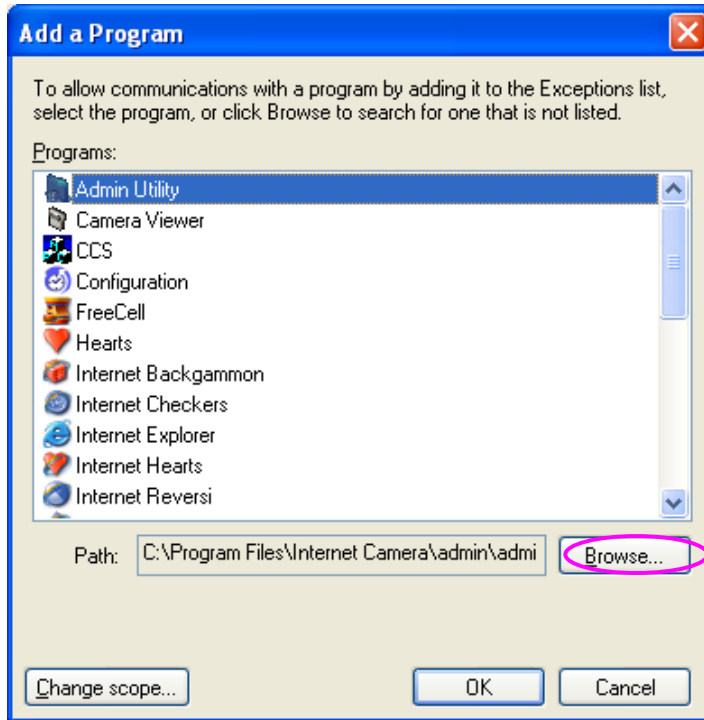

Step6. Open the “NPUtil” file from “C:\Program Files\PrintServer Utilities” (where C:\ is the system drive).

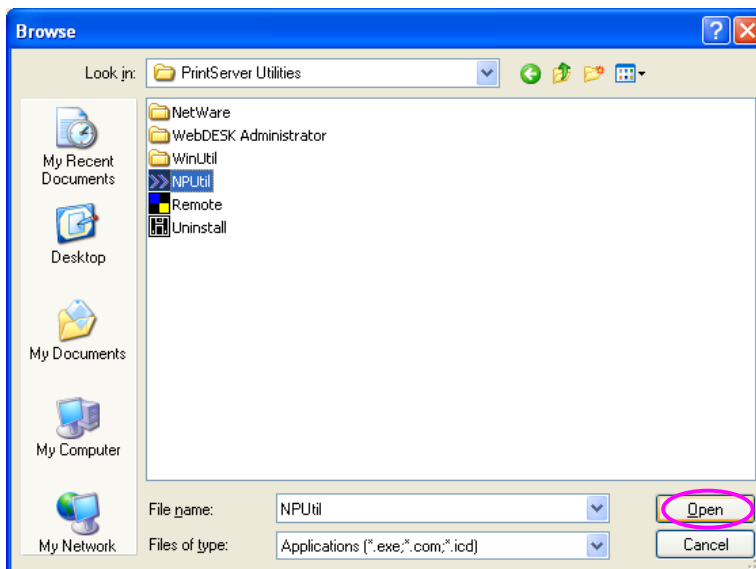

Step7. A new program “Network Ports Quick Setup” is displayed in the list, click “Ok”.

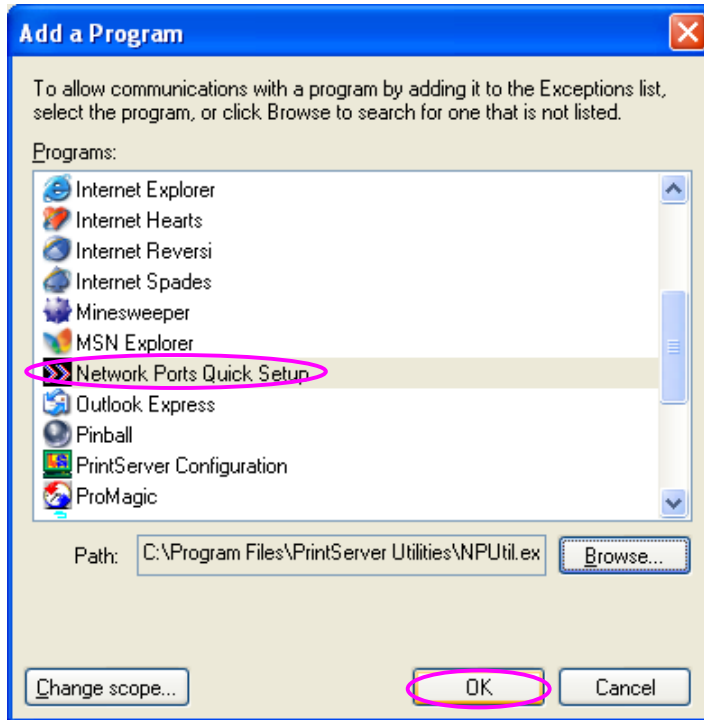

Step8. Click “Ok”. You have completed the setting. The Windows XP SP2 will allow the incoming network connections activated by the program.

