



VGA over IP EXTENDER



Manual
DS-53200 • DS-53201

1. Introduction

Thanks for purchasing the **DS-53200 VGA over IP Extender**. We recommend that you read this manual thoroughly and retain for future reference.

1.1 Features

The VGA over IP Extender allows you to extend video and audio up to 100 meters distance between source or computer and monitor or projector. With the built-in video and audio signals enhancement, you can gain the best video resolution quality and audio stereo sound while listening, and no any additional software needed. Furthermore, the installation and operation are easily more than expected. With using extension facilities of video and audio, this product the VGA over IP Extender, delivers worthy of performing efficiency and value-added.

- **Cascadable Receiver**, each Receiver Unit with cascade function enables to link the other two Receiver Units consecutively extending another 100m distance, and continue expanding corresponding to custom demand as likely Cascade/Tree Chain web architecture spread
- Easy to install with inexpensive CAT.5e/6 cables
- Each pair (TX & RX) extends the signals up to 100m (330 feet)
- Supports video high resolution up to 1920x1080@60Hz, Full HD 1080p
- HDTV compatible (720p, 1080i, 1080p)
- Supports Stereo 2.0
- Cascaded-chainable receiver up to 10 layers
- Supports RS-232 (Serial)
- IR (Infrared remote) enabled
- Support Local VGA monitoring port
- Each receiver (remote) distributed linking cascade-chainable 2 receivers
- Wall Mountable

1.2 Package Contents

DS-53200

- VGA Extender Transmitter (TX) x 1
- VGA Extender Receiver (RX) x 1
- Audio cable x 2
- RS232 adapter cable x 2 pcs (set units)
- IR (Emitter + Receiver) cables x 1 set
- Power Adaptor DC 5V x 2 pcs (set units)
- User's Manual x 1

DS-53201

- VGA Extender Receiver (RX) x 1
- Audio cable x 1
- RS232 adapter cable x 1
- IR (Receiver) cables x 1
- Power Adaptor DC 5V x 1
- User’s Manual x 1

2. Specifications:

2.1 General

			Transmitter	Receiver
Console Connectors	VGA Output		VGA (Female)	VGA (Female)
	RS-232 Control Port		Phone Jack	Phone Jack
PC Connectors	VGA Input		VGA (Male)	N/A
Extension Port	RJ-45		Full HD Video / Audio Extension	
RJ-45			1 (Line Out)	3 (1 Line In & 2 Line Out)
Cascaded-Chainable			N/A	Up to 10 layers
Audio			Supports Stereo 2.0	
IR			Unidirectional (Receiver RX to Transmitter TX)	
LED Indicators	Local	Power	Red LED	
		Link	Red Green	
	Remote	Power	Red LED	
		Link	Red Green	
DDC Supported			DDC/ DDC2 /DDC2B	
Extension Cable Type & Length			CAT.5e / CAT.6 Max. Length: 100m	
Max. Video Resolution			HDMI: 1920 x 1080@60Hz, Full HD 1080p	
Wide Screen Supported			yes	
Power Supply			External DC 5V / 2A Power Adapter	
Dimension (L x W x H)			115 x 91 x 28 mm	
Weight			340g	380g

Housing material	Metal
Power Consumption	Transmitter (TX) : 5W ; Receiver (RX): 4.5W
Operating Temperature	32 – 122°F (0 – 50°C)
Working Temperature	-20 °C ~ 60 °C
Humidity	0% - 80% RH

3. Connectors Diagram

3.1 Configuration Pictures



Transmitter (TX) – Front View



①: Power adapter DC 5V


②: Power LED (Solid Red when power present)

③: Link LED (Solid Green when link present)

④: IR Emitter control port

⑤: RS232 control port

Transmitter (TX) – Rear View

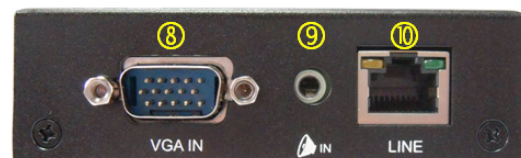

⑥: Audio-out port

⑦: Local VGA monitoring

⑧: VGA source

⑨: Audio-in port

⑩: RJ45 CAT.5e/6 UTP port

Receiver (RX) – Front View



①: Power adaptor DC5V


②: Power LED (Solid Red when power present)

③: LINK LED (Solid Green when link present)

④: IR receiver control port

⑤: RS232 control port

Receiver (RX) – Rear View

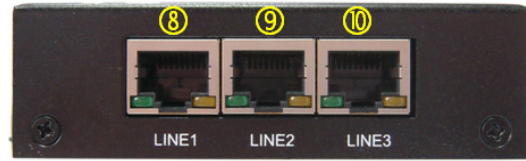

⑥: Audio-out port


⑦: VGA output (remote display)

⑧: RJ45 LINK

⑨: RJ45 LINK

⑩: RJ45 LINK

Application Diagram

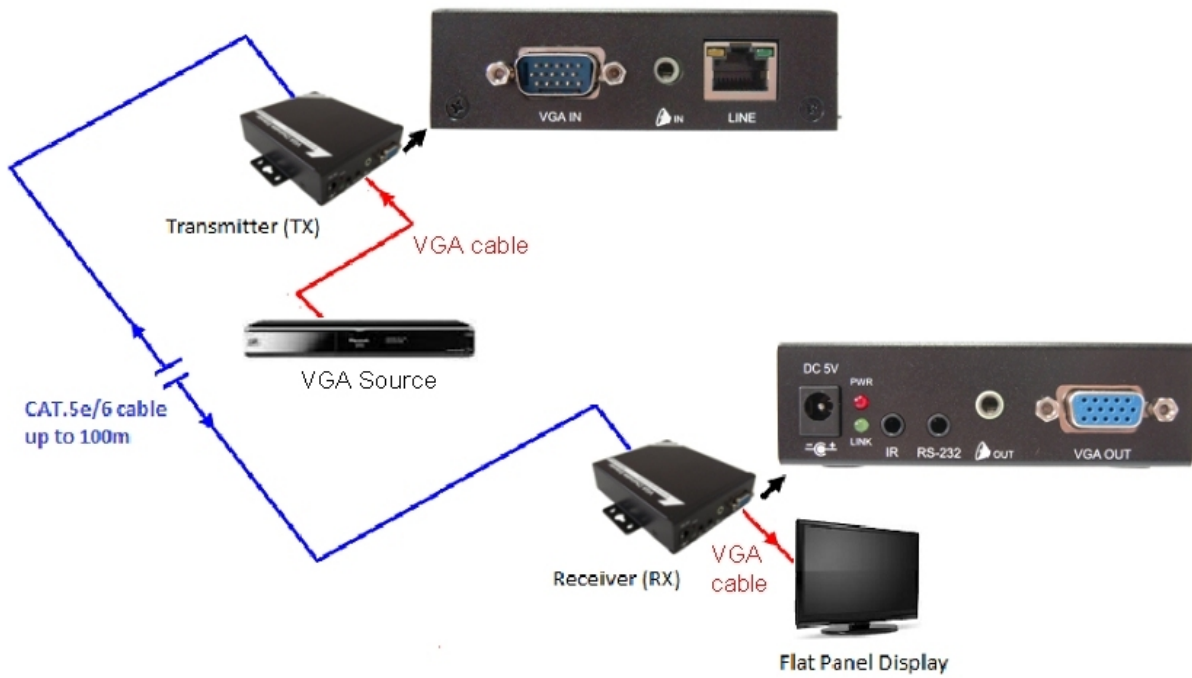

Transmitter (TX) Installation

- Please use CAT.5e/6 cable to get the best quality to connect to the **LINE port (RJ45) of Transmitter**
- Connect the IR Blaster Emitter cable or RS-232 to 3.5mm adapter to the Transmitter Unit IR Port or RS-232 port if necessary
- Connect Transmitter with VGA cable to a VGA source
- Connect Transmitter with VGA cable to a VGA monitor
- Connect DC 5V power adapter

Connect to local VGA monitor

Connect to local speaker




Power Adapter 5V

RS232 to 3.5mm

IR Transmitter/Emitter

Connect to UTP cable

Connect to VGA source

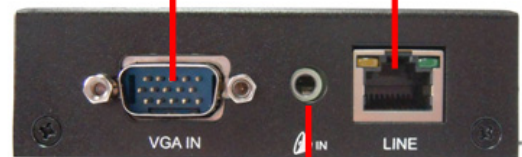


Connect to audio source

Receiver (RX) Installation


4

- Please use CAT.5e/6 cable to get the best quality to connect to the **LINE1 or LINE2 or LINE3 port (RJ45) of Receiver**
- Connect the IR Receiver cable or RS-232 to 3.5mm adapter to the Receiver Unit IR Port or RS-232 port if necessary
- Connect Receiver with VGA cable to a VGA monitor
- Connect DC 5V/2A power adapter.

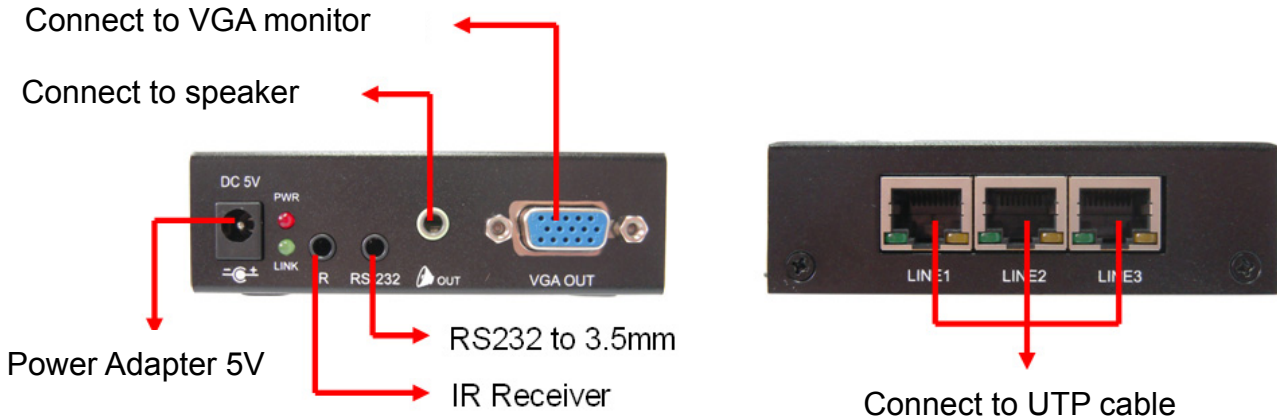

Cascade Chain Connection


- Use UTP Cable to connect with Receiver to link the other two Receiver Units consecutively for extending another 100m distance, the cable is to connect to Receiver **LINE1 or LINE2 or LINE3 port (RJ45)**, as long as the **LINE port is not occupied**, and user can continue expanding corresponding to custom demand as likely Cascade/Tree Chain web architecture spread
- Connect the IR Receiver cable or RS-232 to 3.5mm adapter to the Receiver Unit IR Port or RS-232 port if necessary
- Connect Receiver with HDMI cable to HDMI connector of Display Monitor
- Connect DC 5V power adapter

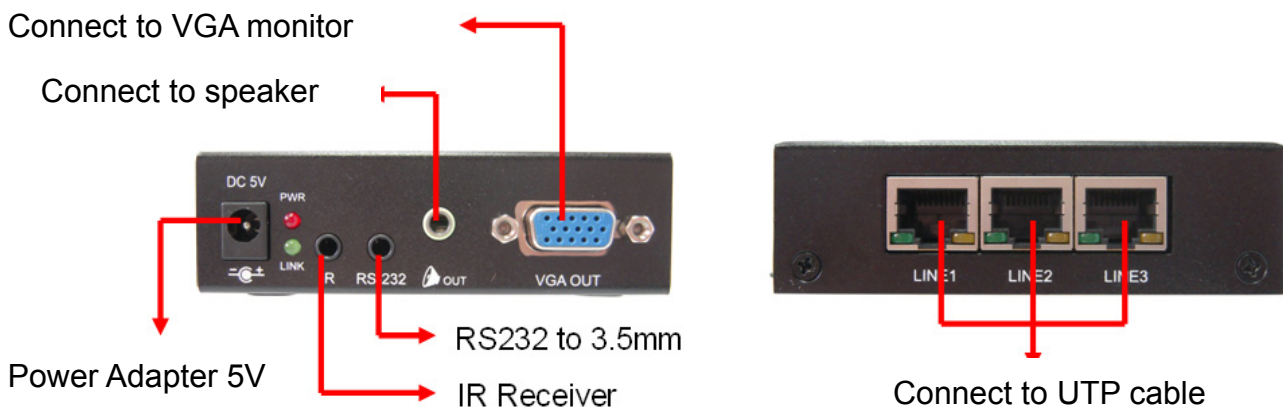

Each Receiver with three Line port, one is used for source input; others are used for expanding source to other receivers. User can choose any LINE port as source input random and use the other two LINE port for expanding source to next tier receiver as long as the LINE port is not occupied.

Network Switch Extending

- The maximum distance between each tier could be up to 100 meters long, while this could be extended through Network Switch. User can add one Network Switch to extend another 100 meter

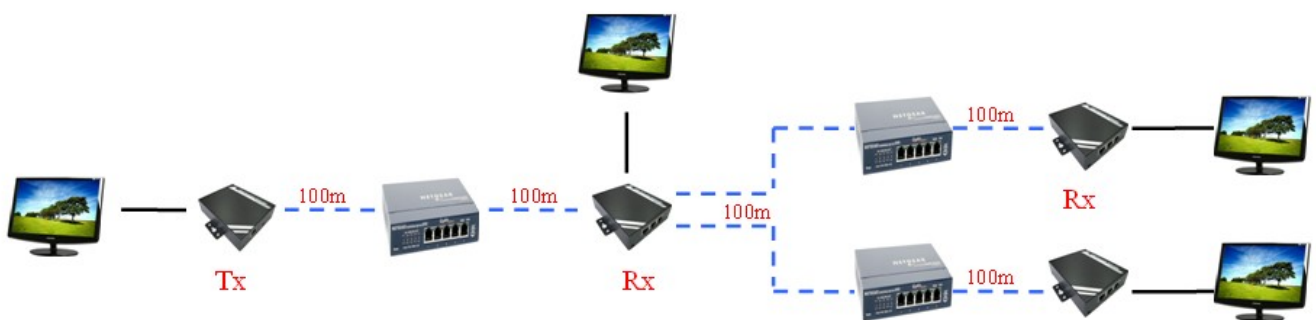

- The more Network Switches, the longer distance extended. The number of Network Switches can be as many as user want




3.2 Connection Diagram


(1) Single Source Extension




(2) Single Source Extension and Receivers Cascade Chaining

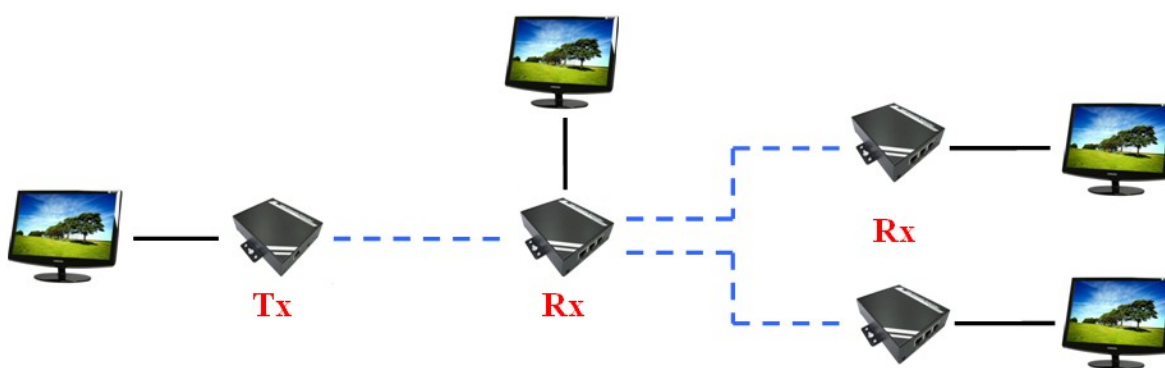

(3) Single Source with Multiple Receivers Cascaded

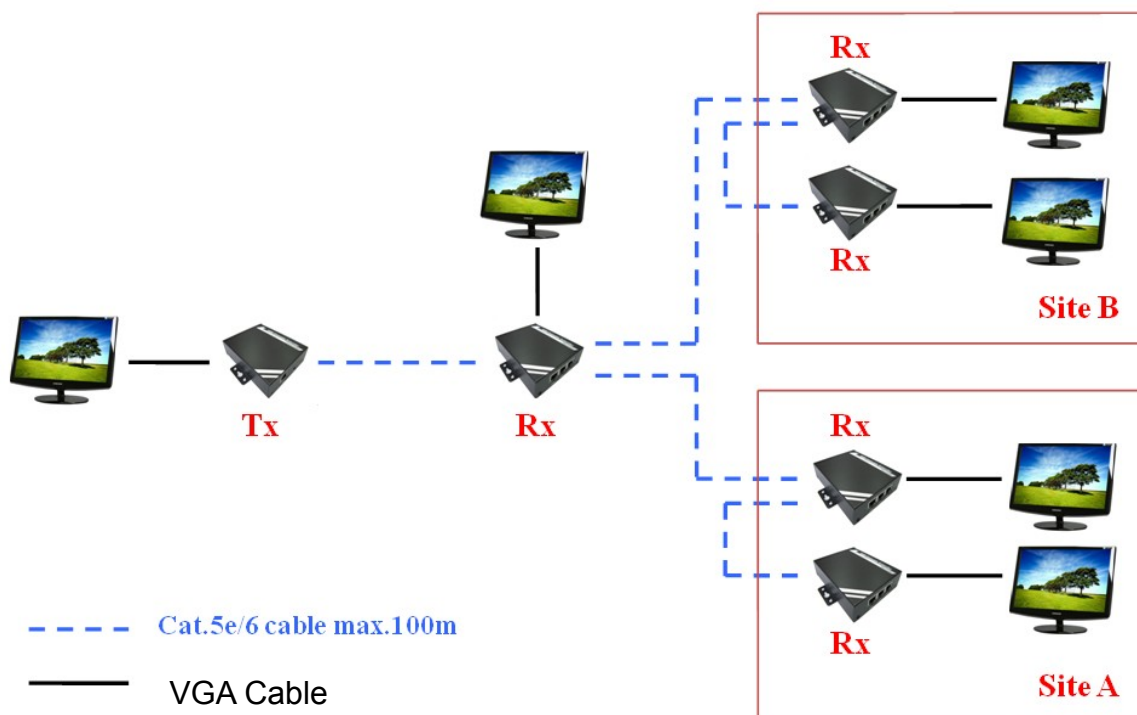


Cascaded and mixed with VGA / HDMI / DisplayPort

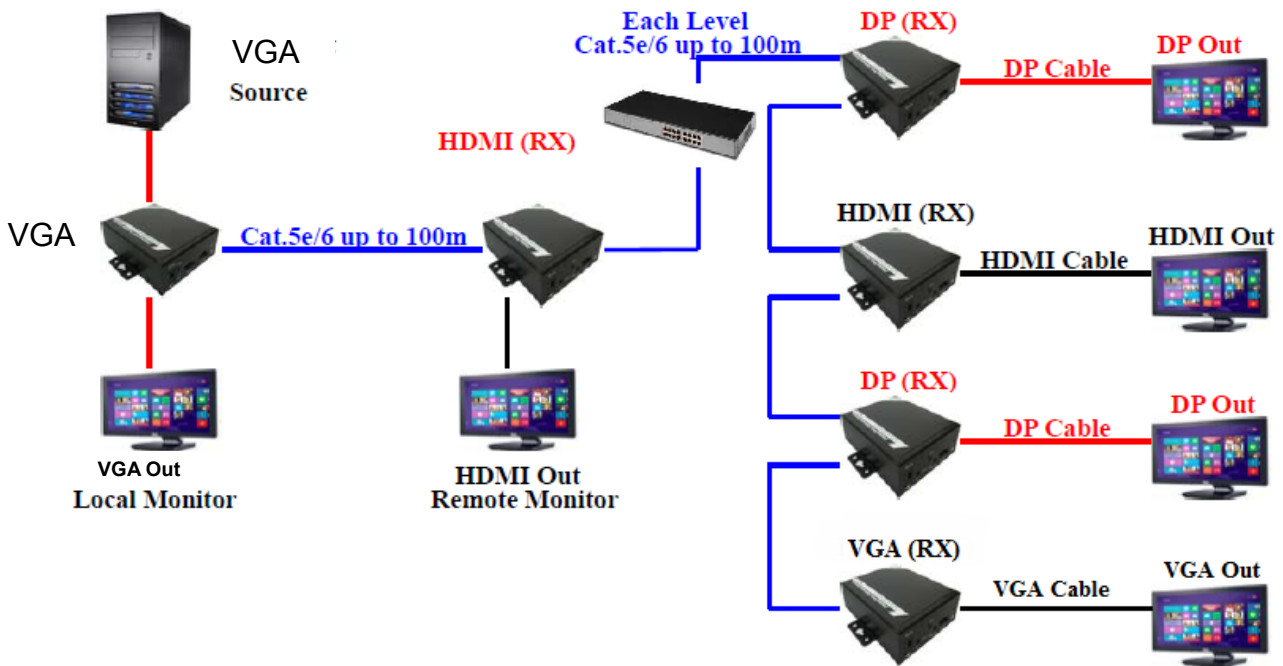

IR Bypass function connection

- Connect the IR Transmitter (or Emitter) cable to the IR Connector on the Transmitter (TX)
- Connect the IR Receiver cable to the IR Connector on the Receiver (RX)
- Place the IR Eye of the IR Receiver cable near the Remote Controller
- Place the IR Blaster of the IR Transmitter cable near the device that intend to be controlled by the Remoter controller

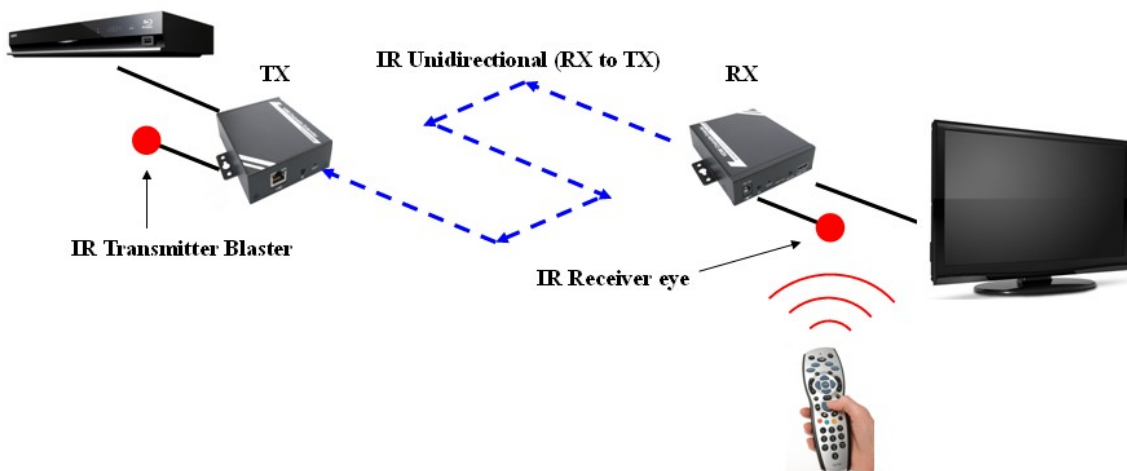

3.3 RS-232 Bypass function connection

- Connect the device, such as a PC, projector...etc, to the RS-232 port of the Transmitter or Receiver via a RS-232 to 3.5mm adapter
- Connect the controlling device to the RS-232 port of the Receiver or Receiver via a RS-232 to 3.5mm adapter

