



Metering PDU



Manual

DN-95601 • DN-95602

Safety Advice

- The device must be installed only by qualified personnel according to the following installation and operating instructions.
- The manufacturer does not accept responsibility in case of improper use of the device and particularly any use of equipment that may cause personal injury or material damage.
- The device contains no user-maintainable parts. All maintenance has to be performed by factory trained service personnel.
- Check if the power cord, the plug and the socket are in proper condition.
- The device can be connected only to 230V AC (50 or 60 Hz) sockets.
- Always connect the device to properly grounded power sockets.
- The device is intended for indoor use only. Do NOT install them in an area where excessive moisture or heat is present.
- Because of safety and approval issues it is not allowed to modify the device without our permission.
- Please note the safety advises and manuals of connected devices, too.
- The device is NOT a toy. It has to be used or stored out of range of children.
- Packaging material is NOT a toy. Plastics has to be stored out of range of children. Please recycle the packaging materials.
- In case of further questions, about installation, operation or usage of the device, which are not clear after reading the manual, please do not hesitate to ask our support team.

Description

The **DIGITUS® Metering PDU DN-95601** is a multiple socket outlet with CEE 7/4 sockets (DN-95601) or **IEC C13** sockets (DN-95602). It has a LCD display and can be connected to an Ethernet network. Integrated in the device is a Web server and a SNMP server to enable remote retrieval of measurement data. In response to an adjustable threshold syslog messages, emails and SNMP traps can be sent.

Features

- Measurement of current, voltage, phase angle, power factor, frequency, active power, apparent power and reactive power
- 2 power meter, a counter counts continuously, the other counter is resettable
- Backlit LCD Display
- Quick and easy Plug & Play installation
- Simple and flexible configuration via Web browser or Windows program
- Platform independent operation via web browser
- Syslog support
- SNMP support (SNMPv1, SNMPv2c)
- E-mail support (SMTP)
- Firmware update via Ethernet during operation
- Developed and manufactured in Germany

Hardware

Content of delivery

The delivery includes:

- **DIGITUS® Metering PDU DN-95601**
- Firmware and manual are available at www.assmann.com

Installation

1. Insert the plug of the AC power cord into an outlet. The device reboots and is ready after a few moments. The display and the status LED should be lit.
2. Connect your network to the Ethernet port of the **DIGITUS® Metering PDU DN-95601**.
3. Attach up to seven loads to the CEE 7/4 sockets (or IEC sockets for DN-95602) of the **DIGITUS® Metering PDU DN-95601**.

Usage and Display



Status LED

The status LED shows directly the state of the device:

- Red: The device is not connected to the Ethernet.
- Orange: The device is connected to the Ethernet, TCP/IP settings are not defined.
- Green: Your device is connected to the Ethernet, TCP/IP settings are assigned.
- regularly flashing: The device is in bootloader mode.

Display views

By pressing the "**select**" button various informations and statistics are available on the display. Each time you press the button a new page is shown on the LCD display:

227V	0.0A	0W
		0.000kWh

This is the usual energy view. On the top line is printed voltage, current and power. The bottom line shows the consumed energy (unit kWh). After 10 seconds of waiting time every other page will resume to this view.

7:48:59	
h:m:s	0.000kWh

This page shows in the bottom line the power meter and on the top line the period of time over the power was measured. The values are stored in an EEPROM every 5 minutes and therefore preserved during a power outage.

VRMS	
	225.3V
IRMS	0.000A

Here, voltage and current are shown.

Active	0W
Reactive	0VAR

Active power and reactive power are shown.

Apparent	0VA
Phase	-83.5deg

The measured values of apparent power and the phase angle of the power.

Freq	50.02Hz
Powerfact	-0.3

The power frequency (50Hz in the German electricity grid) and the power factor.

DIGITUS
Metering PDU
192.168.1.123

This page provides information on the product name and the assigned IP address.

Firmware 1.0.0
MAC:001932003f09

The firmware version number and used the MAC ethernet address.

Configuration


DHCP

After turning on, the unit looks for a DHCP server on the Ethernet and requests an available IP address. Check in the settings of the DHCP server which IP address was assigned, and if necessary set, that the same IP address will be used each time. To disable DHCP, you can use the software `GBL_Conf.exe` or adjust the configuration via the web interface.

Network settings with GBL Conf

For changing the network properties manually, the program `GBL_Conf.exe` is required. This tool is available for free on our website www.assmann.com.

Furthermore `GBL_Conf.exe` enables you to install firmware updates and to reset to factory settings. Activate boot-loader mode and run `GBL_Conf.exe`. The program will look automatically for connected devices and will display their network configuration.




If the displayed IP address accords with the factory settings (192.168.0.2), there is either no DHCP server available in the network or no free IP address could be allocated.

Enter a free IP address and the according netmask in the entry mask, then save these changes by clicking on *Program Device* -> *SaveConfig*.

Restart the firmware, so that the changes will take effect. Now click on *Search* in order to have the new network configuration displayed.


Configuration via webinterface

Enter the IP address of the device into the address line of your internet browser:
http://"IP address of unit"/
and press LOGIN.



To enter the configuration menu, click on „Configuration“ Tab.

Configuration - IP Address



Hostname

Enter the hostname of the device. The hostname is used to connect with the DHCP server.

Illegal symbols in the hostname may prevent network access.

For the changes to get valid a restart of the firmware is required.

IP Address

Here you can change the IP address.

For the changes to get valid a restart of the firmware is required.

Netmask

Here you can change the netmask.

For the changes to get valid a restart of the firmware is required.

Gateway

Here you can change the standard gateway.


For the changes to get valid a restart of the firmware is required.

Use DHCP

Here you can set, if the unit shall get its TCP/IP settings directly from your DHCP server. Then the device requests an IP-Adress, Netmask and a standard Gateway from this server. If there is no DHCP server inside of your network, we recommend to deactivate this function.

For the changes to get valid a restart of the firmware is required.

Configuration - IP ACL



IP Access Control List (IP ACL) acts as an IP filter. Wether it is active hosts and subnets only can contact the unit, if their IP addresses are stated in this IP ACL.

e.g.: „*http://192.168.0.1*“ or „*http://192.168.0.1/24*“

If you locked yourself out by mistake, please activate the bootloader mode, start *Gbl_Conf.exe* and deactivate IP ACL.


Here you can set, if the device shall react on pings.

Enable IP Filter

Here you can activate the IP Access Control List (IP ACL).

If IP ACL is active, DHCP and SNMP only work, if all necessary servers and clients are registered in this list.

Configuration - HTTP



HTTP Port

Here you can enter the HTTP port number, if necessary. Possible numbers are 1 ... 65534 (standard: 80). To get access, you have to enter the port number after the IP address of the device, e.g.:
http://192.168.0.2:1720

For the changes to get valid a restart of the firmware is required.

Require HTTP Password

Password protected access can be activated here. In this case, a user and an admin password have to be defined. Passwords have a maximum lengths of 15 characters.
Administrators are authorized to modify the settings. The username of the admin is *"admin"*.

Users are authorized to login, but are not allowed to modify the settings. The username of the user is *"user"*.

If you have forgotten your password, activate the bootloader mode, start GBL-Conf.exe and deactivate the password request.


For the changes to get valid a restart of the firmware is required.

Check Password on start page

If activated, the user has to enter his password, before logging in to the webinterface.

Configuration - Sensors

5



Generate Messages

Here you can configure if and at which Min-/Max-values the device shall send alerts via SNMP-Traps, Syslog or Email.

Peak measurement period

Here, you can enter the time over which the peak values of the sensors shall be displayed: 30 minutes up to 24 hours.

Hysteresis

Here you can specify a threshold that is reached after crossing a threshold in order to signal that falls below the threshold.

example:

Limit 10 ° C
Action: Output alarm
threshold 1

If the value of 11 ° C is reached, the alarm is reset. Without the threshold would be for small fluctuations of 0.1 ° C respectively, a new alarm is issued, or initiate a command.

Limit 10 °
Action: trigger alarm
threshold 0

Temperature 10 ° C.
Alarm is triggered.

Temperature 10.1 ° C
Alarm is reset

9.9 ° C temperature alarm is triggered

etc.

Configuration - SNMP



SNMP

To get detailed status information of the device SNMP can be used. SNMP communicates via UDP (port 161):
Supported SNMP commands:

- SNMPGET: request status information
- SNMPGETNEXT: request the next status information
- SNMPSET: request change of status

You will need a Network Management System, e.g. HP-Open View, OpenNMS, Nagios etc., or the command line tools of NET-SNMP to request information via SNMP.

SNMP-communities

SNMP authenticates requests by so called communities.

The public community has to be added to SNMP-read-requests and the private community to SNMP write requests. You can see the SNMP communities like read/write passwords. SNMP v1 and v2 transmit the communities without encryption. Therefore it is simple to spy out these communities. We recommend to use a DMZ or IP ACL.

MIB

All information, that can be requested or changed, the so called „Managed Objects“, are described in „Management Information Bases“ (MIBs).

There are three MIBs, which can be requested from the unit:

„system“, „interface“

„system“ and „interface“ are standardized MIBs (MIB-II).

At least, there are so called Object Identifiers (OID) subordinated to those three structures. An OID describes the location of an information inside a MIB.

SNMP-traps

SNMP-Traps are system messages, sent via SNMP-protocol to different clients. On following events a SNMP-Trap will be dispatched:

- Min/Max-Alerts from the sensors

Enable SNMP-get

Here you can activate SNMP-get protocol.

Community public

Here you can enter the SNMP public community.

Enable SNMP-set

Here you can activate SNMP-set protocol of <%PRODUCT NAME%>.

Use SNMP only if your network is fitted for.


Community private

Here you can enter the SNMP private community.

Download SNMP MIB

Here you can download the MIB.

Configuration - Syslog

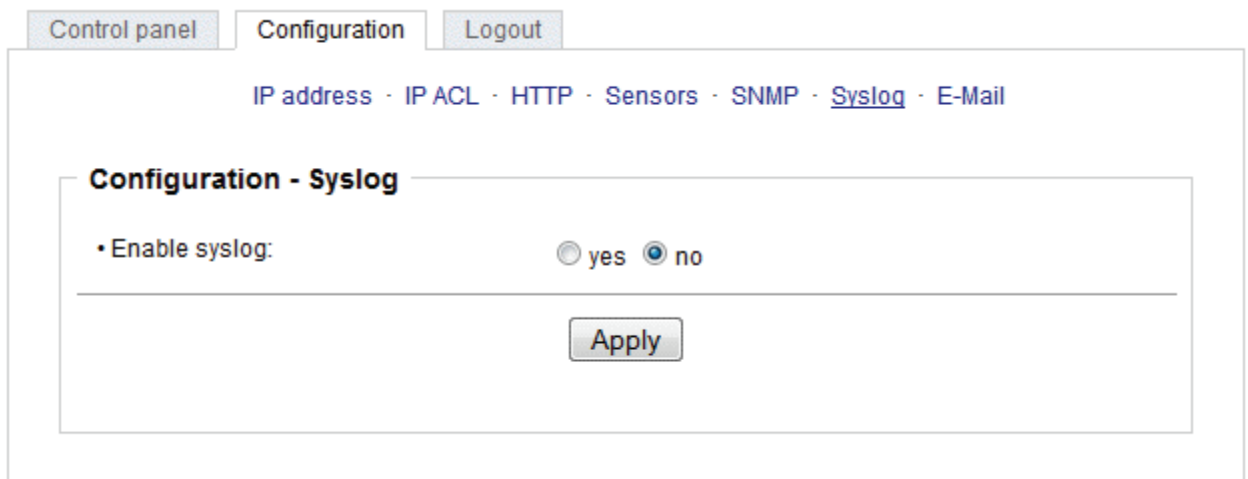

The screenshot shows a web interface with three tabs: 'Control panel', 'Configuration', and 'Logout'. The 'Configuration' tab is active. Below the tabs, there is a navigation menu with links: 'IP address', 'IP ACL', 'HTTP', 'Sensors', 'SNMP', 'Syslog', and 'E-Mail'. The 'Syslog' link is highlighted. The main content area is titled 'Configuration - Syslog' and contains a single configuration item: '• Enable syslog:'. To the right of this text are two radio buttons: 'yes' (unselected) and 'no' (selected). Below the radio buttons is a horizontal line, and at the bottom center of the form is an 'Apply' button.

Syslog messages are simple text messages transmitted to a syslog server using UDP. Linux OS regularly have a syslog daemon installed, e.g. syslog-ng. For Windows there are some freeware tools available.

On following events a syslog message will be send:

- Booting up
- Activation/deactivation of syslog
- sensor alarm

Enable Syslog

Here you can activate Syslog.

Syslog Server IP

If syslog is active enter here the IP address of you Syslog server.

Syslog Port

If syslog is active enter here the port number, that your Syslog server uses to receive syslog information.

Configuration - E-Mail

Control panel Configuration Logout

IP address · IP ACL · HTTP · Sensors · SNMP · Syslog · [E-Mail](#)

Configuration - E-Mail

• Enable E-Mail: yes no

Apply

Enable E-Mail

Here you can activate the e-mail function of the device.

E-Mail server

Enter the e-mail server, e.g. mail@gmx.net

Sender address

Enter the address, the device should use, when sending e-mails.

Recipient address

Enter the e-mail address of the recipient.

Enable Authentification

If your e-mail server needs an authentication, you can enter it here.

Username

Enter the username, the device should use to log on your e-mail server.

Set new password

If your server needs a password for sending e-mails, you can enter it here.

Repeat password

Repeat the password, to enable it.

Features

Bootloader mode

To activate the boot loader mode, hold the "select" button down and plug the unit into a power grid. To ensure that the device is in bootloader mode, you can see in the GBL_Conf.exe program window the word "BOOT LDR" after the device's name, and the device status LED is slow the blinking. In bootloader mode you can disable the password and IP ACL, it is possible to use the program GBL_Conf.exe to perform a firmware update and factory settings can be restored. To exit the boot loader mode again, restart the device without pressing the button. Alternatively, you can leave the boot loader mode by selecting the GBL_Conf menu Device -> Enter firmware.

Firmware update

In order to update the firmware the program GBL_Conf.exe and the latest firmware are needed.

Start the device in bootloader mode and run the program GBL_Conf.exe. On the left side of the program window all DIGITUS® devices that are in the network are listed. Select the device, that should be updated, click on Program Device Firmware Update and determine the location of the new firmware. Please note: The up-to-date firmware and GBL_Conf.exe can be found at www.assmann.com, free to download.

Technical information

Connections:	1 x CEE 7/4 Plug, 230 VAC, max. 16A 1 x Ethernet jack (RJ45) Power outlets
	• 7x CEE 7/4, max. 16A (DN-95601) • 8x IEC C13, max. 10A (DN-95602)
Network:	10/100 MBit/s 10baseT Ethernet
Protocols:	TCP/IP, HTTP, SNMP v1 and v2c, SNMP traps, Syslog
Operating temperature:	0°C-50°C (non-condensing)
Dimensions:	19" / 1 rack unit 482,6mm x 44,5mm x 44,5mm (L x H x W)
Total weight:	~1.5 kg

Factory settings

In order to restore the default settings the device must be started in bootloader mode. Besides that the program *GBL_Conf.exe* is required. Run *GBL_Conf.exe* and select the device whose settings should be restored. Then click on *Program Device -> Reset to Fab default*. Please notice that all current settings will be deleted. The default settings will be loaded when the firmware of the device is restarted the next time.

Support

In case of further questions, about installation or operation of the device, please have look at www.assmann.com or do not hesitate to contact our support (support@assmann.com).

Contact

Assmann Electronic GmbH
Auf dem Schüffel 3
58513 Lüdenscheid
Germany

fon: +49-2351-554 0
fax: +49-2351-554 0
E-Mail: info@assmann.com
Internet: www.assmann.com

Registration Court: Iserlohn
Registration number: HRB-Nr. 4043
WEEE-number: DE 71839861
Sales Tax Identification Number:
DE 811193993

Declarations of conformity

CE Declaration of Conformity

The manufacturer

Assmann Electronic GmbH

Address: Auf dem Schüffel 3, 58513 Lüdenscheid (Deutschland)
Phone: +49 (0)2351 – 554 0
Fax: +49 (0)221 – 554 0
Web: www.assmann.com
Mail: info@assmann.com

Hereby declares that the following products

Product name

DIGITUS[®] Metering PDU DN-95601
DIGITUS[®] Metering PDU DN-95602

Telecontrol System

are in accordance with the following european directives

Reference no. Title

89/336/EWG / 89/336/EEC	Electromagnetic Compatibility
2006/95/EWG / 2006/95/EEC	Low Voltage Electrical Equipment
93/68/EWG / 93/68/EEC	CE marking

And comply with the following European standards.

Standard	Title
EN 55022:2006 + A1, A2	Information technology equipment: Radio disturbance characteristics - Limits and methods of measurement
EN 55024:1998 + A1, A2	Information technology equipment: Immunity characteristics - Limits and methods of measurement
EN 61000-3-2:2006	Electromagnetic compatibility Part 3-2: Limits – Limits for harmonic current emissions
EN 60950-1:2006	Safety for Industrial Control Equipment
