




Discover the simple Network Installation with CAT 6a Keystone Jacks from DIGITUS®

DN-93602

1

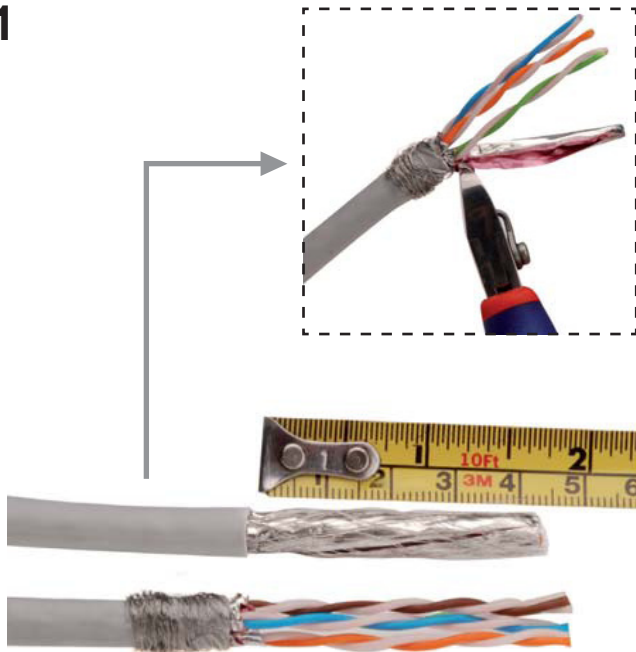

Strip approximately 4cm of the cable jacket.

2



Follow the color code to place the wires into the cap slots. Keep the pairs twisted as possible and cut off the surplus wires.

Puchdown Sequences:

T568A

Pin 5 White / Blue
Pin 4 Blue
Pin 1 White / Green
Pin 2 Green
Pin 3 White / Orange
Pin 6 Orange
Pin 7 White / Brown
Pin 8 Brown

T568B

Pin 5 White / Blue
Pin 4 Blue
Pin 1 White / Orange
Pin 2 Orange
Pin 3 White / Green
Pin 6 Green
Pin 7 White / Brown
Pin 8 Brown

3




Put the cap into Keystone Jack according to the color code.

4



Lock the side caps of the Keystone Jack

5

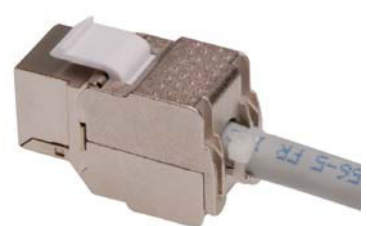

Fix the Keystone Jack with a cable tie.