



## Virtual Reality (VR) Glasses



**Manual**  
87000

## The 3 Steps of Installation:



1. Install devices
2. Test before use
3. Enjoy the ednet VR Glasses

## Package Content:

- Virtual Reality (VR) Glasses x 1
- Cleaning cloth x 1
- Anti-scratch pad x 3
- QIG (quick installation guide)

## Install Devices:

- A. Place your smart phone align the center of the screen in the midpoint of the product

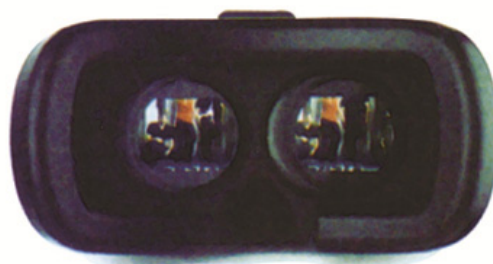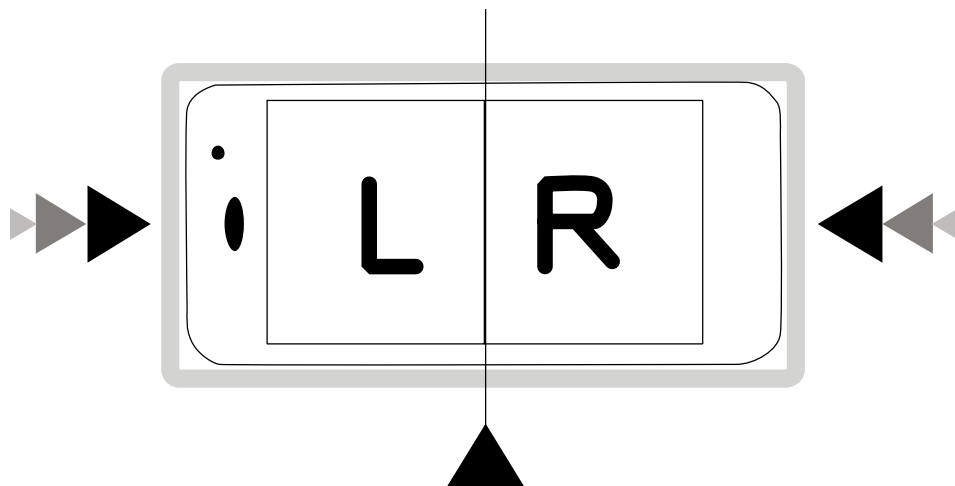

- B. Test the device before use
- C. To have the best performance, adjust pupillary distance to make your pupils align to the glass centre




- D. Adjust focal distance on the top until the device performs the best
- E. The front panel is removable, after removing the front panel, camera of smart phone is exposed.



## Note:

Some Apps **maybe** require to calibrate your smartphone before using the application. Therefore please scan the QR code below to calibrate your smartphone:

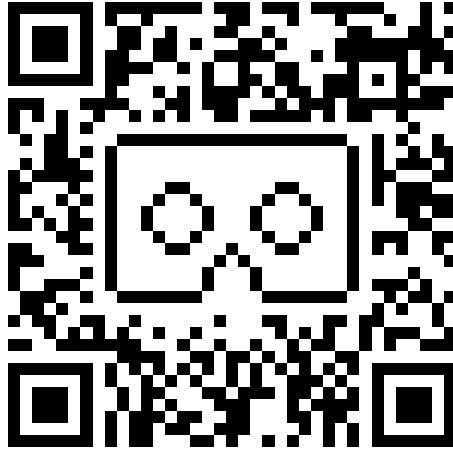

## Remarks:

1. Smart phone's size should not exceed 163mmx83mm
2. There are 3 pieces of rubber pad. Please stick the rubber pads onto the phone holder according to the position of the phone buttons, and please refer to the pictures below.
3. Please do not use the mobile phone while charging
4. Focal length 70-75mm
5. Adjustable range between 65-75mm
6. Interpupillary distance between 58-72mm

Hereby ASSMANN Electronic GmbH, declares that this device is in compliance with the requirements of Directive 2011/65/EU for RoHS compliance. The complete declaration of conformity can be requested by post under the below mentioned manufacturer address.

**www.assmann.com**  
Assmann Electronic GmbH  
Auf dem Schüffel 3  
58513 Lüdenscheid  
Germany

